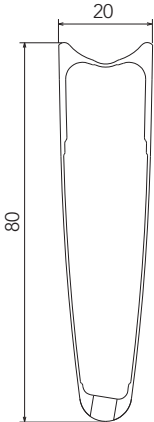


BORA ULTRA 80

TUBULAR

BORA ULTRA 80

TUBULAR

RIM		
	FRONT RIM REAR RIM VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER BRAKE SHOES	WH-101BO80 (bright) - WH-101BO80DK (dark) WH-102BO80 (bright) - WH-102BO80DK (dark) 6,5 mm UT-WH160M (male extension) - UT-WH160F (female extension) WH-BUU002 (5 pcs.) 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT SPOKE REAR RH SPOKE REAR LH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT80 WH-018BOT80 WH-019BOT80 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

**WARNING!**

Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.

A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.


HUBS

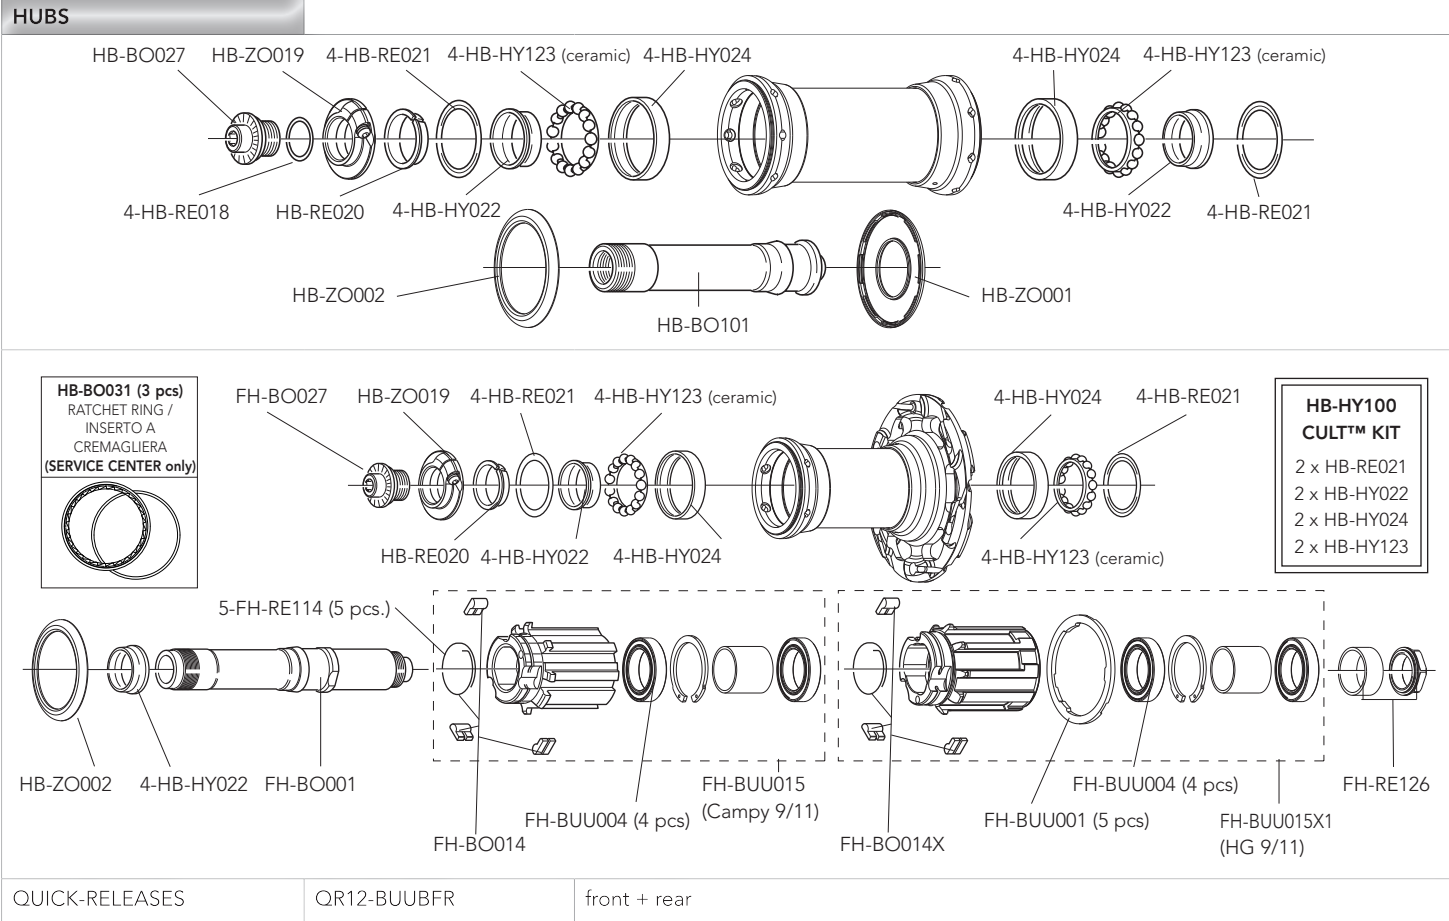

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)

**HB-HY100
CULT™ KIT**
2 x HB-RE021
2 x HB-HY022
2 x HB-HY024
2 x HB-HY123

QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

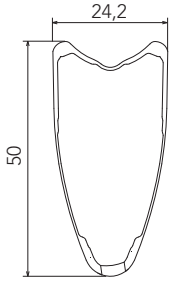
RIM		
	FRONT RIM REAR RIM VALVE HOLE VALVE HOLE BUSHING VALVE EXTENSION DIAMETER BRAKE SHOES	WH-101BO50 (bright) / WH-101BO50DK (dark) WH-102BO50 (bright) / WH-102BO50DK (dark) 6,5 mm WH-BUU002 (5 pcs.) UT-HU150 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT50 WH-019BOT50 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

⚠ WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

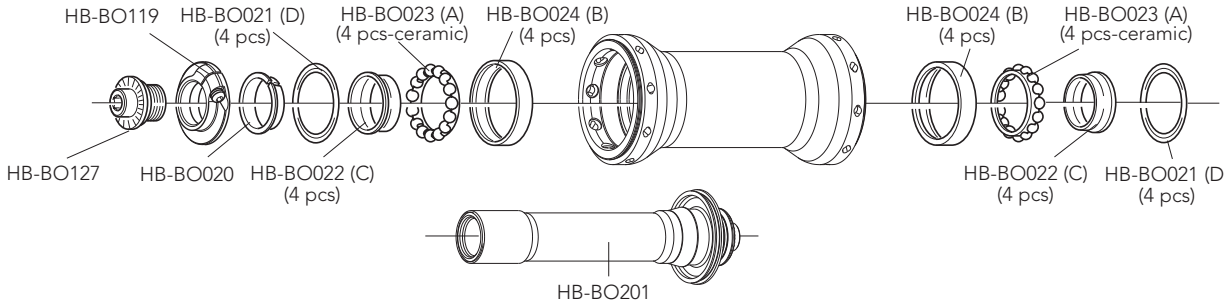

**HB-BO100
CULT™ KIT
front**
2 x A, 2 x B,
2 x C, 2 x D

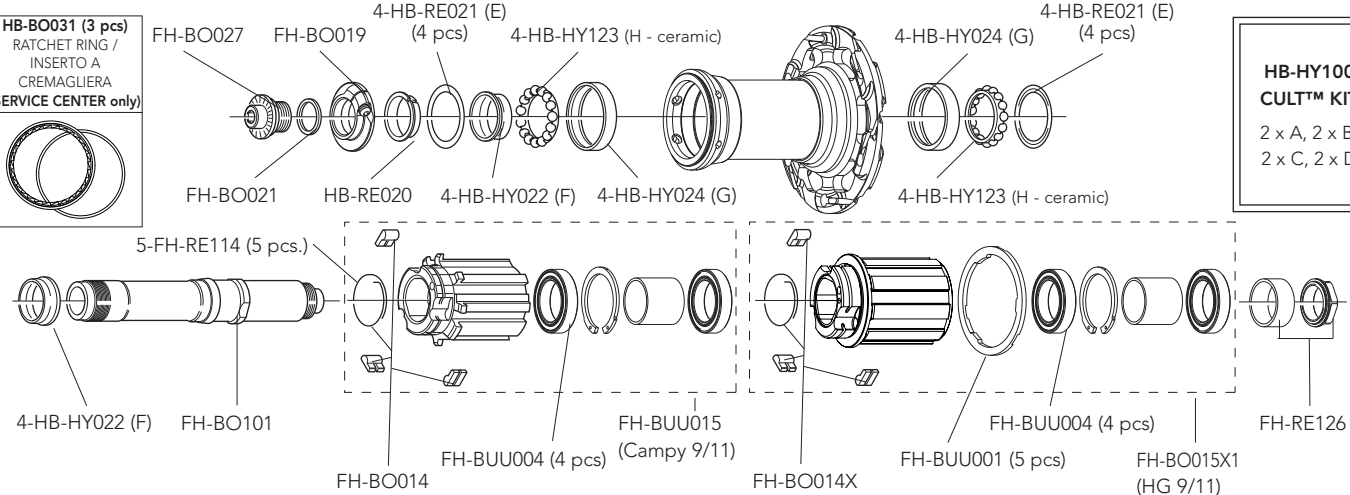

**HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)**

**HB-HY100
CULT™ KIT**
2 x A, 2 x B,
2 x C, 2 x D

QUICK-RELEASES

QR12-BUUBFR


front + rear

WHEELS

WHEELS

68

69

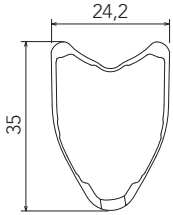RIM		
	FRONT RIM REAR RIM VALVE HOLE VALVE HOLE BUSHING DIAMETER BRAKE SHOES	WH-201BO35 (bright) - WH-201BO35DK (dark) WH-202BO35 (bright) - WH-202BO35DK (dark) 6,5 mm WH-BUU002 (5 pcs.) 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)


SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-019BOT35 WH-018BOT35 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

**WARNING!**


Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

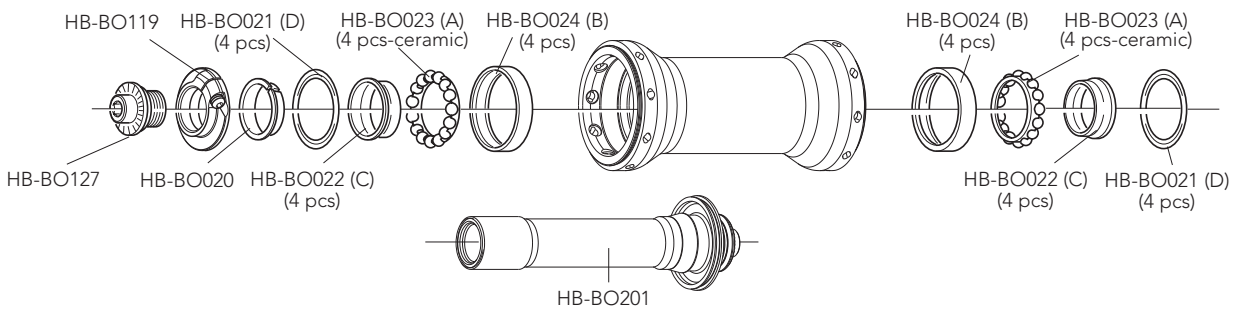

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



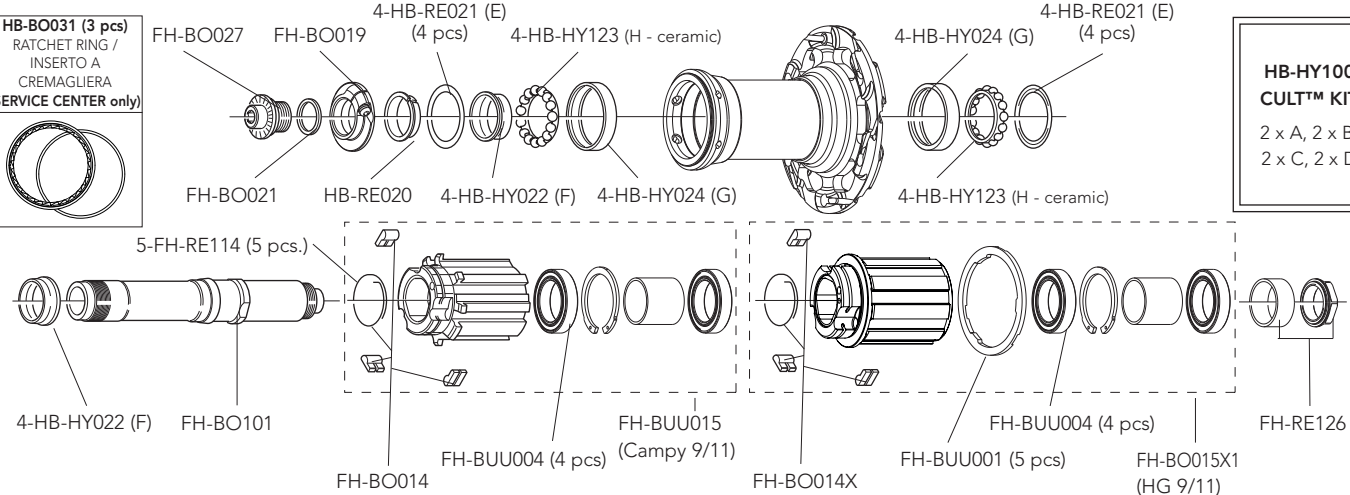

QUICK-RELEASES


QR12-BUUBFR

front + rear

HB-HY100 CULT™ KIT
2 x A, 2 x B,
2 x C, 2 x D

WHEELS

71



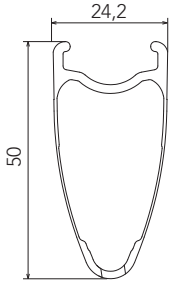
RIM		
	FRONT RIM	WH-103BO50 (bright) / WH-103BO50DK (dark)
	REAR RIM	WH-104BO50 (bright) / WH-104BO50DK (dark)
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.)
	VALVE EXTENSION	UT-HU150
	DIAMETER	700C (622 x 17C)
	BRAKE SHOES	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE	WH-016BOT50	4 spokes + 4 nipples
REAR RH SPOKE	WH-019BOT50	4 spokes + 4 nipples
NIPPLES	WH-015BO80	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

⚠ WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

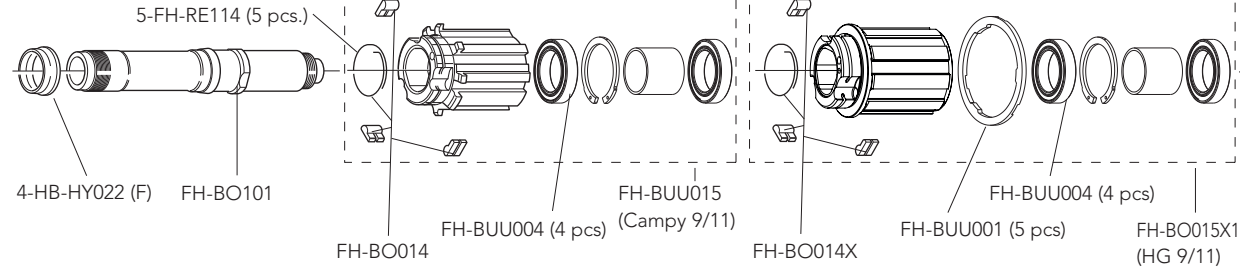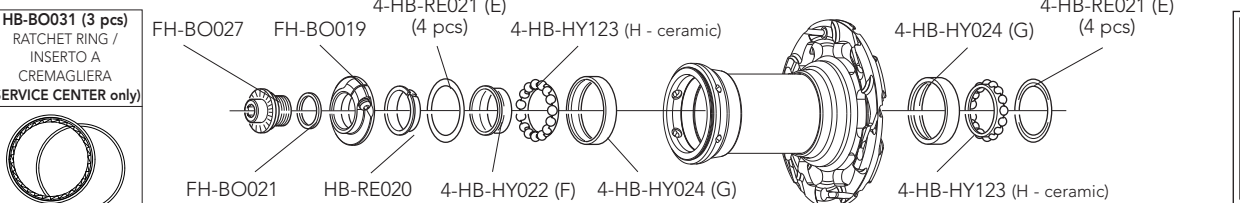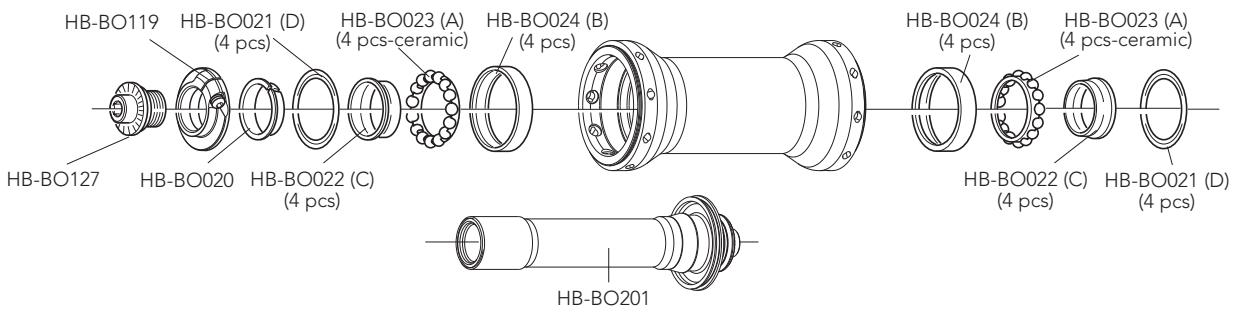

QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

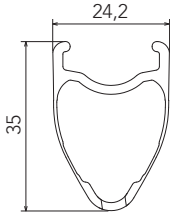
RIM		
	FRONT RIM REAR RIM VALVE HOLE VALVE HOLE BUSHING DIAMETER BRAKE SHOES	WH-103BO35 (bright) - WH-103BO35DK (dark) WH-104BO35 (bright) - WH-104BO35DK (dark) 6,5 mm WH-BUU002 (5 pcs.) 700C (622 x 17C) for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)


SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-019BOT35 WH-018BOT35 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

⚠ WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

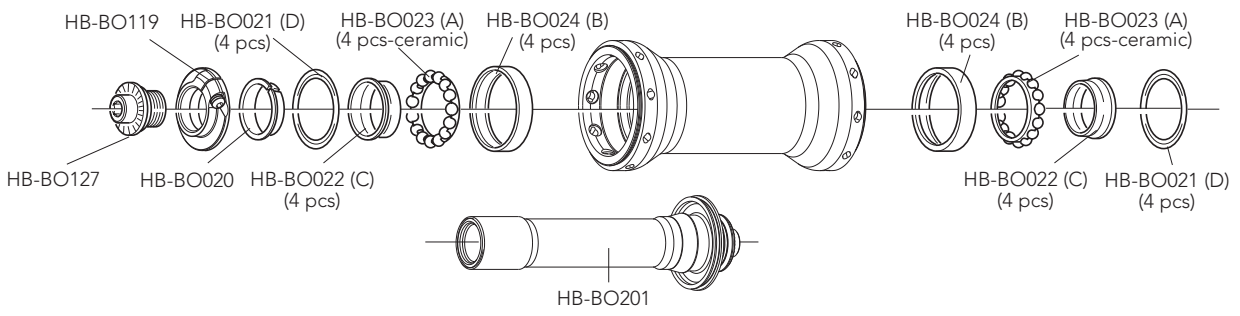

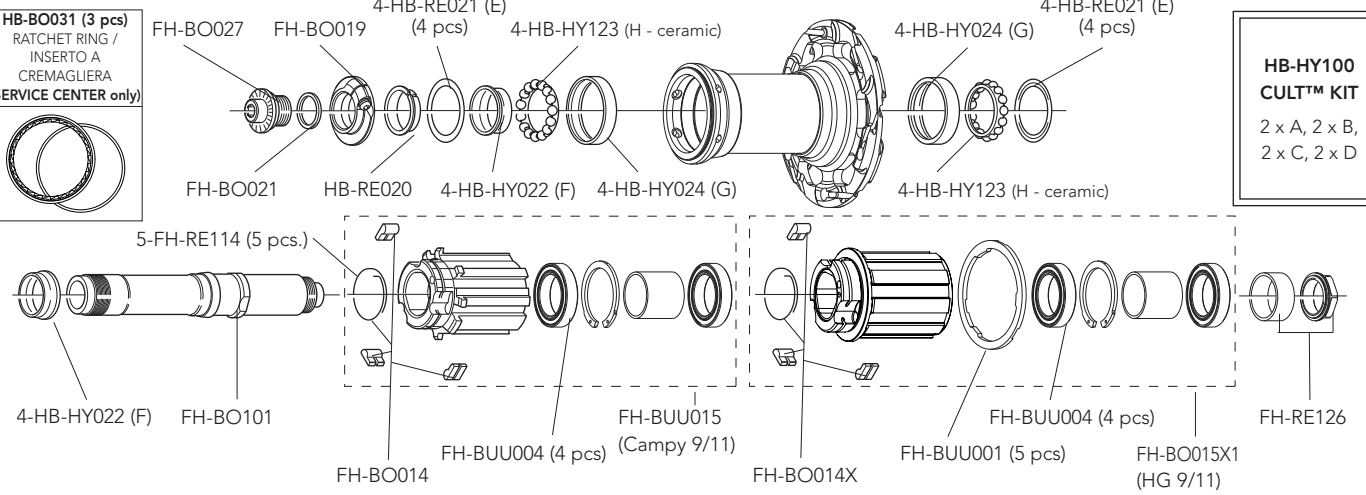

QUICK-RELEASES

QR12-BUUBFR


front + rear

WHEELS

WHEELS

74


75

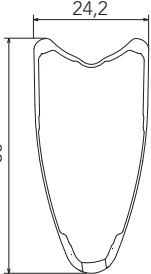RIM		
	VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER BRAKE SHOES	6,5 mm UT-HU150 WH-BUU002 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)
SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT50 WH-019BOT50 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches
ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)


**WARNING!**

Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

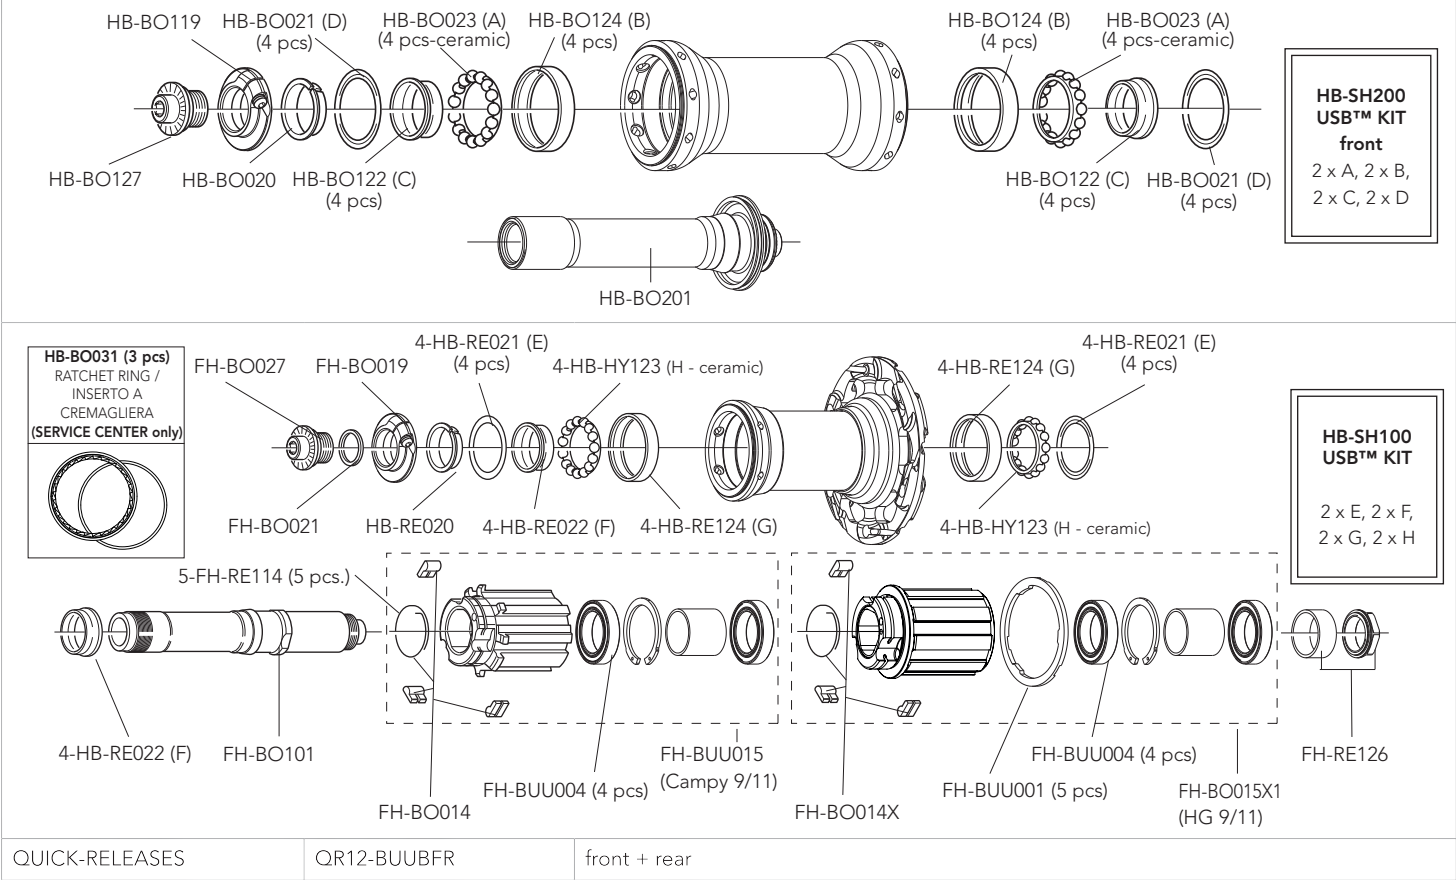

WHEELS

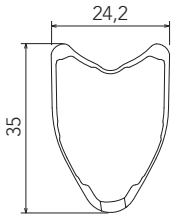RIM		
	VALVE HOLE VALVE HOLE BUSHING DIAMETER BRAKE SHOES	6,5 mm WH-BUU002 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)



SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-019BOT35 WH-018BOT35 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

**WARNING!**

Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

WHEELS

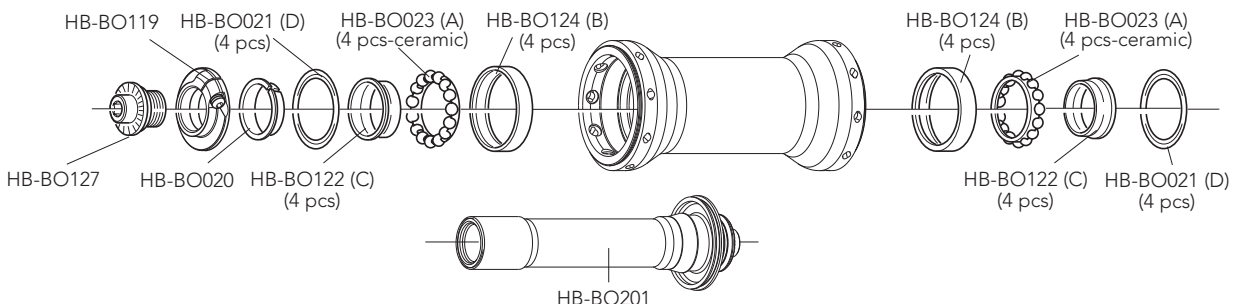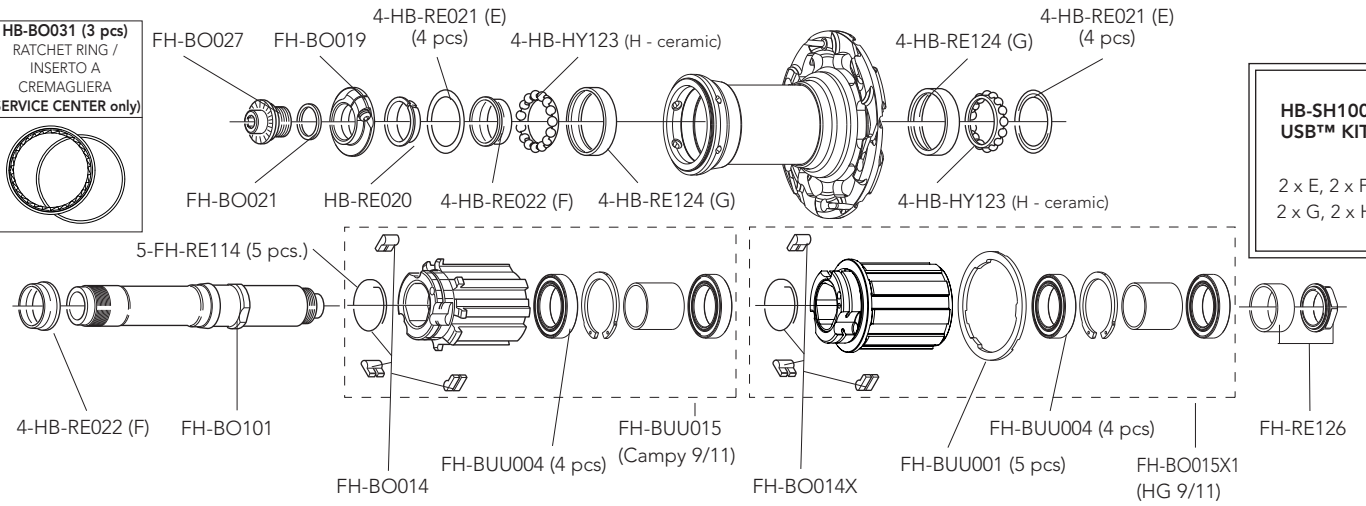HUBS		
		HB-SH200 USB™ KIT front 2 x A, 2 x B, 2 x C, 2 x D
		HB-SH100 USB™ KIT 2 x E, 2 x F, 2 x G, 2 x H
QUICK-RELEASES	QR12-BUUBFR	front + rear

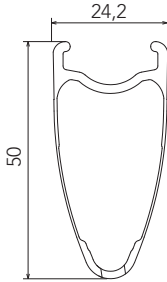RIM		
	VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER BRAKE SHOES	6,5 mm UT-HU150 WH-BUU002 700C (622 x 17C) for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)
SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT50 WH-019BOT50 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches
ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

**WARNING!**


Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

HB-SH200 USB™ KIT front
2 x A, 2 x B,
2 x C, 2 x D

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



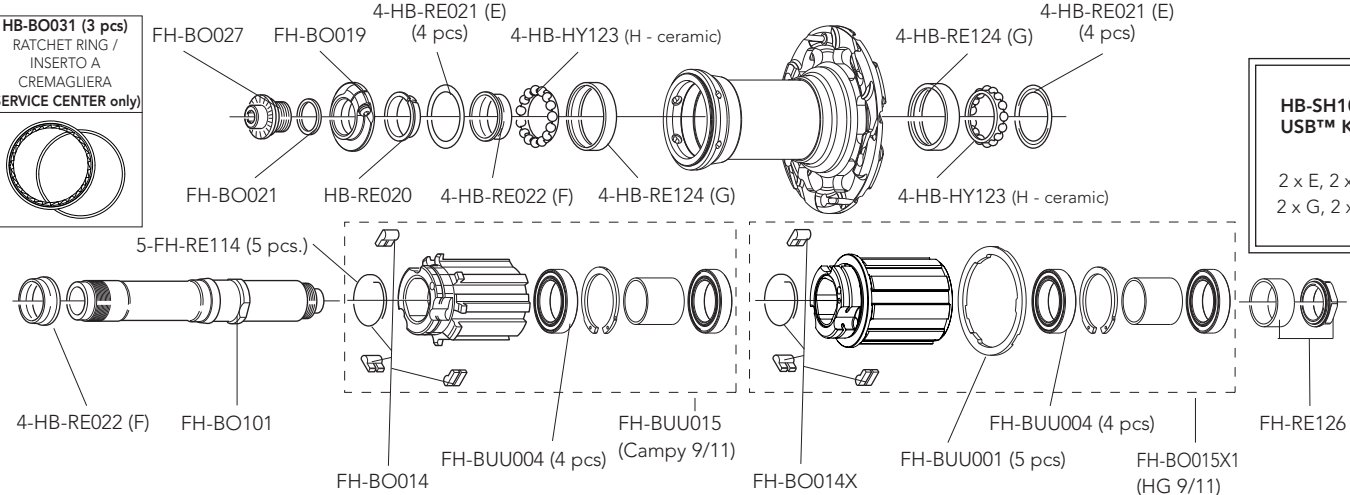

HB-SH100 USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H


QUICK-RELEASES

QR12-BUUBFR

front + rear

80

81

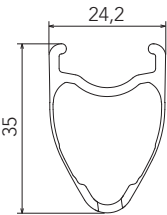
RIM		
	VALVE HOLE VALVE HOLE BUSHING DIAMETER BRAKE SHOES	6,5 mm WH-BUU002 700C (622 x 17C) for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-019BOT35 WH-018BOT35 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

! WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.


HUBS

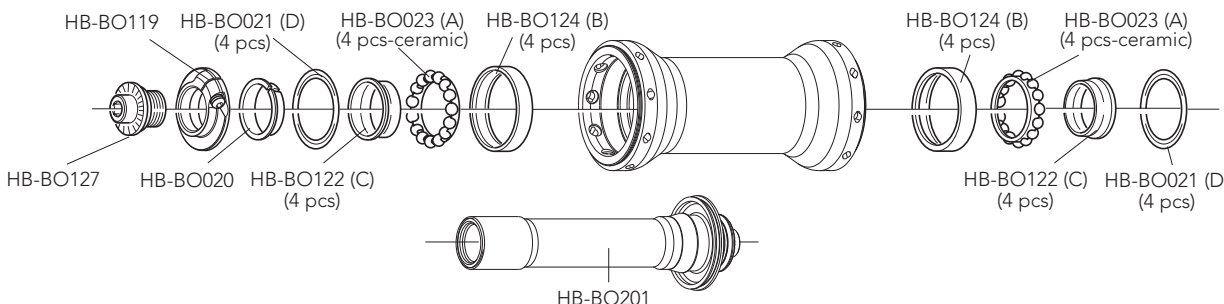


HB-SH200
USB™ KIT
front
2 x A, 2 x B,
2 x C, 2 x D

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



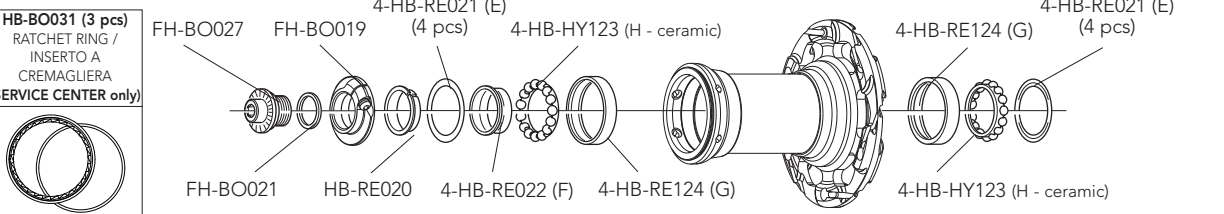

HB-SH100
USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H

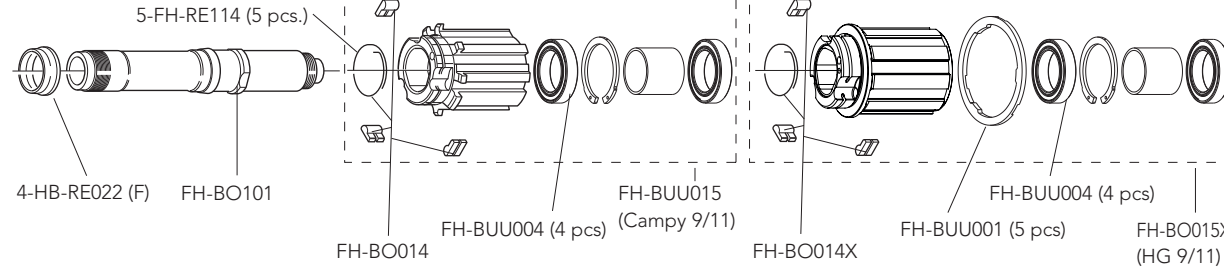

QUICK-RELEASES

QR12-BUUBFR


front + rear

BULLET ULTRA H50

CLINCHER



BULLET ULTRA H50

CULT BEARINGS

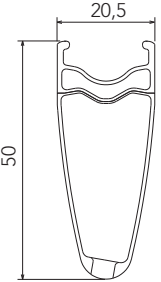RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER	WH-003BUU (no labels) WH-004BUU (no labels) LAB-BUU12 (front+rear) - LAB-BUU12DK (front+rear DARK) 6,5 mm UT-WH130M (male extension) - UT-WH130F (female extension) WH-BUU002 (5 pcs.) 700C (622 x 15C)

SPOKES		
COMPLETE FRONT KIT COMPLETE REAR KIT MINI-KIT NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-03BUU KIT-04BUU KIT-500BUU WH-015BUU UT-WH160 UT-WH050 UT-WH090	18 front spokes + 18 nipples 14 rear right spokes + 7 rear left spokes + 21 nipples 2 front spokes + 2 rear right spokes + 2 rear left spokes + 6 nipples red - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

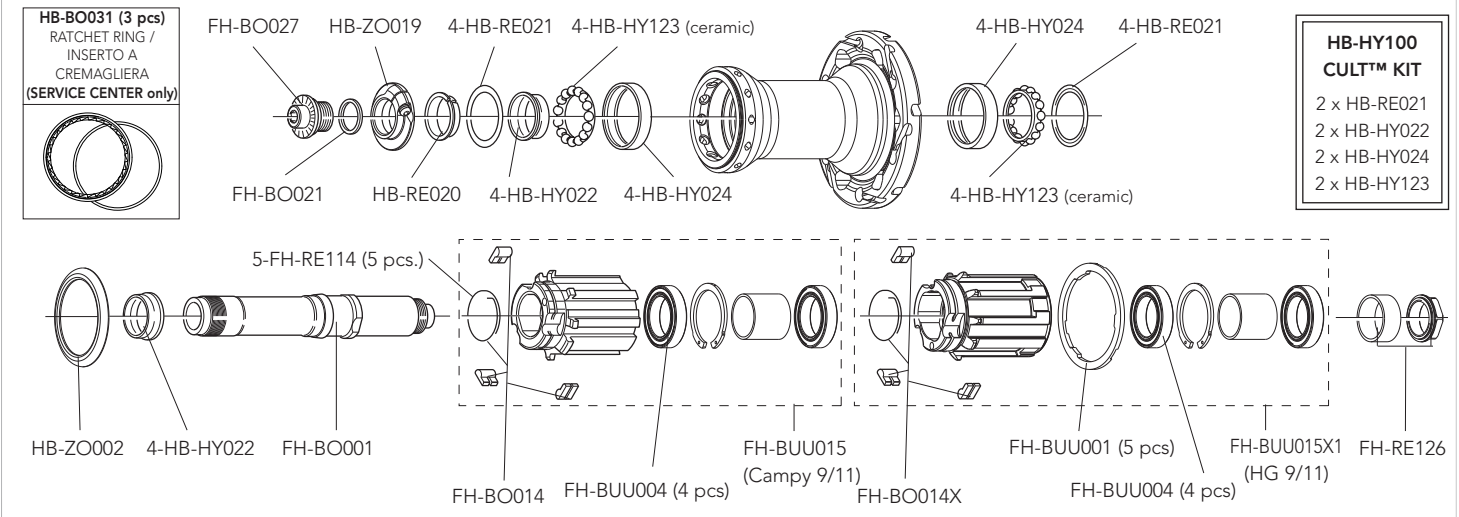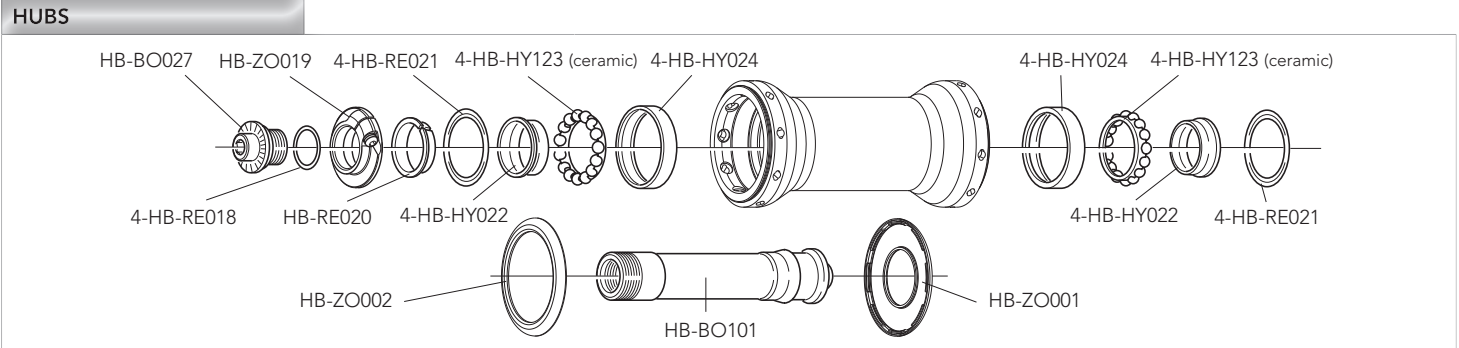


QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

BULLET H50

CLINCHER




BULLET H50

STANDARD BEARINGS

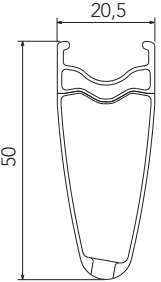RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER	WH-003BUU (no labels) WH-004BUU (no labels) LAB-BU12 (front+rear) 6,5 mm UT-WH130M (male extension) - UT-WH130F (female extension) WH-BUU002 (5 pcs.) 700C (622 x 15C)

SPOKES		
COMPLETE FRONT KIT COMPLETE REAR KIT MINI-KIT NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-03BU KIT-04BU KIT-500BU WH-015BU UT-WH160 UT-WH050 UT-WH090	18 front spokes + 18 nipples 14 right rear spokes + 7 rear left spokes + 21 nipples 2 front spokes + 2 right rear spokes + 2 rear left spokes + 6 nipples 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

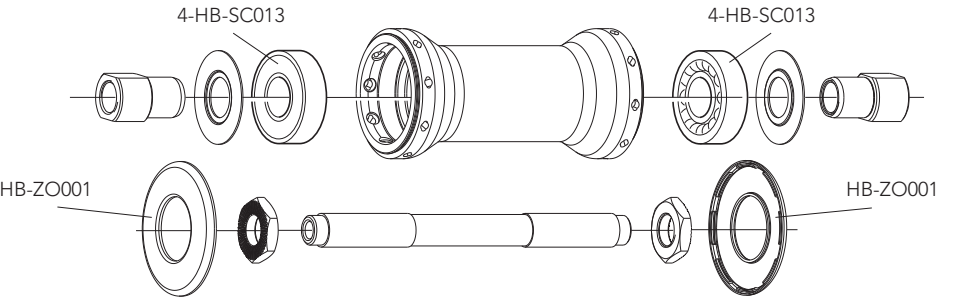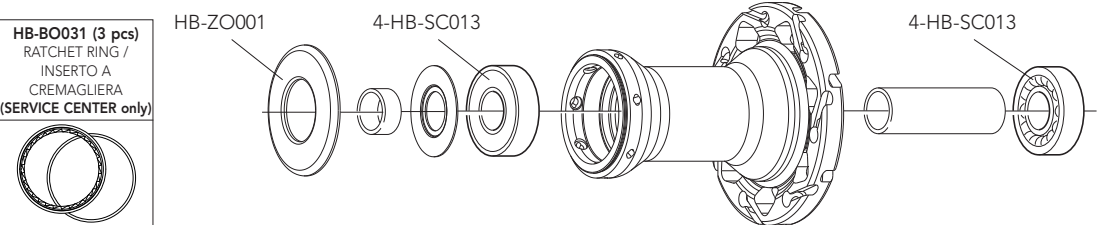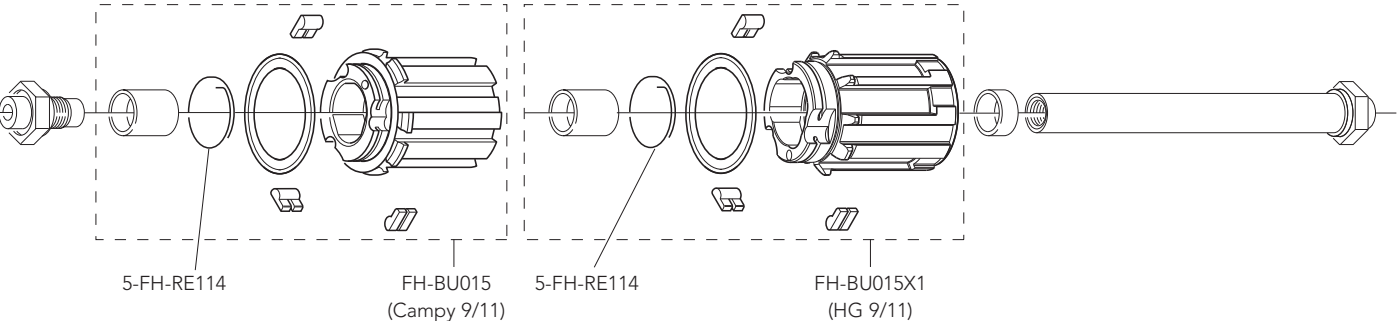
HUBS		
		
		
		
QUICK-RELEASES	QR12-ZOBFR	front + rear

SHAMAL MILLE

CLINCHER

SHAMAL MILLE


CLINCHER

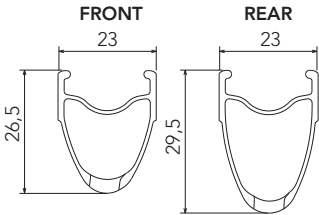RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER BRAKE SHOES	WH-103SHM (no labels) WH-104SHM (no labels) LAB-SHMC17 (front+rear) 6,5 mm 622 X 17C for rims with Plasma Electrolytic Oxydation treatment: BR-PEO5001 (for brakes with retention spring fixing) - BR-PEO500X1 (for brakes with screw fixing)


SPOKES		
FRONT KIT REAR KIT COMPLETE FRONT SPOKE COMPLETE REAR RIGHT SPOKE COMPLETE REAR LEFT SPOKE NIPPLES SPOKE RING NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-03SHM KIT-24SHB WH-105SHM WH-008SHM WH-007SHM WH-015SHM UT-WH010 UT-WH020 UT-WH080 UT-WH270	16 front/rear right spokes 14 front/rear right spokes + 7 rear left spokes spoke + nipple spoke + nipple spoke + nipple 10 pieces anti-rotation spokes magnet-attractor for nipple nipple-guide spoke wrench (SERVICE CENTER Only)

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)


HUBS

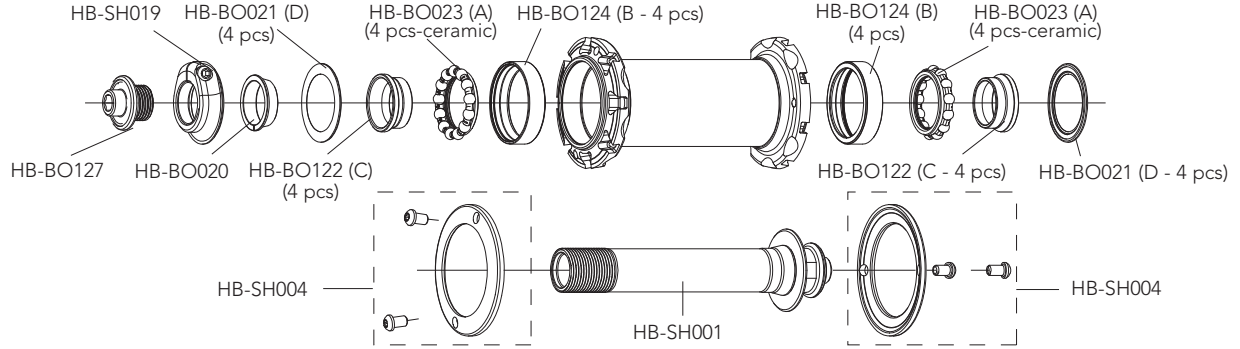

HB-SH200 USB™ KIT front
2 x A, 2 x B,
2 x C, 2 x D

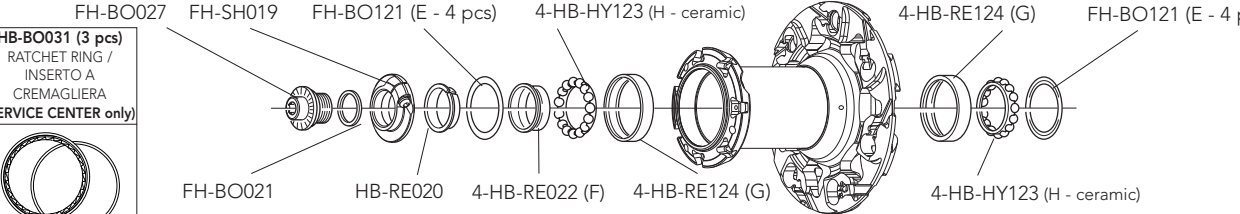

HB-SH100 USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H

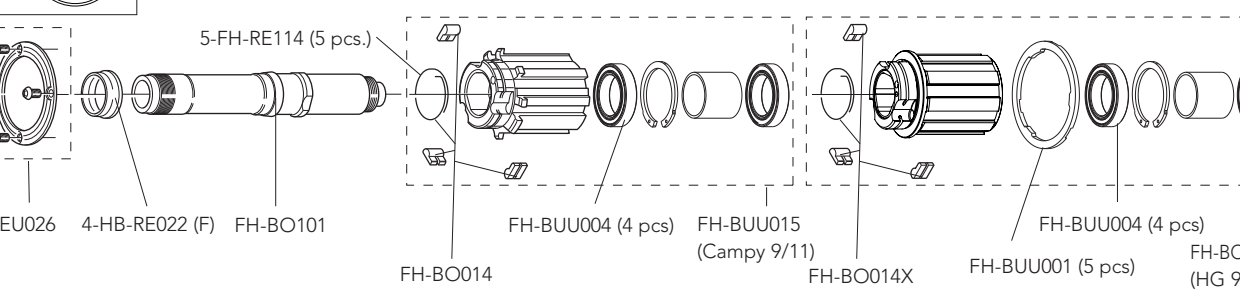

QUICK-RELEASES

QR13-80FR


front + posteriore

SHAMAL ULTRA

C17 2-WAY FIT

SHAMAL ULTRA


C17 2-WAY FIT

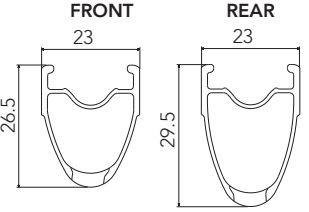RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE 2-WAY FIT™ VALVE VALVE HOLE BUSHING DIAMETER	WH-313SHB (with labels) WH-314SHB (with labels) LAB-SH2B17 (front+rear) 7,5 mm WH-SH101 5-WH-SH002 (for valve seat reduction - 5 pieces) 634 mm


SPOKES		
FRONT KIT REAR KIT COMPLETE FRONT SPOKE COMPLETE REAR LEFT SPOKE COMPLETE REAR RIGHT SPOKE NIPPLES SPOKE RING NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-23SHB KIT-34SHB WH-205SHB WH-207SHB WH-208SHB WH-115SH UT-WH010 UT-WH020 UT-WH080 UT-WH070	16 front/rear right spokes 14 front/rear right spokes + 7 rear left spokes spoke + nipple spoke + nipple spoke + nipple 10 pieces anti-rotation spokes magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)


HUBS

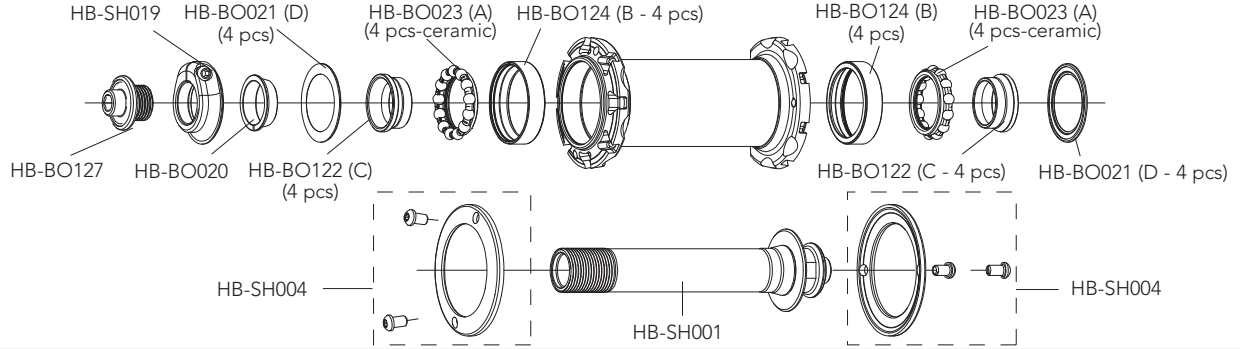

HB-SH200 USB™ KIT front
2 x A, 2 x B,
2 x C, 2 x D

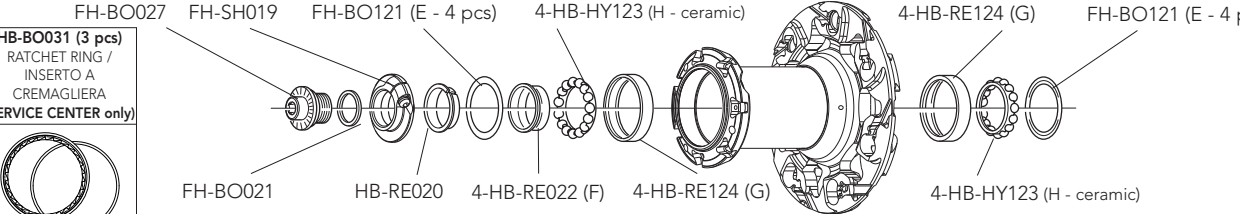

HB-SH100 USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H

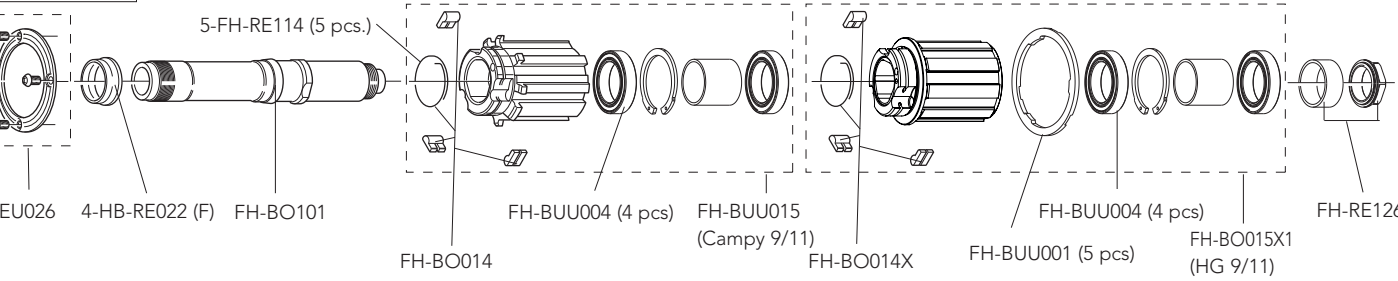

QUICK-RELEASES

QR13-80FR


front + posteriore

SHAMAL ULTRA

C17 CLINCHER




SHAMAL ULTRA


C17 CLINCHER

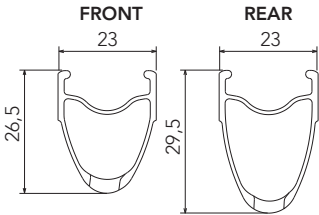RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER	WH-403SHB (with labels) WH-404SHB (with labels) LAB-SHCB17 6,5 mm 622 X 17C

SPOKES		
FRONT KIT REAR KIT COMPLETE FRONT COMPLETE REAR LEFT SPOKE COMPLETE REAR RIGHT SPOKE NIPPLES SPOKE RING NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-23SHB KIT-34SHB WH-205SHB WH-207SHB WH-208SHB WH-115SH UT-WH010 UT-WH020 UT-WH080 UT-WH070	16 front/rear right spokes 14 front/rear right spokes + 7 rear left spokes spoke + nipple spoke + nipple spoke + nipple 10 pieces anti-rotation spokes magnet-attractor for nipple nipple-guide spoke wrenches




ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

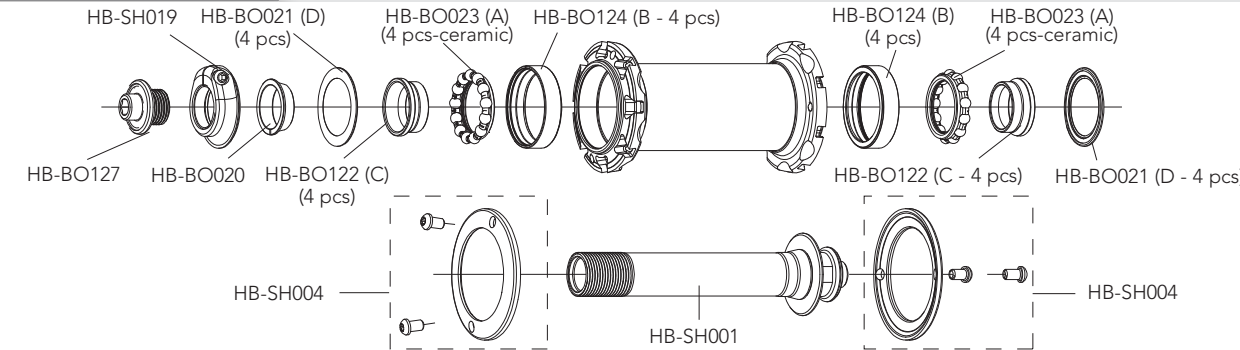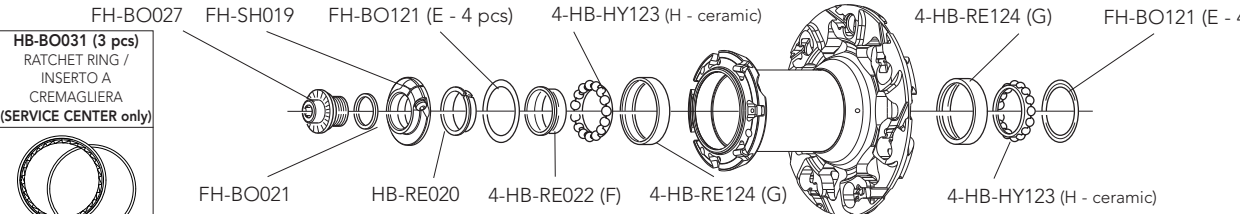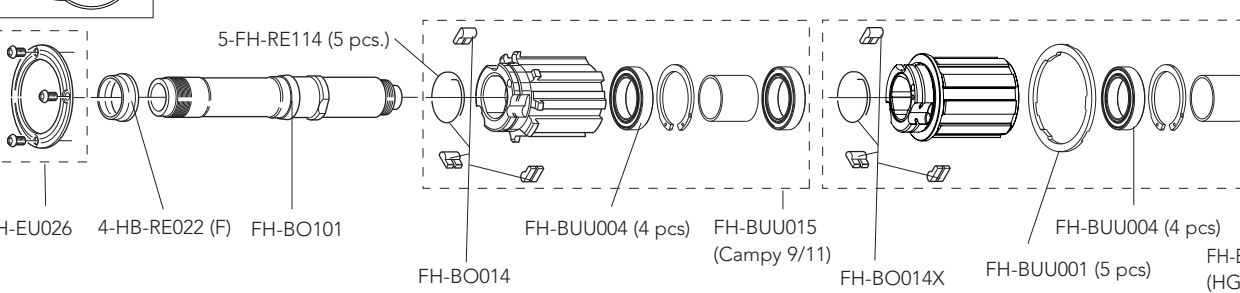
HUBS		
	HB-SH200 USB™ KIT front 2 x A, 2 x B, 2 x C, 2 x D	
	HB-SH100 USB™ KIT 2 x E, 2 x F, 2 x G, 2 x H	
		
QUICK-RELEASES	QR13-80FR	front + posteriore

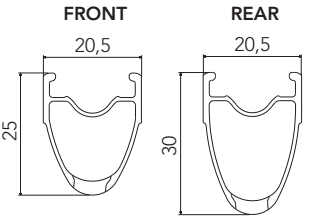RIM		
	FRONT RIM	WH-213SHB (no labels)
	REAR RIM	WH-214SHB (no labels)
	LABEL KIT	LAB-EU2B12 (for a pair of front+rear wheels)
	VALVE HOLE	6,5 mm
	2-WAY FIT™ VALVE	WH-SH001
	VALVE HOLE BUSHING	5-WH-SH002 (for valve seat reduction - 5 pieces)
	DIAMETER	634 mm

SPOKES		
FRONT KIT	KIT-13SHB	16 front/rear right spokes
REAR KIT	KIT-24SHB	14 front/rear right spokes + 7 rear left spokes
COMPLETE FRONT/REAR RIGHT SPOKE	WH-105SHB	spoke + nipple
COMPLETE REAR LEFT SPOKE	WH-107SHB	spoke + nipple
NIPPLES	10-WH-015SH	10 pieces
SPOKE RING	UT-WH010	anti-rotation spokes
NIPPLE INSERT	UT-WH020	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH080	nipple-guide
SPOKE SPANNER	UT-WH070	spoke wrenches




ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

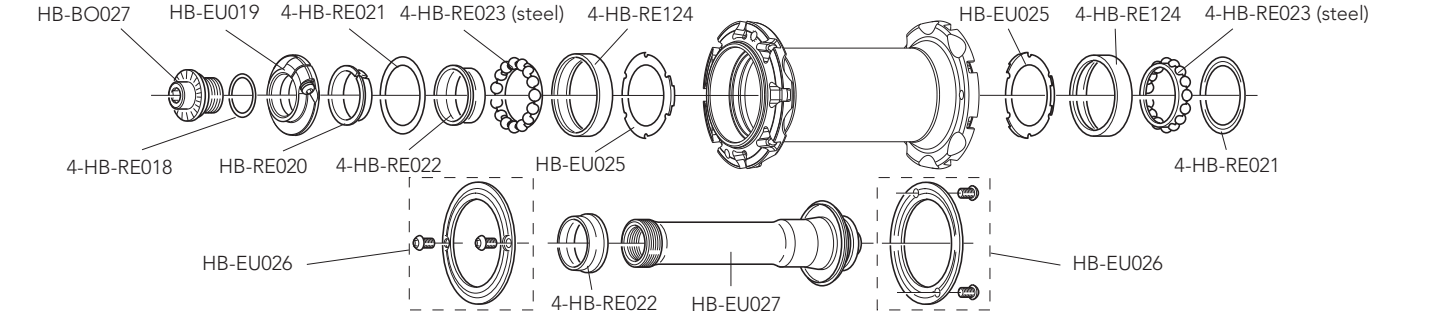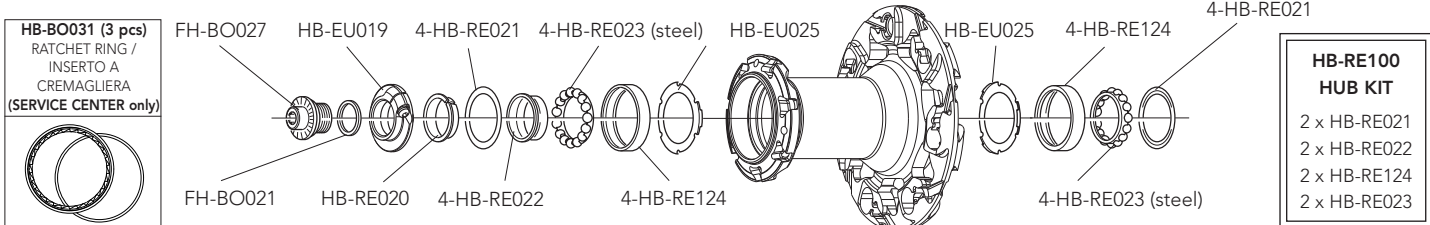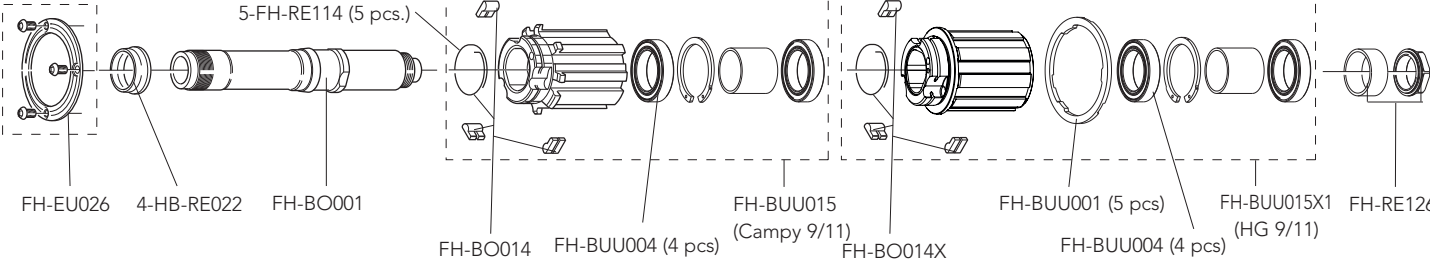HUBS		
		
		
		
QUICK-RELEASES	QR11-20FRB	front + rear

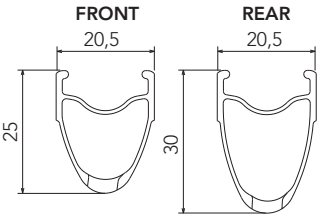
RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER	WH-303SHB (no labels) WH-304SHB (no labels) LAB-EUCB12 (for a pair of front+rear wheels) 6,5 mm 622 X 15C

SPOKES		
FRONT KIT REAR KIT COMPLETE FRONT/REAR RIGHT SPOKE COMPLETE REAR LEFT SPOKE NIPPLES SPOKE RING NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-13SHB KIT-24SHB WH-105SHB WH-107SHB 10-WH-015SH UT-WH010 UT-WH020 UT-WH080 UT-WH070	16 front/rear right spokes 14 front/rear right spokes + 7 rear left spokes spoke + nipple spoke + nipple 10 pieces anti-rotation spokes magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

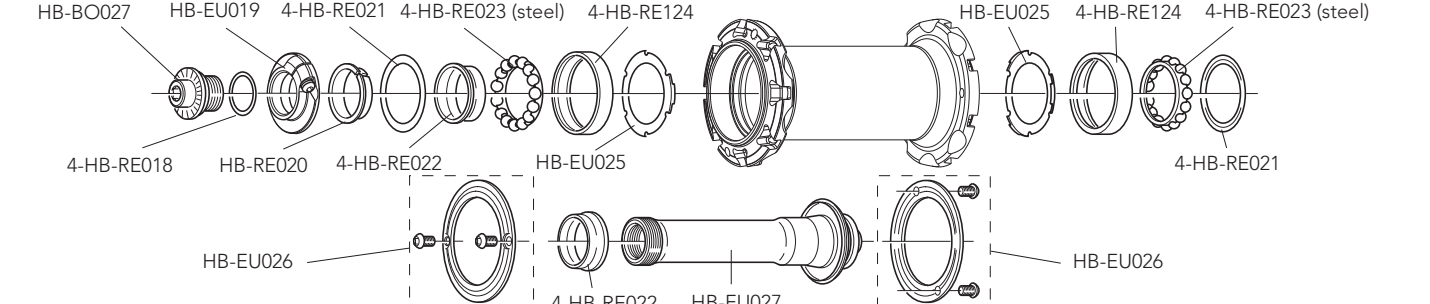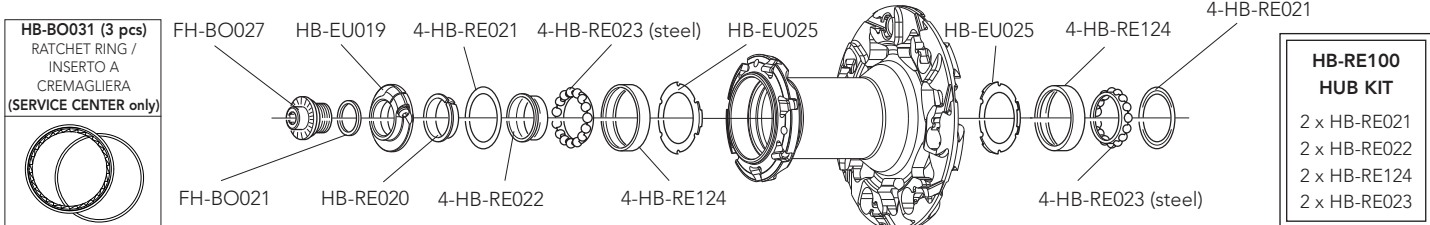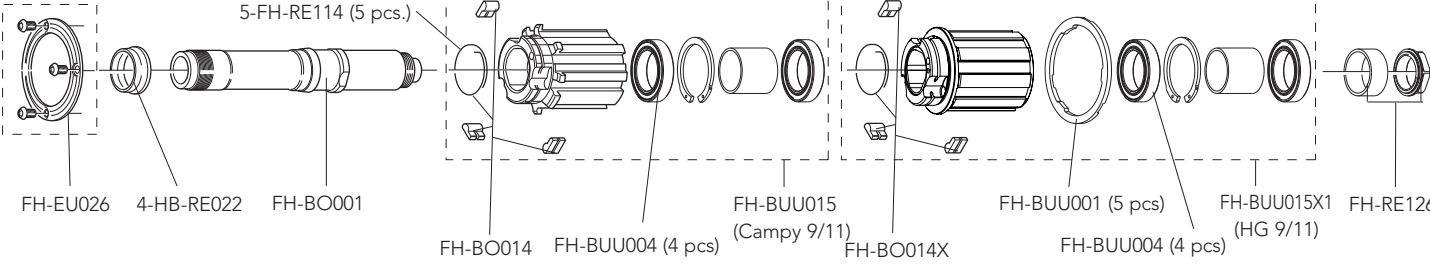HUBS		
		
		
		
QUICK-RELEASES	QR11-20FRB	front + rear

RIM

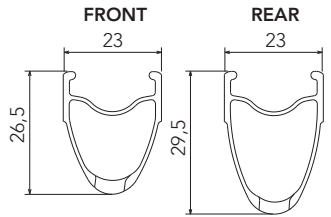

FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER	WH-403ZOB (with labels) WH-504ZOB (with labels) LAB-ZOCB17 (for a pair of front+rear wheels) 6,5 mm 622 X 17C
--	---

SPOKES

FRONT SPOKE REAR RH SPOKE REAR LH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET	WH-116ZOC WH-118ZOC WH-119ZOC WH-115ZO UT-WH035 UT-WH050	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples 50 pieces magnet-attractor for nipple nipple-guide
--	---	--

ACCESSORIES


Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
-------------------------	-----------	--

HUBS

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



**HB-RE100
HUB KIT**
2 x HB-RE021
2 x HB-RE022
2 x HB-RE124
2 x HB-RE023

QUICK-RELEASES
QR12-ZOBFR
front + rear

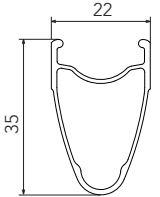RIM		
	RIM-TAPE LABEL KIT VALVE HOLE DIAMETER	WH-RT003 (2 pieces) LAB-SCCB18 (for a pair of front+rear wheels) 6,5 mm 622 x 17C

SPOKES		
FRONT SPOKE REAR RH SPOKE REAR LH SPOKE	WH-016SCC WH-018SCC WH-019SCC	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

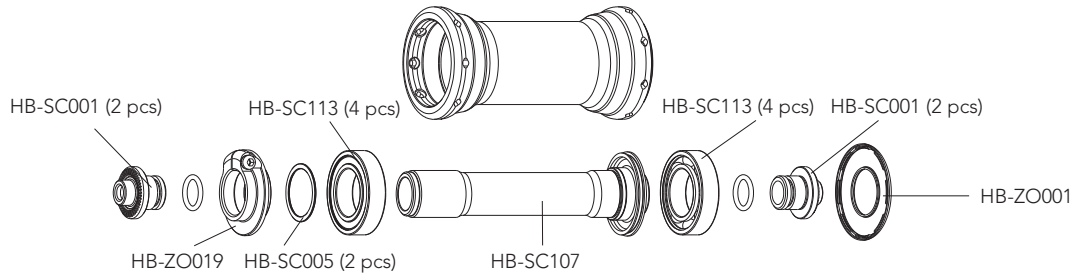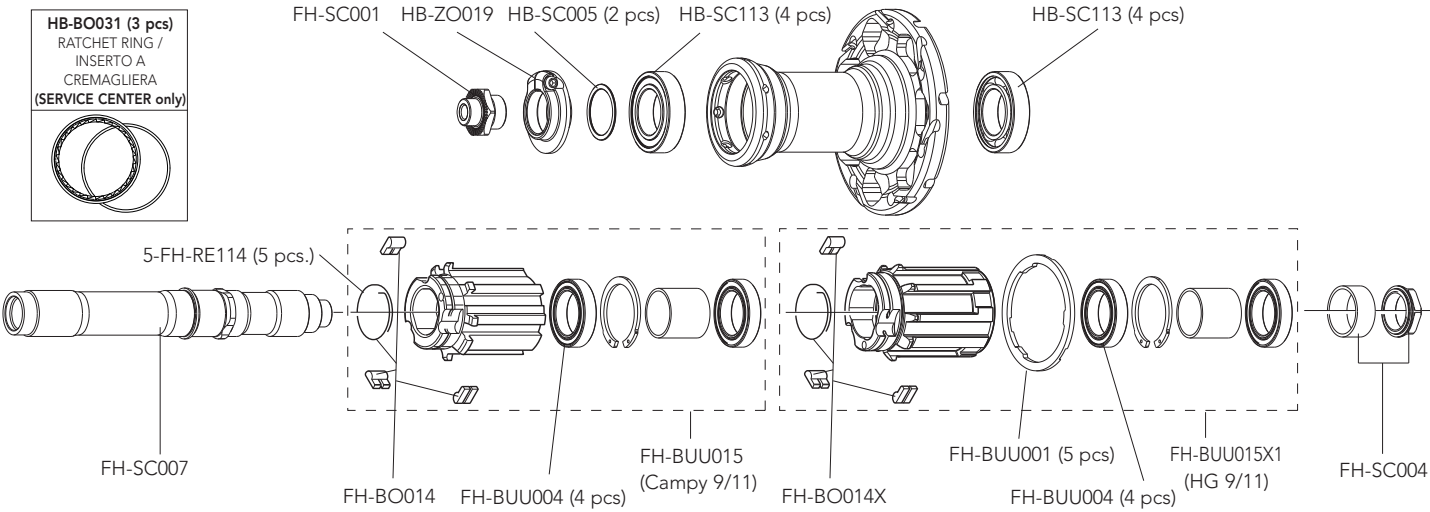
HUBS		
		
		
QUICK-RELEASES	QR12-ZOBFR	front + rear

KHAMSIN ASYMMETRIC G3

CLINCHER



KHAMSIN ASYMMETRIC G3

CLINCHER

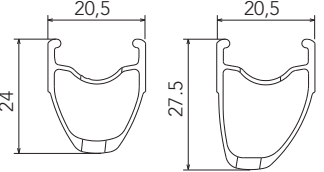
RIM		
	RIM-TAPE LABEL KIT VALVE HOLE DIAMETER	2-WH-RT12 (18 mm - 2 pieces) LAB-KHCB14G3 (BLACK - front+rear) 6,5 mm 700C (622 x 15C)

SPOKES		
FRONT SPOKE REAR RH SPOKE REAR LH SPOKE	WH-016KHC WH-018KHC WH-119KHC	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets <i>(please note that every HG11 rear wheel/FW body package contains the spacer)</i>

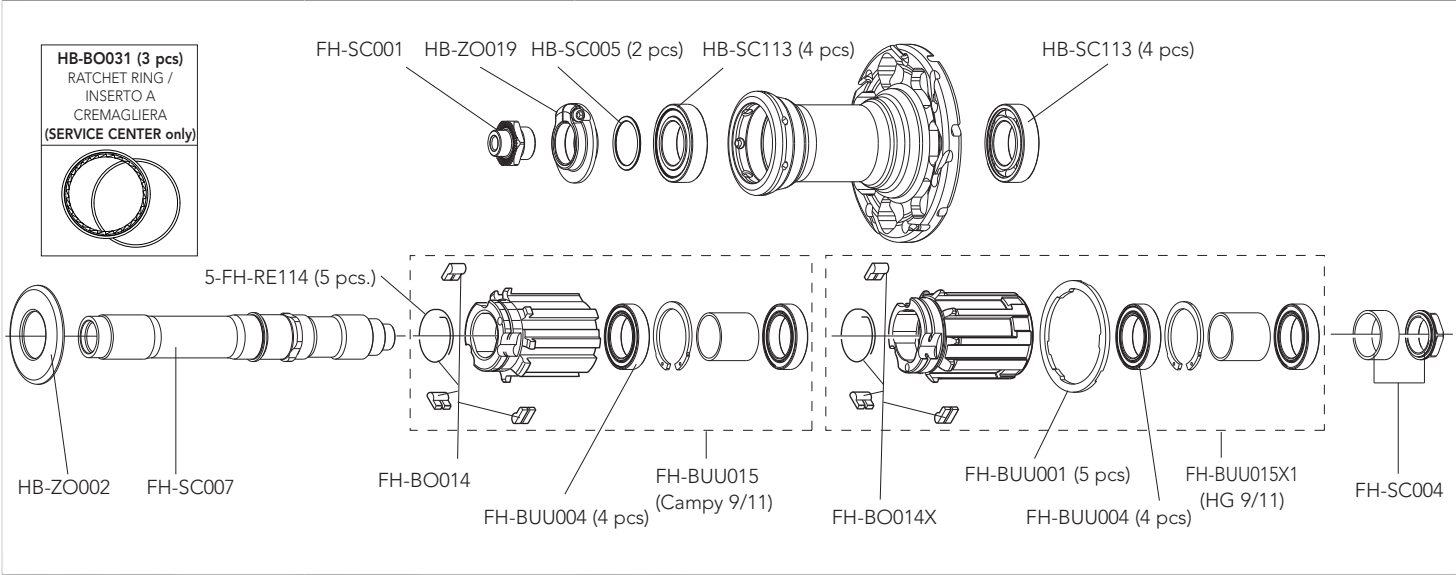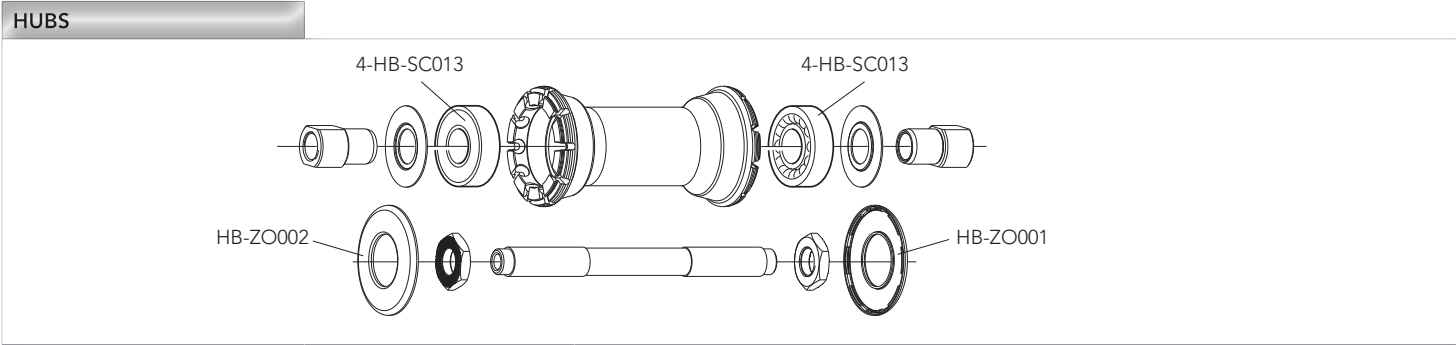


QUICK-RELEASES	QR8-40BFR	front + rear
----------------	-----------	--------------

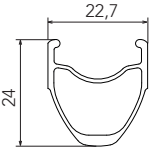RIM		
	RIM-TAPE LABEL KIT VALVE HOLE DIAMETER	WH-RT003 (20.-5 mm - 2 pieces) LAB-CAC18 (BLACK - front+rear) 6,5 mm 622 x 17C

SPOKES		
FRONT SPOKE REAR RH SPOKE REAR LH SPOKE NIPPLES	WH-016CAC WH-018CAC WH-019CAC 50-WH-NZO	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples 50 pcs

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)

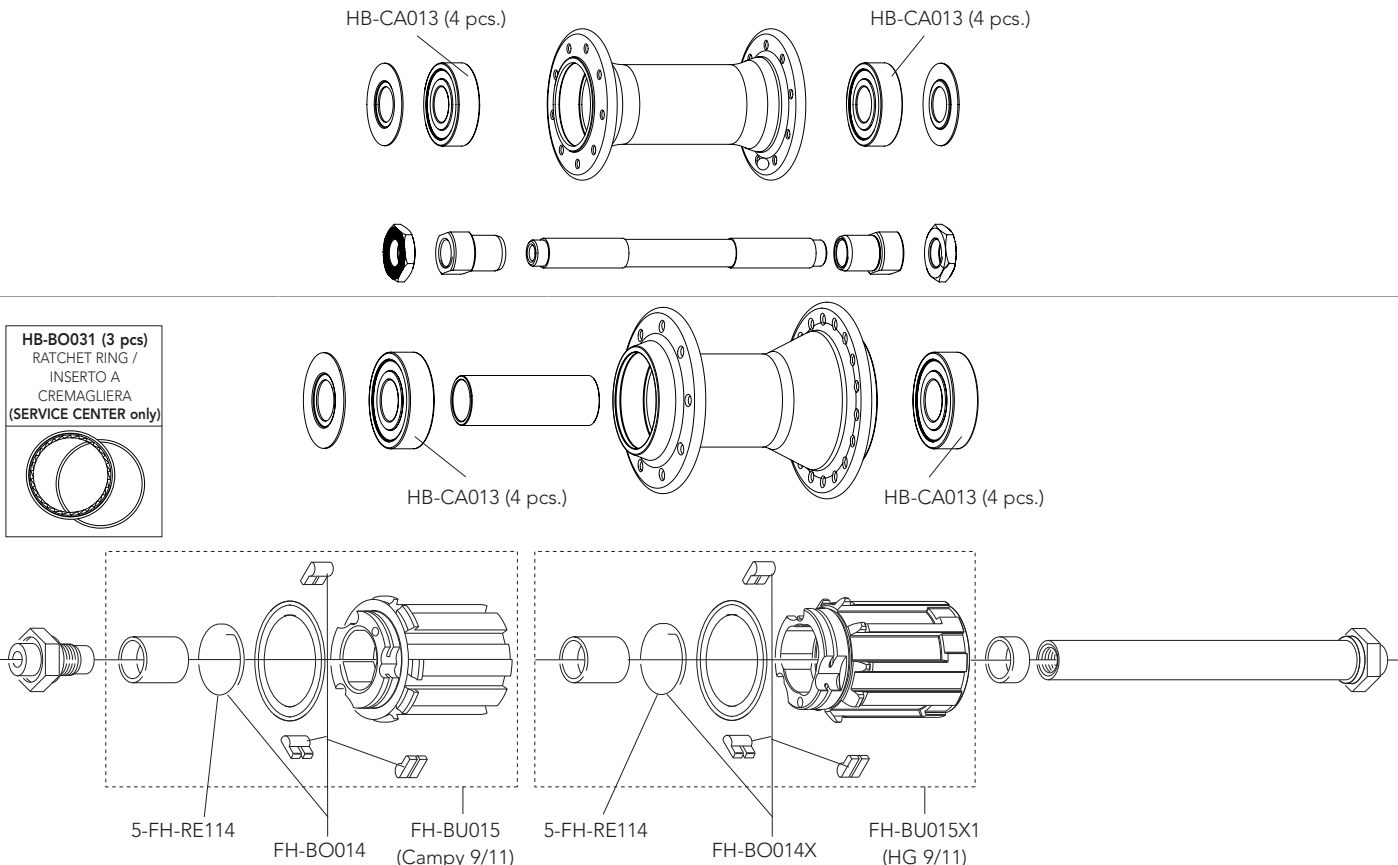
HUBS		
		
QUICK-RELEASES	QR8-40BFR	front + rear

NEUTRON ULTRA

CLINCHER

NEUTRON ULTRA


CLINCHER

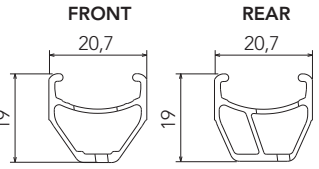RIM		
		
FRONT RIM REAR RIM RIM-TAPE LABEL KIT VALVE HOLE DIAMETER		WH-403NE (with labels) WH-404NE (with labels) 2-WH-RT12 (18 mm - 2 pieces) LAB-NECC07 (for a pair of front+rear wheels) 6,5 mm 700C (622 x 15C)

SPOKES		
COMPLETE FRONT KIT COMPLETE REAR KIT MINI-KIT NUTS NUT SUPPORTING PLATES	KIT-33NE KIT-34NE KIT-500NE 10-WH-010BO 10-WH-011EU	22 front spokes + 22 nuts + 22 nut supporting plates 12 rear right spokes + 12 rear left spokes + 24 nuts + 24 nut supporting plates 2 front spokes + 2 rear right spokes + 2 rear left spokes + 6 nuts + 6 nut supporting plates 10 pieces 10 pieces


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets <i>(please note that every HG11 rear wheel/FW body package contains the spacer)</i>

HUBS

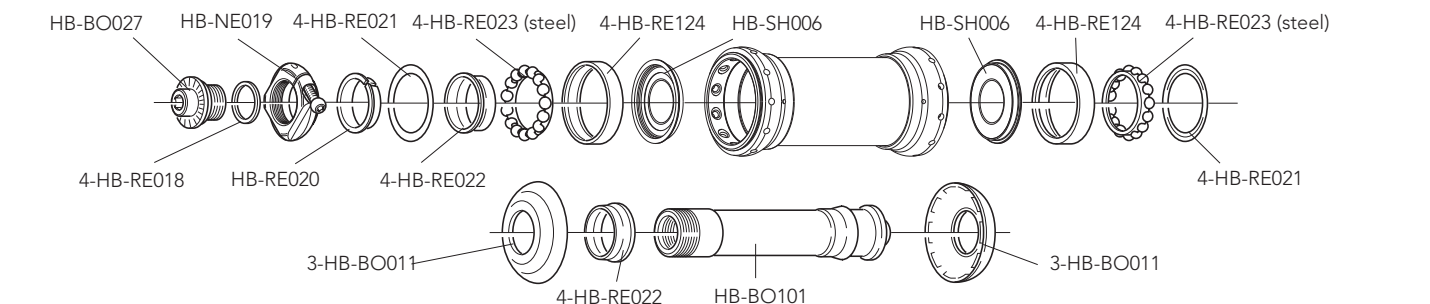

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



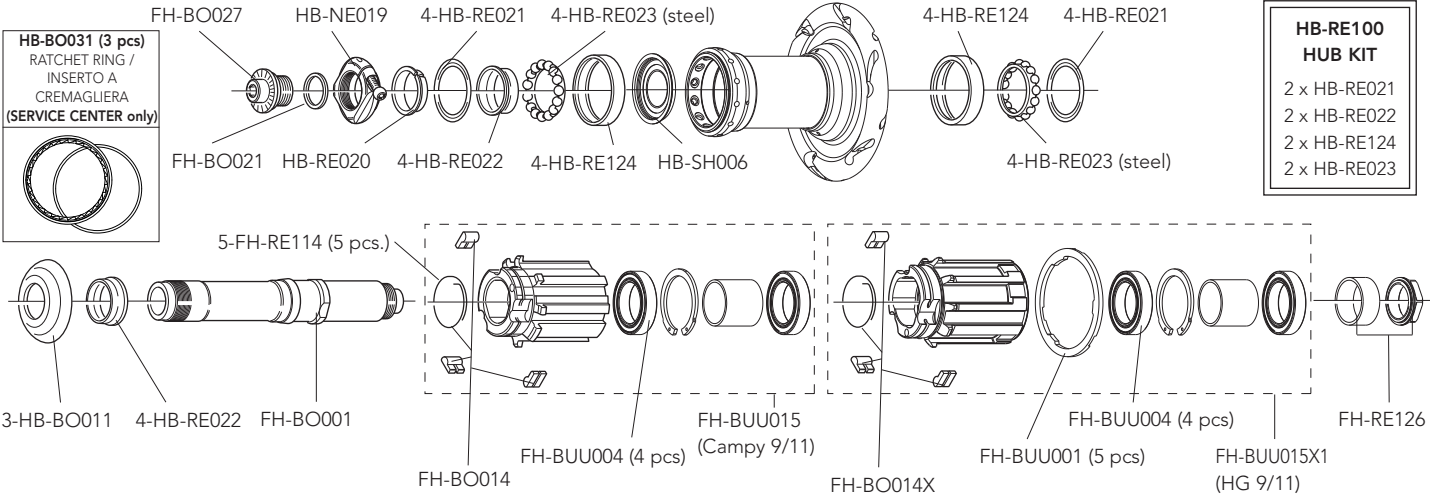


HB-RE100
HUB KIT

2 x HB-RE021
2 x HB-RE022
2 x HB-RE124
2 x HB-RE023


QUICK-RELEASES	QR11-20FRB	front + rear
----------------	------------	--------------

106

107

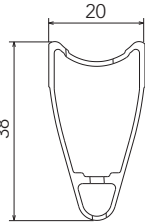RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER	WH-001PI (with labels) WH-002PI (with labels) LAB-PIT07 (for a pair of front+rear wheels) 6,5 mm 634 mm

SPOKES		
COMPLETE FRONT KIT COMPLETE REAR KIT MINI-KIT NUTS NUT SUPPORTING PLATES	KIT-01PI KIT-02PI KIT-100PI 10-WH-010BO 10-WH-011EU	22 front spokes + 22 nuts + 22 nut supporting plates 24 rear spokes + 24 nuts + 24 nut supporting plates 3 front spokes + r3 ear spokes + 6 nuts + 6 nut supporting plates 10 pieces 10 pieces

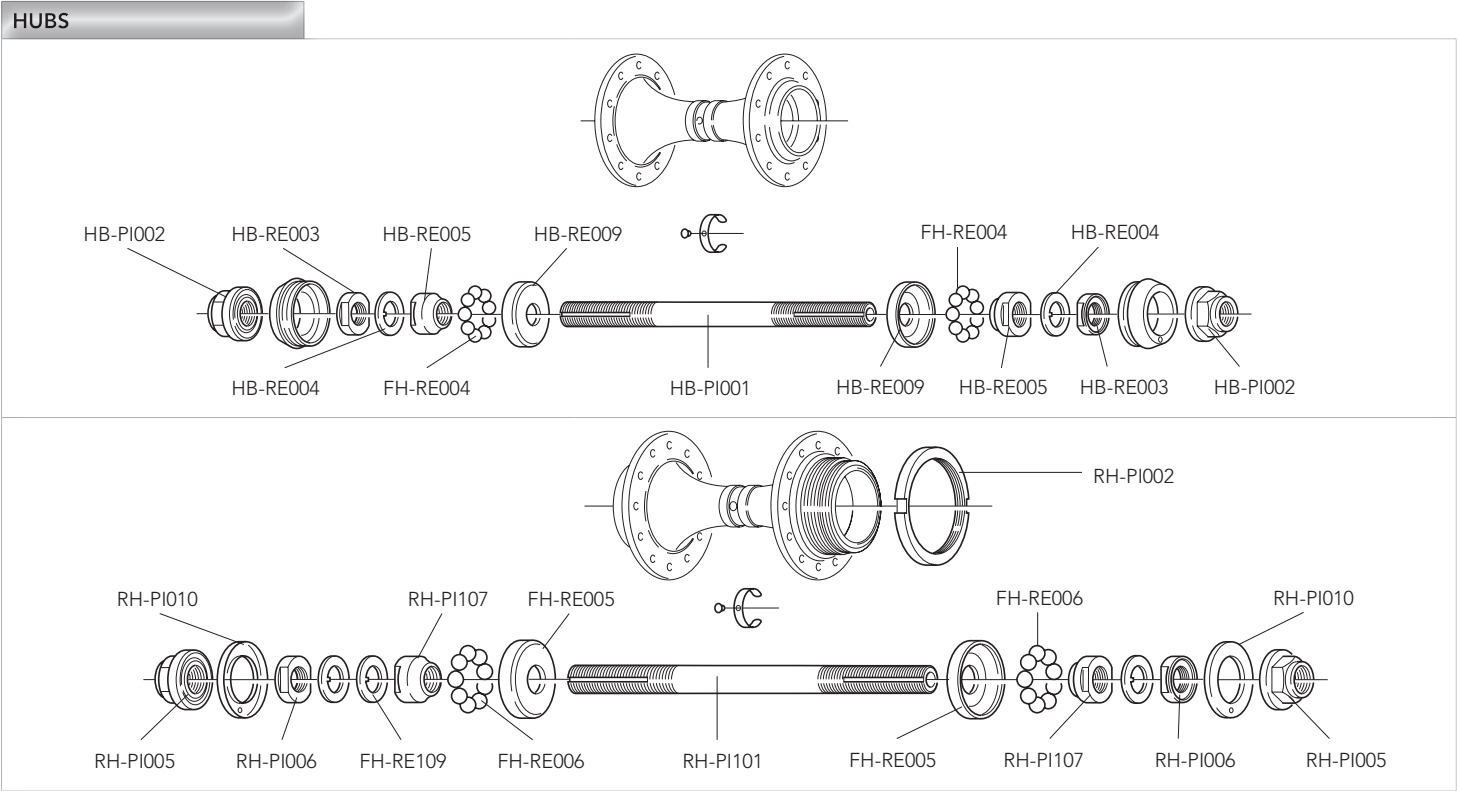



BORA ULTRA 80 PISTA

TUBULAR

BORA ULTRA 80 PISTA

TUBULAR

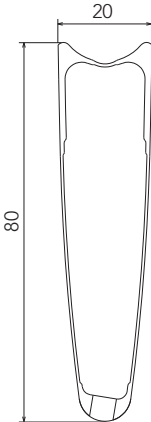RIM		
	FRONT RIM VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER	WH-101BO80 6,5 mm UT-WH160M (male extension) - UT-WH160F (female extension) WH-BUU002 (5 pcs.) 634 mm
SPOKES		
FRONT SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT80 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

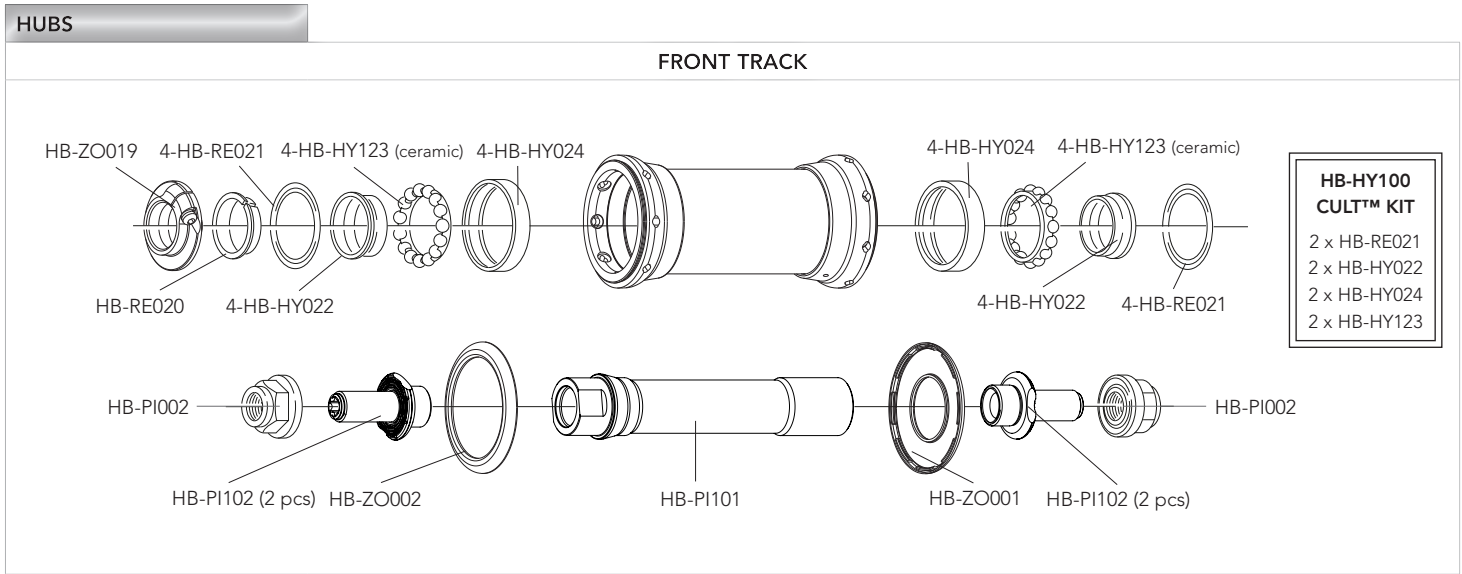


RIM	
VALVE HOLE STICKERS	WH-100BOTT (5 pcs)
VALVE HOLE BUSHINGS	WH-BUU002


**HB-BO100
CULT™ KIT
front**
2 x HB-BO023
2 x HB-BO024
2 x HB-BO022
2 x HB-BO021

HUBS

FRONT TRACK

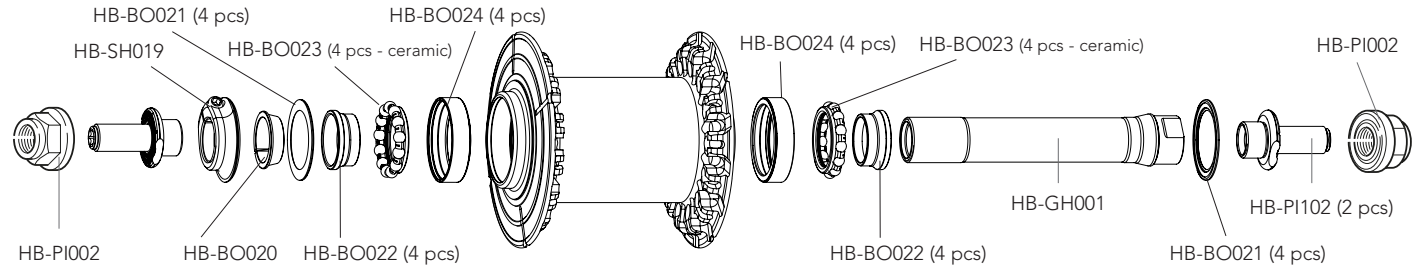

REAR TRACK

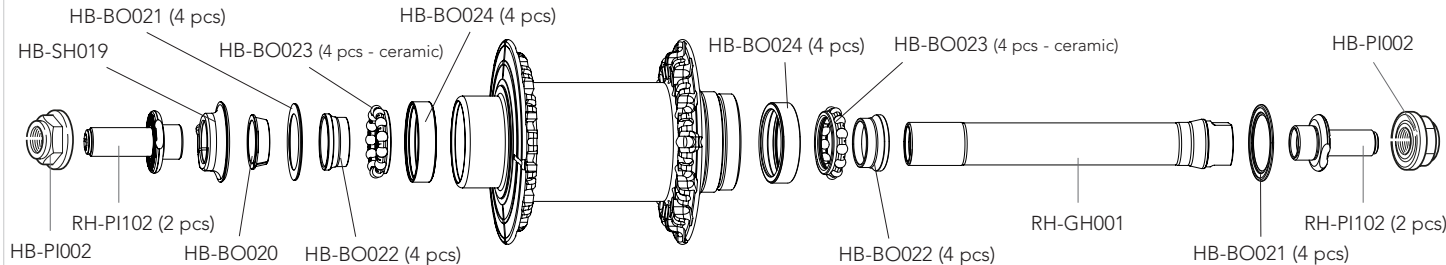


RIM	
VALVE HOLE STICKERS	WH-100BOTT (5 pcs)
VALVE HOLE BUSHINGS	WH-BUU002
VALVE EXTENSION	UT-WH130M
BRAKE SHOES	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)


ACCESSORIES

Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets <i>(please note that every HG11 rear wheel/FW body package contains the spacer)</i>
-------------------------	-----------	---

HUBS

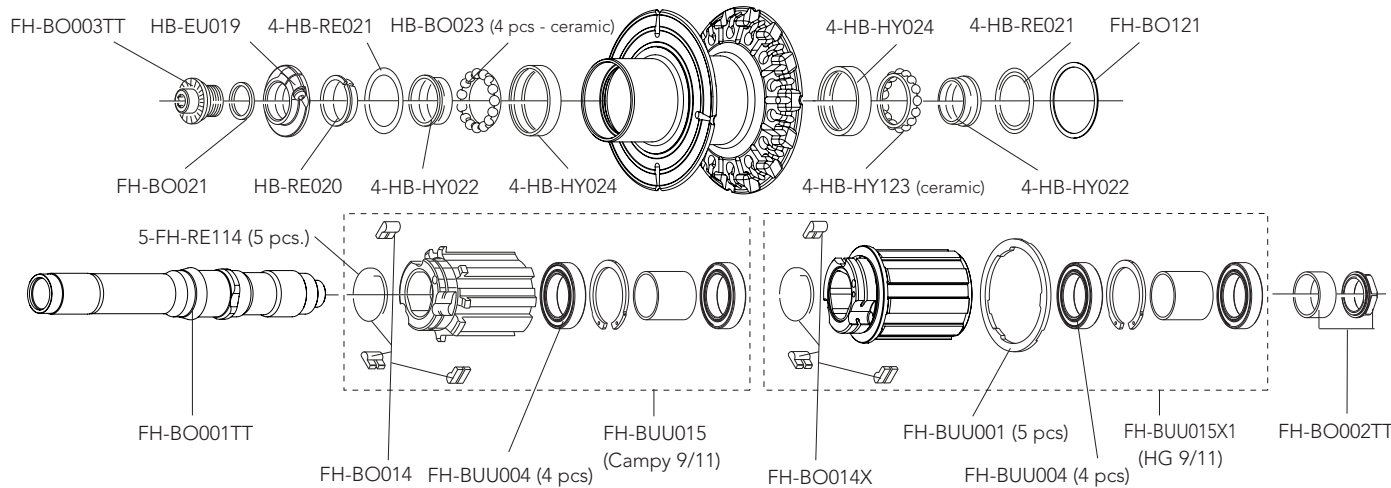

QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

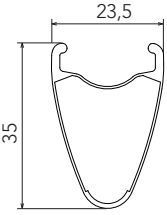
RIM		
	FRONT RIM VALVE HOLE VALVE HOLE BUSHING DIAMETER	WH-003BO35DB (bright) - WH-003BO35DBDK (dark) 6,5 mm WH-BUU002 (5 pcs.) 700C (622 x 17C)

SPOKES		
SPOKE L. 293 SPOKE L. 278 SPOKE L. 268 NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-017BO35DB WH-016BO35DB WH-019BO35DB WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
AFS™ locking	M1-101	to fix the rotor

! WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

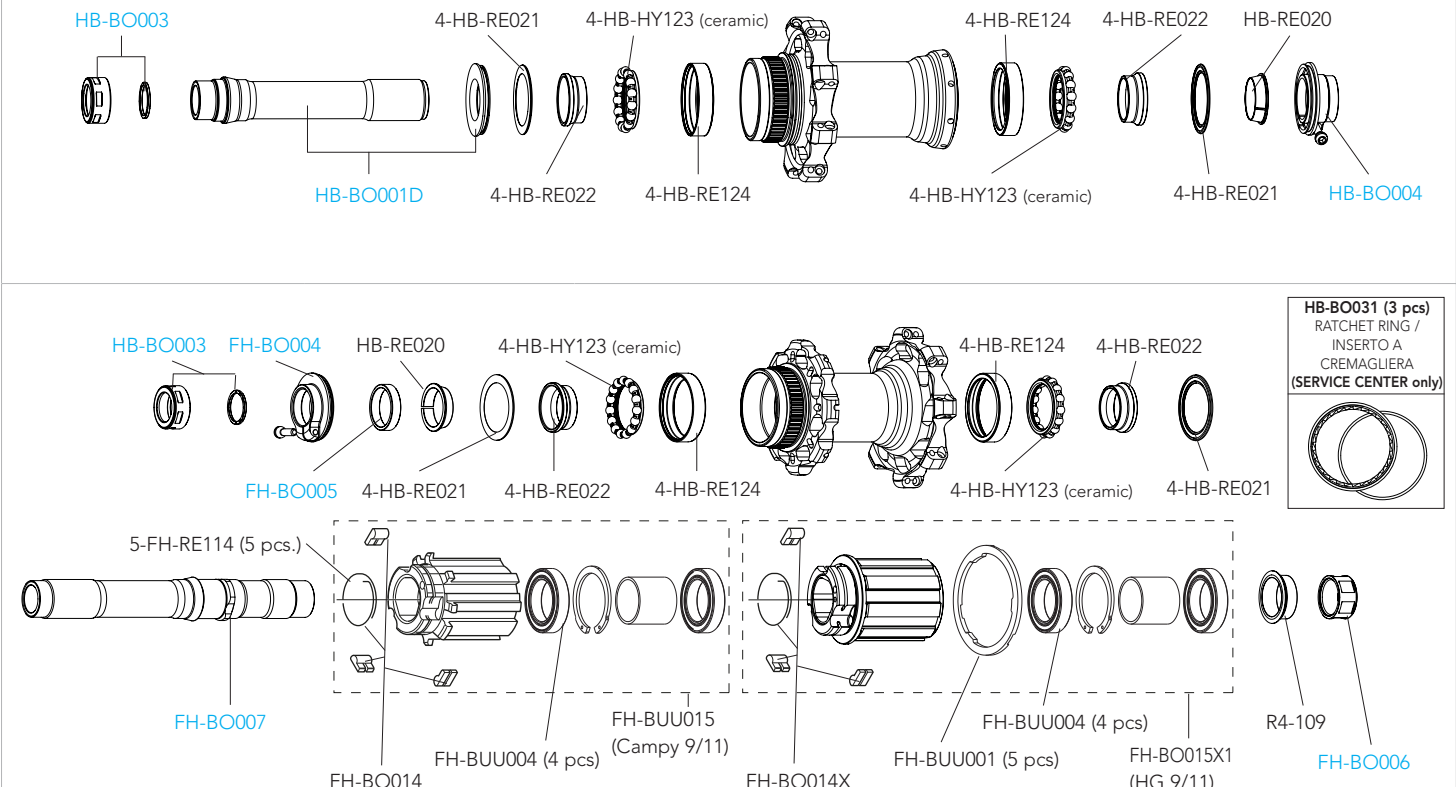

HB-BO003
HB-BO001D
4-HB-RE021
4-HB-HY123 (ceramic)
4-HB-RE124
4-HB-RE022
HB-RE020
4-HB-RE021
HB-BO004
4-HB-HY123 (ceramic)
4-HB-RE124
4-HB-RE022
HB-RE020
4-HB-RE021
HB-BO003 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)
5-FH-RE114 (5 pcs.)
FH-BO007
FH-BO014
FH-BUU004 (4 pcs)
FH-BUU015
(Campy 9/11)
FH-BO014X
FH-BUU001 (5 pcs)
FH-BUU004 (4 pcs)
FH-BO015X1
(HG 9/11)
R4-109
FH-BO006

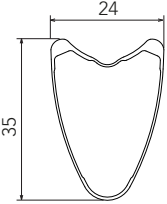RIM		
	RIM VALVE HOLE VALVE HOLE BUSHING DIAMETER	WH-001BO35DB (bright) - WH-001BO35DBDK (dark) 6,5 mm WH-BUU002 (5 pcs.) 700C (622 x 17C)

SPOKES		
SPOKE L. 293 SPOKE L. 278 SPOKE L. 268 NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-017BO35DB WH-016BO35DB WH-019BO35DB WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
AFS™ locking	M1-101	to fix the rotor

! WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

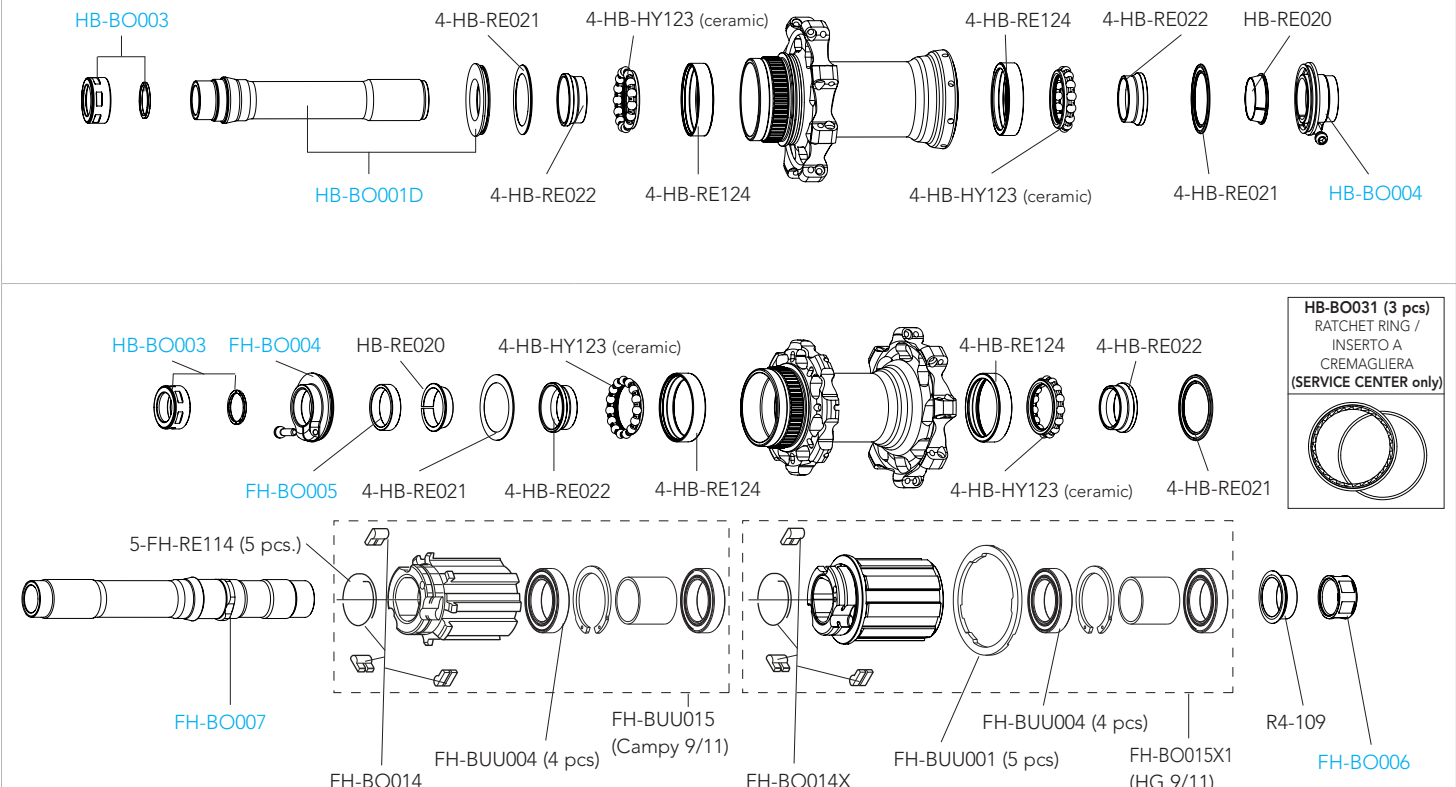
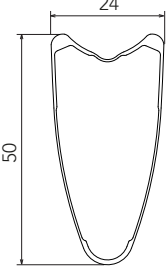


Diagram illustrating the components of the BORA ONE 35 hub assembly, including:

- HB-BO003
- HB-BO001D
- 4-HB-RE021
- 4-HB-RE022
- 4-HB-HY123 (ceramic)
- 4-HB-RE124
- 4-HB-HY123 (ceramic)
- 4-HB-RE124
- 4-HB-RE022
- 4-HB-RE021
- HB-RE020
- HB-BO004
- HB-BO031 (3 pcs) RATCHET RING / INSERTO A CREMAGLIERA (SERVICE CENTER only)
- 5-FH-RE114 (5 pcs.)
- FH-BO007
- FH-BO014
- FH-BUU004 (4 pcs)
- FH-BUU015 (Campy 9/11)
- FH-BO014X
- FH-BUU001 (5 pcs)
- FH-BUU004 (4 pcs)
- FH-BO015X1 (HG 9/11)
- R4-109
- FH-BO006


RIM		
	RIM VALVE HOLE VALVE HOLE BUSHING DIAMETER	WH-001BO50DB (bright) - WH-001BO50DBDK (dark) 6,5 mm WH-BUU002 (5 pcs.) 700C (622 x 17C)

SPOKES		
SPOKE L. 262,5 SPOKE L. 278 SPOKE L. 253,5 NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-017BO50DB WH-016BO35DB WH-019BO50DB WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
AFS™ lockring	M1-101	to fix the rotor

! WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS



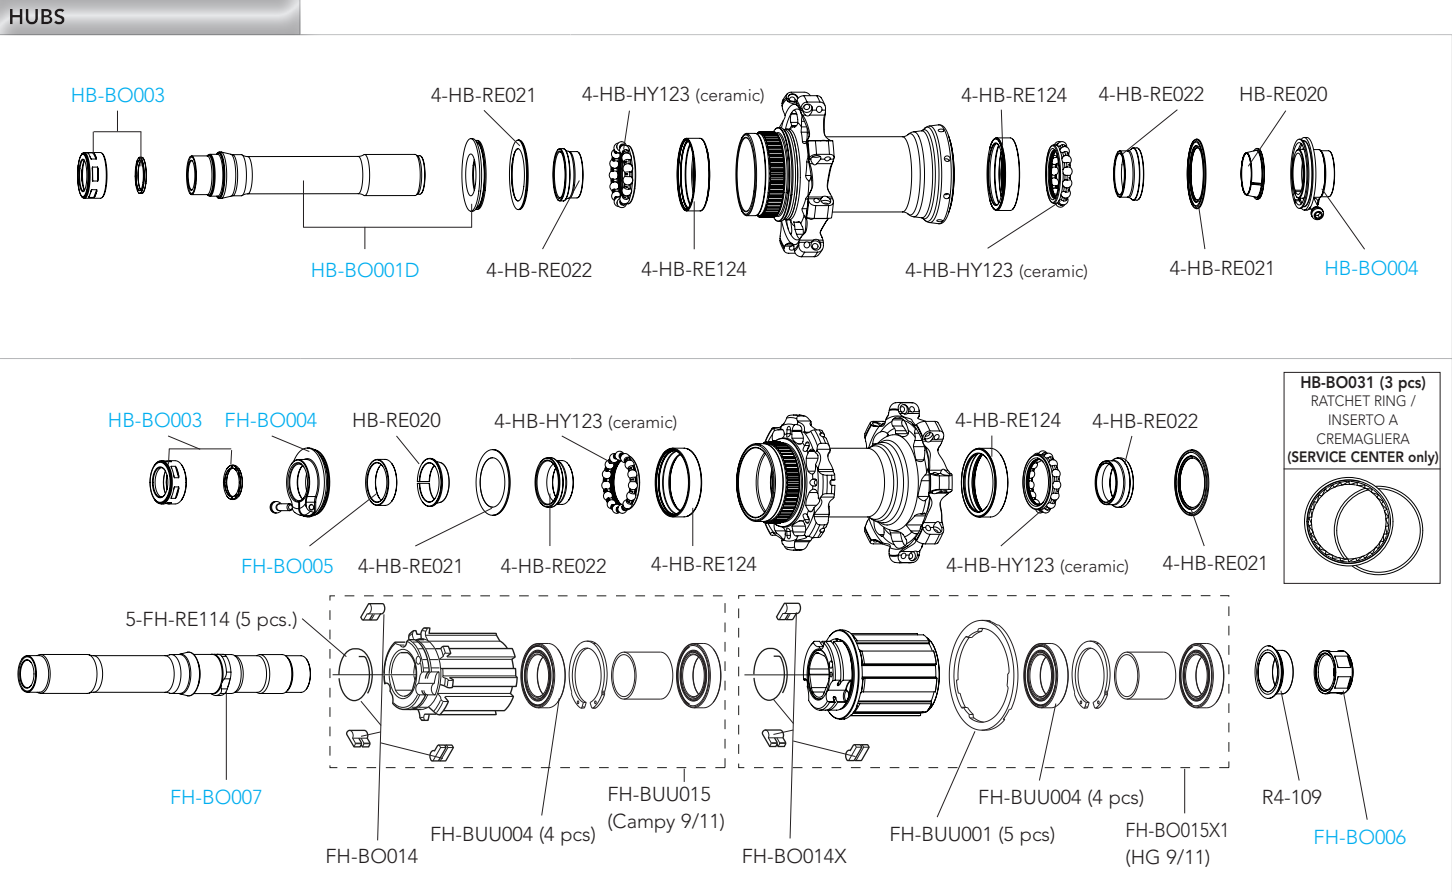


HB-BO003
HB-BO001D
4-HB-RE021
4-HB-HY123 (ceramic)
4-HB-RE124
4-HB-RE022
4-HB-RE124
4-HB-HY123 (ceramic)
4-HB-RE021
HB-RE020
HB-BO004
HB-BO003 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)
5-FH-RE114 (5 pcs.)
FH-BO007
FH-BO014
FH-BUU004 (4 pcs)
FH-BUU015 (Campy 9/11)
FH-BO014X
FH-BUU001 (5 pcs)
FH-BUU004 (4 pcs)
FH-BO015X1 (HG 9/11)
R4-109
FH-BO006

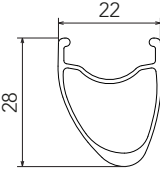RIM		
	FRONT/REAR RIM LABEL KIT VALVE HOLE DIAMETER	WH-003ZODB (with labels) LAB-ZOCDB17 (for a pair of front+rear wheels) 6,5 mm 622 X 17C

SPOKES		
FRONT RH / REAR RH SPOKE FRONT LH SPOKE REAR LH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET	WH-016ZODB WH-017ZODB WH-019ZODB 50-WH-015ZO UT-WH035 UT-WH050	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples 50 pieces magnet-attractor for nipple nipple-guide


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/HG11 FW body package contains the spacer)
QUICK-RELEASES	QR17-ZODBFK QR17-ZODBRK	front quick-release +kit QR rear quick-release + kit QR

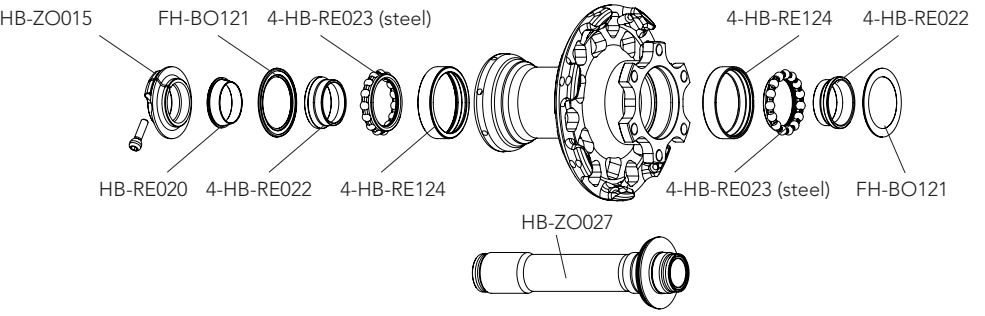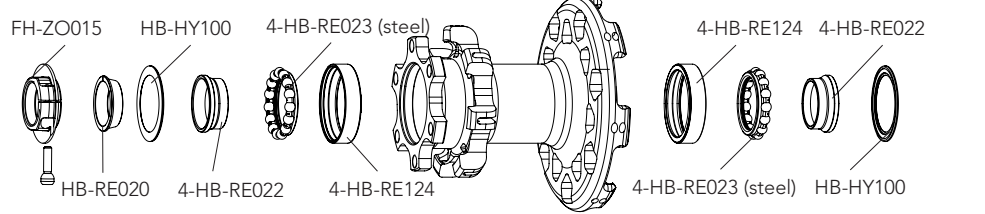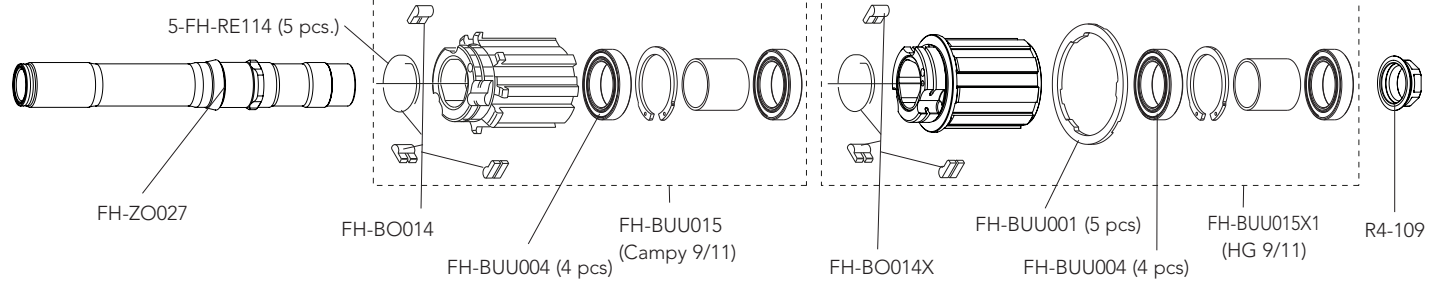HUBS	
	
	
	


ZONDA DB - adapters for front & rear axles

FRONT

QR Ø9 mm – 100 mm (KITFCFAQR + KITFCRA12135)

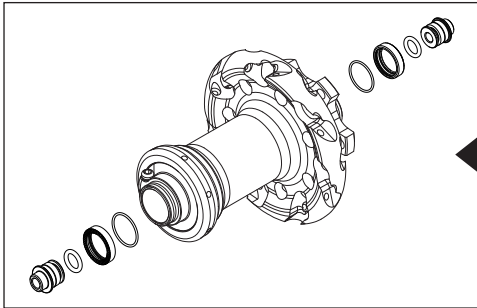


Ø12mm THRU-AXLE - 100mm (KITFCRA12135)

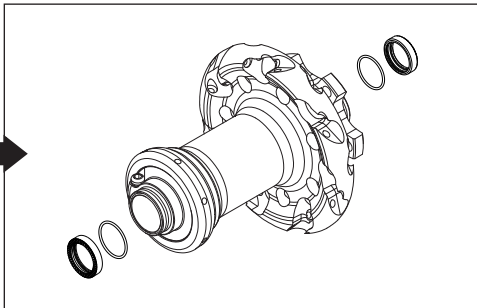


REAR


Ø12mm THRU-AXLE- 135 mm

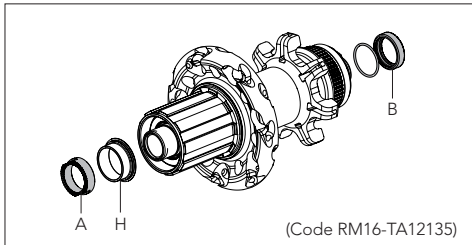

Ø12mm THRU-AXLE - 142 mm

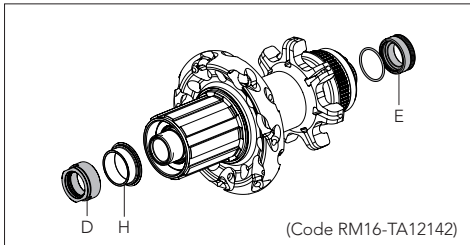

QR Ø 10 mm - 135 mm

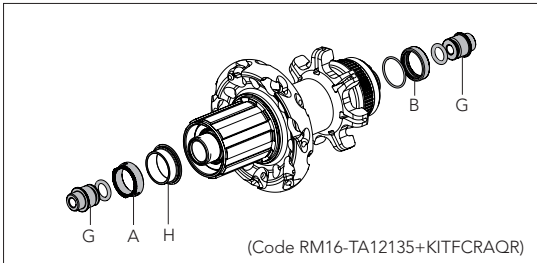

A	5,6 mm
B	4,25 mm
D	9,1 mm
E	7,75 mm
G	15,5 mm
H*	7,4 mm
H*: code R4-109 (NOT INCLUDED)	

A + B =	code RM16-TA12135
D + E =	code RM16-TA12142
G + G =	code KITFCRAQR

QUICK-RELEASES

LOW-PROFILE WHEELS	
NEUTRON™ ULTRA™	QR12-BUUBFR
MEDIUM-PROFILE WHEELS	
KHAMSIN™ ASYMMETRIC™	QR8-40BFR
SCIROCCO™	QR12-ZOBFR
ZONDA™	QR12-ZOBFR
ZONDA™ DB	QR17-ZODBFK (front + kit HH=>QR) - QR17-ZODBRK (rear + kit HH=>QR)
EURUS™	QR13-80FR
SHAMAL™ ULTRA™	QR13-80FR
SHAMAL™ MILLE	QR13-80FR
ALU/CARBON HIGH-PROFILE WHEELS	
BULLET™	QR12-ZOBFR
BULLET™ ULTRA™	QR12-BUUBFR
CARBON HIGH-PROFILE WHEELS	
BORA™ ONE 50	QR12-BUUBFR
BORA™ ONE 50 DB	QR17-ZODBFR (HH=>QR kit NOT included)
BORA™ ONE 35	QR12-BUUBFR
BORA™ ONE 35 DB	QR17-ZODBFR (HH=>QR kit NOT included)
BORA™ ULTRA™ 35	QR12-BUUBFR
BORA™ ULTRA™ 50	QR12-BUUBFR
BORA™ ULTRA™ 80	QR12-BUUBFR
BORA™ ULTRA™ TT	QR12-BUUBFR

QR12-BUUBFR (front+rear)



QR8-40BFR (front+rear)



QR12-ZOBFR (front+rear)
QR17-ZODBFK (front + kit HH=>QR)
QR17-ZODBRK (rear + kit HH=>QR)



QR13-80FR (front+rear)




WHEELS

WHEELS

VALVE EXTENSIONS


Your BULLET/BULLET ULTRA/BORA ULTRA wheels are supplied with valve extensions that correspond to depth of the rim as follows:

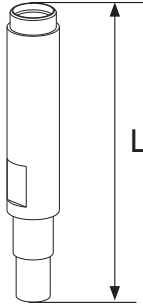PROFILE RIM	MALE VALVE ADAPTER (SUPPLIED)		
BULLET/BULLET ULTRA H50	UT-WH130M	L = 35 mm	
BULLET/BULLET ULTRA H80	UT-WH140M	L = 65 mm	
BULLET/BULLET ULTRA H105	UT-WH150M	L = 90 mm	
BORA ULTRA H50	UT-HU150	L = 40 mm	
BORA ULTRA H80	UT-WH160M	L = 74 mm	

PROFILE RIM	FEMALE VALVE ADAPTER (OPTION)		
BULLET/BULLET ULTRA H50	UT-WH130F	L = 37 mm	
BULLET/BULLET ULTRA H80	UT-WH140F	L = 67 mm	
BULLET/BULLET ULTRA H105	UT-WH150F	L = 92 mm	
BORA ULTRA H80	UT-WH160F	L = 80 mm	

USE AIR CHAMBERS (INNER TUBES) WITH A LONG VALVE (AT LEAST 35 mm).

FRAME PREPARATION / FRONT DERAILLEUR

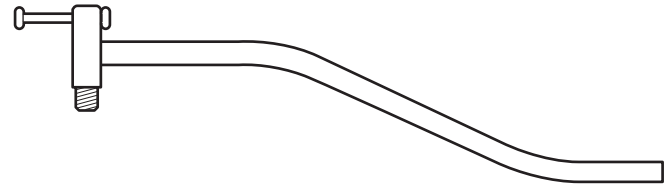


UT-VS030
Riscontro allineamento occhiello attacco cambio
Rear derailleur hanger alignment tool
Calibre de contrôle attache de dérailleur arrière
Richtwerkzeug zur Kontrolle von Ausfallende mit Schaltauge



UT-FD020
Dima per corretto posizionamento deragliatore (2 pz - per Z50 e Z52)
Front derailleur alignment tool (2 pcs - for Z50 and Z52)
Calibre de contrôle montage du dérailleur avant (2 pcs - pour Z50 et Z52)
Richtwerkzeug für Umwerfer-Montage (2 St. - für Z50 und Z52)

BOTTOM BRACKET / CRANKSET


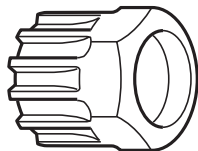


UT-BB080 (1 pz.) - 10-UT-BB080 (10 pz.):

Chiave per montaggio movimenti centrali CART e ghiera di chiusura pacchi pignoni
Cartridge bottom bracket and sprocket cassette- lock ring remover
Clé pour montage jeux de pédalier CART et roues-libres à cassette
Schlüssel zur Montage von Patronen-Tretlager und Schließring für Freilaufzahnkranz


UT-BB100

Utensile per movimenti a cartuccia Daytona/Centaur™, Veloce™ e Mirage™
Tool for Daytona/Centaur™, Veloce™ and Mirage™ cartridge bottom bracket
Clé pour jeux de pédalier à cartouche Daytona/Centaur™, Veloce™ et Mirage™
Montageschlüssel für Daytona/Centaur™, Veloce™ und Mirage™ Patronen-Tretlager

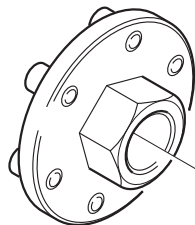

UT-FC090


Inserto per estrattore pedivella sinistra POWER TORQUE™
Insert for left POWER TORQUE™ crank extractor
Insert pour extracteur manivelle gauche POWER TORQUE™
Einsatz für linken POWER TORQUE™ Kurbelabzieher

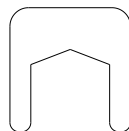

UT-FC095


Protezione per estrazione pedivella sx POWER TORQUE™ (5 pz)
shield f. left POWER TORQUE™ crank extractor insert (5 pcs)
écran insert extracteur manivelle gauche POWER TORQUE™ (5 pcs)
Schutz für Einsatz für LH POWER TORQUE™ Kurbelabzieher (5 St)

CRANKSET

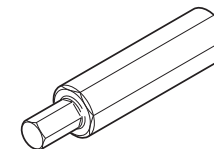

UT-BB110

Utensile per vite fissaggio guarnitura ULTRA-TORQUE™
Tool for ULTRA-TORQUE™ crankset fixing screw
Outil pour vis de fixation pédalier ULTRA-TORQUE™
Werkzeug für ULTRA-TORQUE™ Kettenradgarnitur Befestigungsschraube


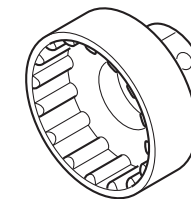


UT-BB130

Chiave per calotte esterne guarnitura / ghiera AFS™
Tool for crankset overboard cups / AFS™ lockring
Outil pour cuvettes pédalier / écrou AFS™


UT-BB240

Utensile per piantaggio calotte integrate OS-Fit™
Tool for OS-Fit™ crankset overboard cups
Outil pour cuvettes pédalier OS-Fit™
Werkzeug für OS-Fit™ Kettenradgarnitur Lagerschalen

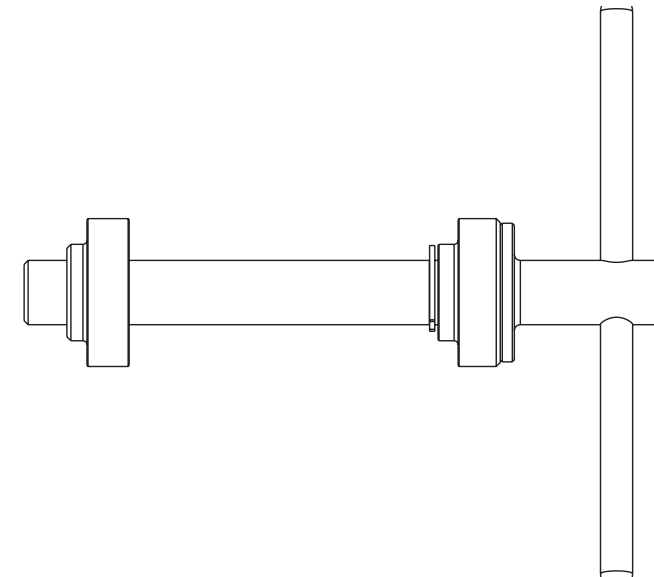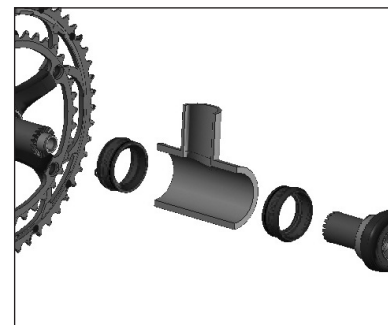


BRAKES


DISC BRAKES

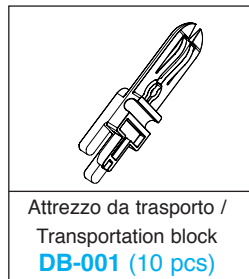



RIM BRAKES

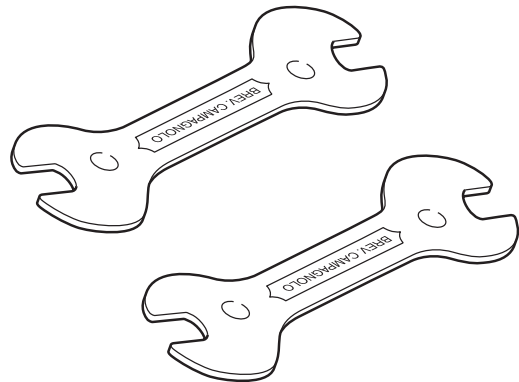


WHEELS

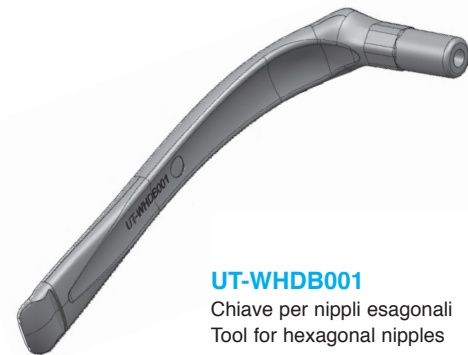


UT-HU050
Tiraraggi
Spoke wrench
Clé à rayons
Speichenschlüssel

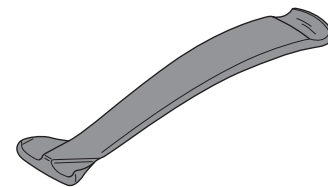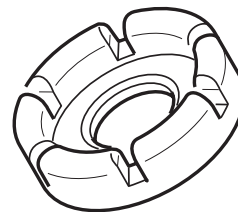

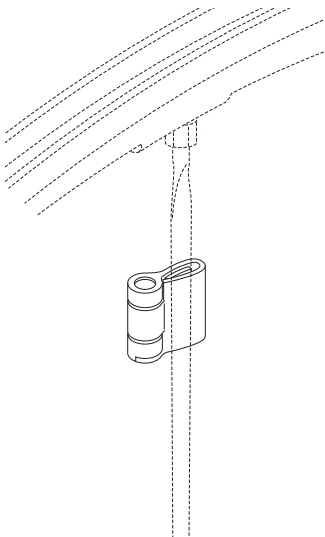

UT-WH080
Magnete velocità per raggi EURUS™ / SHAMAL™ ULTRA™
SPD magnet for EURUS™ / SHAMAL™ ULTRA™ spokes
Aimant vitesse pour rayons EURUS™ / SHAMAL™ ULTRA™

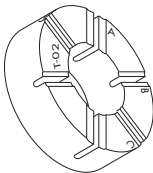

UT-WH010
Anello anti-rotazione raggi
Spoke antirotation ring
Bague antirotation des rayons




UT-WH090
Chiave tiraraggi BULLET/BULLET ULTRA/BORA ULTRA 80
Spoke wrench BULLET/BULLET ULTRA/BORA ULTRA 80
Clé à rayons BULLET/BULLET ULTRA/BORA ULTRA 80



UT-WH020
Inserto nipplo attira-magnete per EURUS™/SHAMAL™ ULTRA™
Magnet-attracting nipple insert for EURUS™/SHAMAL™ ULTRA™
Insert d'écrou pour attirer l'aimant EURUS™/SHAMAL™ ULTRA™

UT-WH035
Inserto nipplo attira-magnete per ZONDA™ 2012
Magnet-attracting nipple insert for ZONDA™ 2012
Insert d'écrou pour attirer l'aimant ZONDA™ 2012

UT-WH160
Inserto nipplo attira-magnete per BULLET/BULLET ULTRA
Magnet-attracting nipple insert for BULLET/BULLET ULTRA
Insert d'écrou pour attirer l'aimant BULLET/BULLET ULTRA

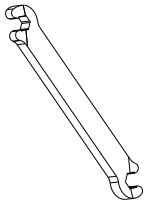


UT-WH070
Chiave tiraraggi
Spoke wrench
Clé à rayons


UT-WH270
Chiave tiraraggi per SHAMAL MILLE MY2017 (Service Center Only)
Spoke wrench for SHAMAL MILLE MY2017 (Service Center Only)
Clé à rayons pour SHAMAL MILLE MY2017 (Service Center Only)



UT-WH050
Magnete guida-nipplo
Nipple guide magnet
Aimant de guidage écrou

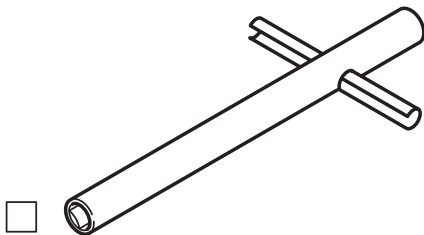


UT-HU060
Chiave per raggi ruote Bora™ (fino a gamma '02)
Bora™ wheel truing tool (till '02 range)
Clé à rayons pour Bora™ (jusqu'à la gamme '02)




5-WH-SH002
Bussola riduzione sede valvola 2WF (5 pz)
Valve hole bushing for 2WF (5 pcs)
Bague pour valve 2WF (5 pcs)

WH-BUU002
Bussola riduzione sede valvola BULLET/BULLET ULTRA/BORA ULTRA 80 (5 pz)
Valve hole bushing for BULLET/BULLET ULTRA/BORA ULTRA 80 (5 pcs)
Bague pour valve BULLET/BULLET ULTRA/BORA ULTRA 80 (5 pcs)

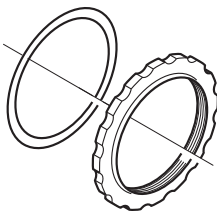


M1-101 (4 pcs.)
Ghiera AFS™
AFS™ lockring
Eccrou AFS™

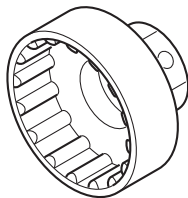

UT-BB130
Chiave per calotte esterne guarnitura / ghiera AFS™
Tool for crankset overboard cups / AFS™ lockring
Outil pour cuvettes pédalier / écrou AFS™

SPROCKETS

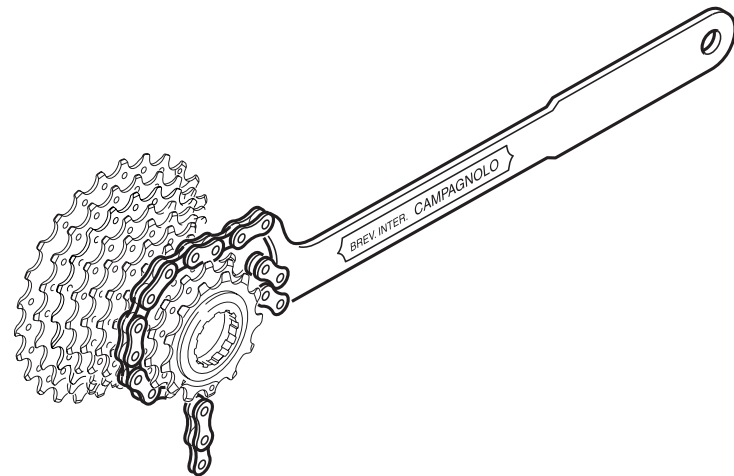


UT-CS060

Chiave con catena 10s per smontaggio pignoni 11s, 10s, 9s e 8s
Spanner with 10s chain for 11, 10, 9 and 8s sprockets
Fouet à chaîne 10s pour pignons 11s, 10s, 9s et 8s
Zahnkranzabnehmer mit Rennkette 10s für 11-, 10-, 9- und 8s Ritzeln

CHAIN

UT-CN300

Utensile per *Ultra-Link™* (solo catene 11s)
Tool for *Ultra-Link™* (11s chains only)
Outil pour *Ultra-Link™* (seulement chaînes 11s)
Werkzeug für *Ultra-Link™* (nur 11s Kette)

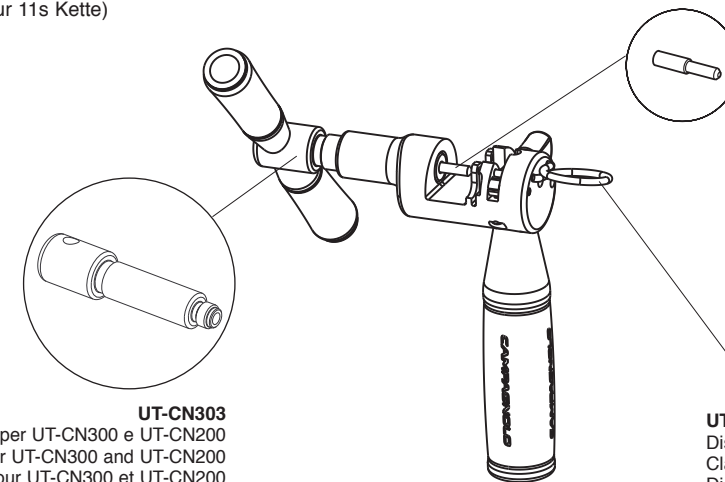

UT-CN303


Perno centrale per UT-CN300 e UT-CN200
Central axle for UT-CN300 and UT-CN200
Axe central pour UT-CN300 et UT-CN200
Achse für UT-CN300 und UT-CN200

UT-CN301

Spintore per UT-CN300 e UT-CN200
Pusher for UT-CN300 and UT-CN200
Poinçon pour UT-CN300 et UT-CN200
Schieber für UT-CN300 und UT-CN200

UT-CN302

Dispositivo di blocco per UT-CN300
Clamping device for UT-CN300
Dispositif de blocage pour UT-CN300
Sperrvorrichtung für UT-CN300

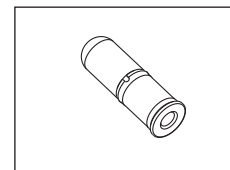


5-CN-RE500

Ultra-Link™ per catene 11s (5 pz)
Ultra-Link™ for 11s chains only (5 pcs)
Ultra-Link™ pour chaînes 11s (5 pcs)
Ultra-Link™ für 11s Kette (5 St.)

CAMPY™ UT-CN200


Utensile per **HD-Link™** (catene C10™ e C10™ Ultra Narrow™)
 Tool for **HD-Link™** (C10™ and C10™ Ultra Narrow™ chains)
 Outil pour **HD-Link™** (chaînes C10™ et C10™ Ultra Narrow™)
 Werkzeug für **HD-Link™** (C10™ und C10™ Ultra Narrow™ Kette)

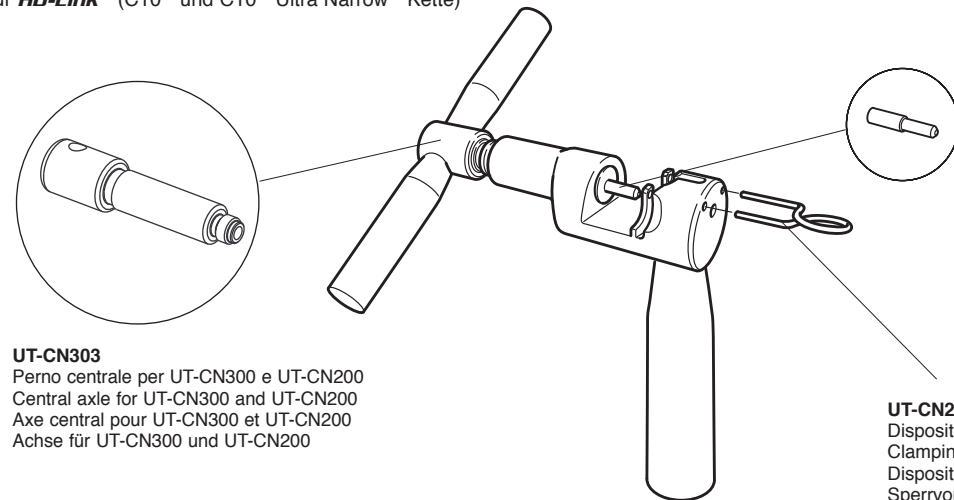

UT-CN303
 Perno centrale per UT-CN300 e UT-CN200
 Central axle for UT-CN300 and UT-CN200
 Axe central pour UT-CN300 et UT-CN200
 Achse für UT-CN300 und UT-CN200


UT-CN301
 Spintore per UT-CN300 e UT-CN200
 Pusher for UT-CN300 and UT-CN200
 Poinçon pour UT-CN300 et UT-CN200
 Schieber für UT-CN300 und UT-CN200

UT-CN202
 Dispositivo di blocco per UT-CN200
 Clamping device for UT-CN200
 Dispositif de blocage pour UT-CN200
 Sperrvorrichtung für UT-CN200

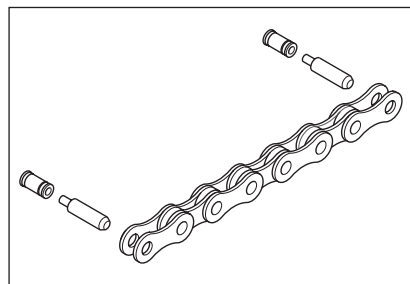


CN-RE400


HD-Link™ Ultra Narrow™ (5,9 mm) per catene C10™ Ultra Narrow™
HD-Link™ Ultra Narrow™ (5,9 mm) for C10™ Ultra Narrow™ chains
HD-Link™ Ultra Narrow™ (5,9 mm) pour chaînes C10™ Ultra Narrow™ chains
HD-Link™ Ultra Narrow™ (5,9 mm) für C10™ Ultra Narrow™ Kette

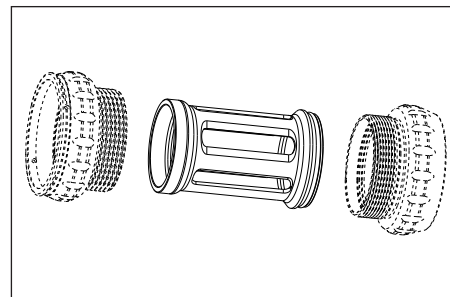


EPS-001
 Cilindro guida-cavi
 BB cable guide

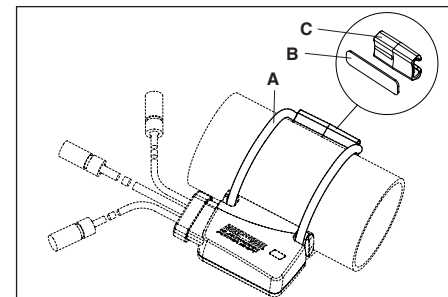


EPS-002
 Accessori montaggio sistema di interfaccia (A+B+C)
 Kit for interface assembly (A+B+C)

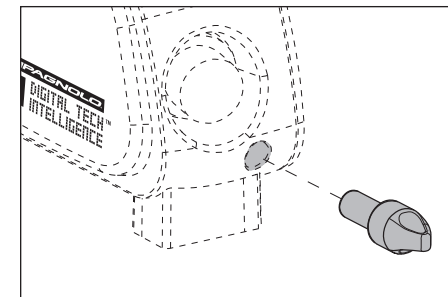


EPS-003
 Magnete spegnimento sistema di potenza (5 pz.)
 Switch-off magnet (5 pcs.)

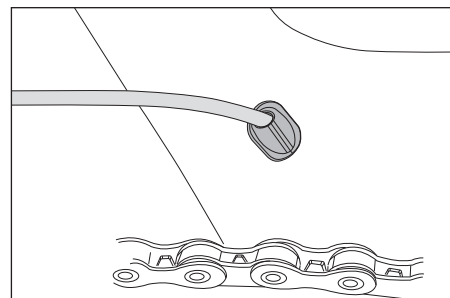

CG-CS001EPS
 Gommino passacavi (20 pz.)
 Grommet for cables (20 pcs.)

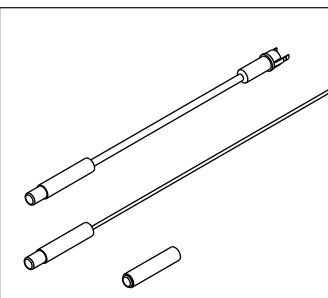

UT-CG010EPS
 Kit magneti passacavi SR-RE
 Cable run magnet kit SR-RE

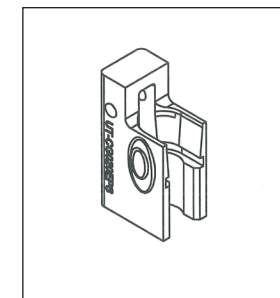

UT-CG020EPS
 Attrezzo apri-connettori SR-RE
 Connector disconnection tool SR-RE




UT-CG120ATEPS
 Attrezzo apri-connettori AT
 Connector disconnection tool AT

CG-CS002EPS
 Gommino passacavi per Power Unit (10 pz.)
 Grommet for Power Unit cables (20 pcs.)

UT-CG010ATEPS
 Kit magneti passacavi AT
 Cable run magnet kit AT


EPS V2 POWER UNIT

BIG

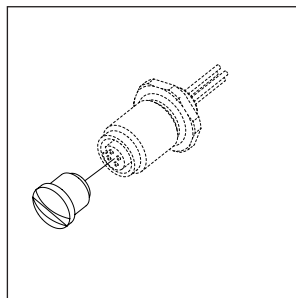


EPS-004
Tappo connettore carica batterie
PU EPS V2 (5 pz)

PU EPS V2 connector cup (inter-
nal mount) (5 pcs)

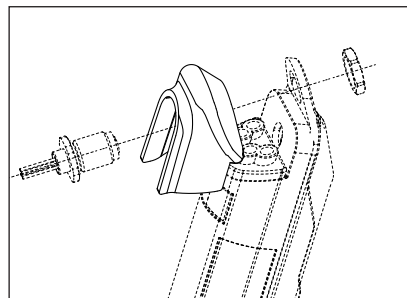


EPS-005
Cappuccio per installazione est. PU EPS V2
(5pz)


PU EPS V2 external mount connctor cap
(5pcs)

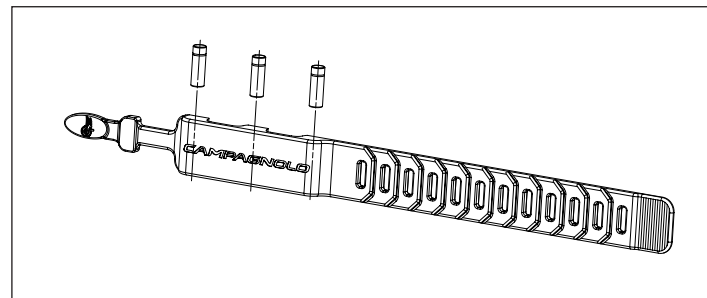


EPS-006
Fascia spegnimento magnetica
Magnetic power block strap

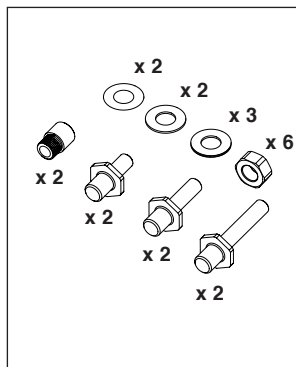


EPS-107
Kit viti Power Unit EPS V2
EPS V2 Power Unit screws kit

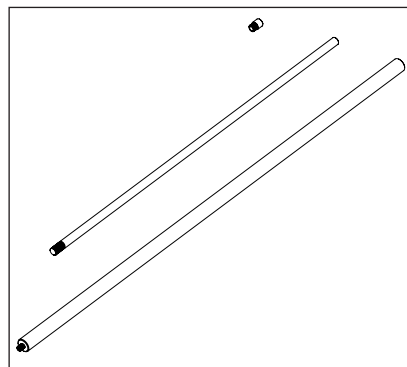


UT-PU010
Kit installazione interna PU EPS V2
EPS V2 PU internal installation tool

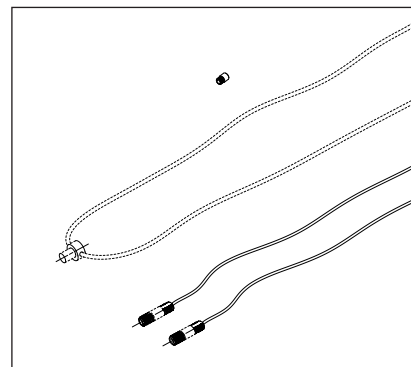

UT-PU030
Kit installazione tubo obliquo
PU EPS V2
EPS V2 PU down-tube
installation tool

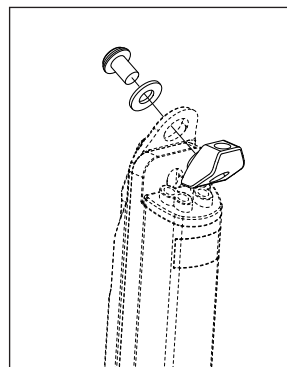

UT-PU020
Adattatore per installazione
rovesciata PU EPS V2
EPS V2 PU internal upside-
down installation adapter

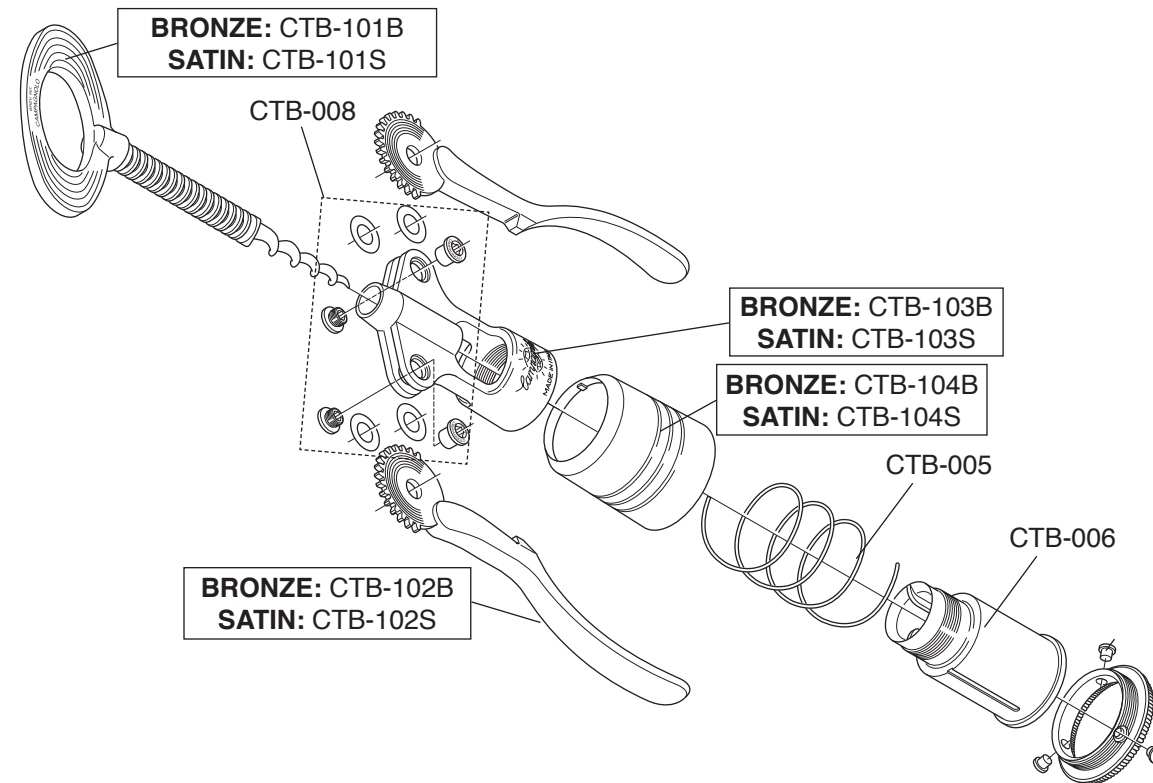

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

HEADQUARTERS

BRANCH OFFICES

AGENCIES

CAMPAGNOLO S.R.L.

Via della Chimica, 4
36100 Vicenza - ITALY
Tel. +39-0444-225500
Fax: +39-0444-225400
E-mail: sales@campagnolo.com

FRANCE

CAMPAGNOLO FRANCE SAS
ZA du Tissot - 42530 St GENEST -
LERPT
Tel. +33-477-556305
Fax: +33-477-556345
E-mail: campagnolo@campagnolo.fr

GERMANY

CAMPAGNOLO DEUTSCHLAND
GMBH
Alte Garten 62
51371 LEVERKUSEN
Tel. +49-214-206953-0
Fax: +49-214-206953-15
E-mail: campagnolo@campagnolo.de

JAPAN

CAMPAGNOLO JAPAN LTD
65 Yoshida-cho, Naka-ku,
YOKOHAMA
231-0041
Tel. +81-45-264-2780
Fax: +81-45-241-8030
E-mail: info@campagnolo.jp

SPAIN

CAMPAGNOLO IBERICA S.L.
Avda. de Los Huetos 46. pab. 3-2ª fila
01010 VITORIA
Tel. +34-945-217195
Fax: +34-945-217198
E-mail: campagnolo@campagnolo.es

TAIWAN

PRIMATEK LTD
No. 4, Gongyequ 10th Rd., Nantue
Dist.,
TAICHUNG CITY 408 - TAIWAN
(R.O.C.)
Tel. +886-4-23506831
Fax: +886-4-23596764

UNITED STATES

CAMPAGNOLO NORTH AMERICA
INC.
5431 Avenida Encinas, Suite C -
CARLSBAD CA 92008 - U.S.A.
Tel. +1-760-9310106
Fax: +1-760-9310991
E-mail: info@campagnolona.com

BENELUX

INTERNATIONAL
CYCLE CONNECTION I.C.C.
Communicatielaan 5A
4538 BV TERNEUZEN
NEDERLANDS
Tel. + 31 (0)115 649321
Fax: + 31 (0)115 649110
E-mail: info@i-c-c.nl
Web: www.i-c-c.nl