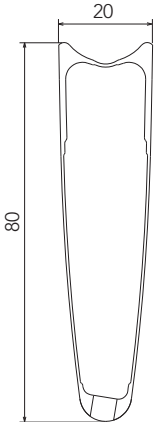


BORA ULTRA 80

TUBULAR

BORA ULTRA 80



TUBULAR

RIM		
	FRONT RIM REAR RIM VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER BRAKE SHOES	WH-101BO80 (bright) - WH-101BO80DK (dark) WH-102BO80 (bright) - WH-102BO80DK (dark) 6,5 mm UT-WH160M (male extension) - UT-WH160F (female extension) WH-BUU002 (5 pcs.) 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT SPOKE REAR RH SPOKE REAR LH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT80 WH-018BOT80 WH-019BOT80 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

! WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

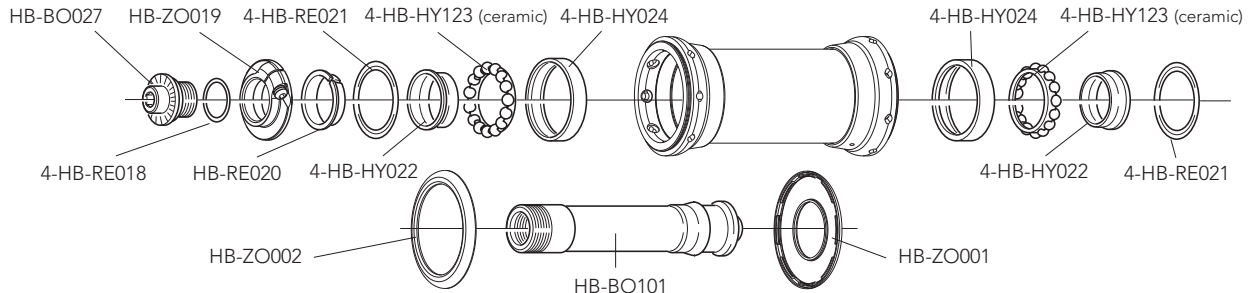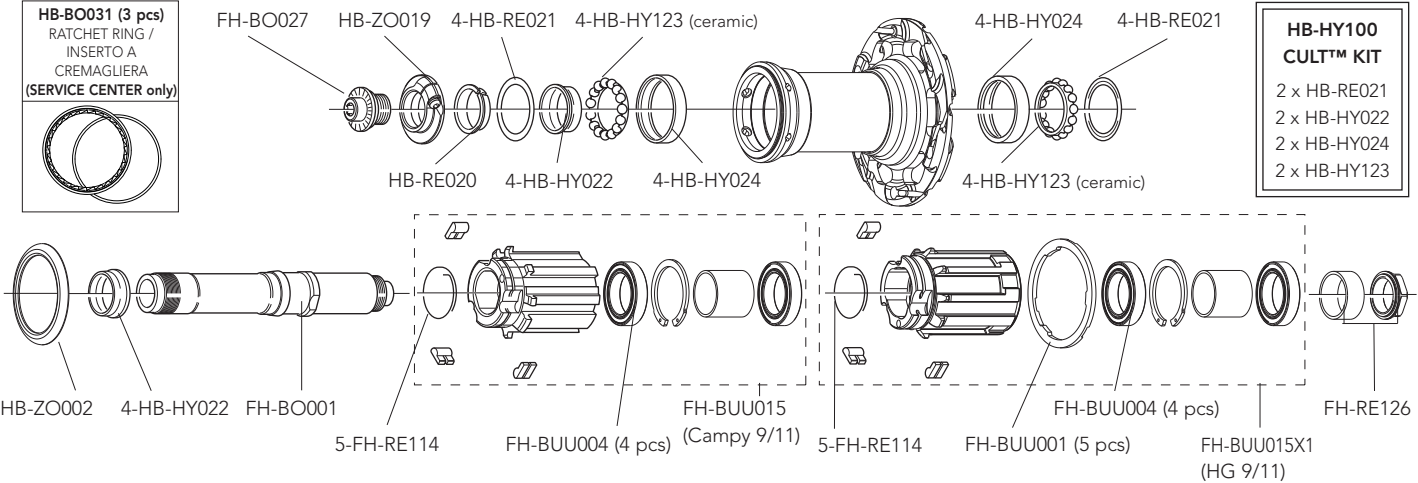
HUBS		
		
	HB-BO031 (3 pcs) RATCHET RING / INSERTO A CREMAGLIERA (SERVICE CENTER only) HB-HY100 CULT™ KIT 2 x HB-RE021 2 x HB-HY022 2 x HB-HY024 2 x HB-HY123	
QUICK-RELEASES	QR12-BUUBFR	front + rear

BORA ULTRA 50

TUBULAR

BORA ULTRA 50

TUBULAR

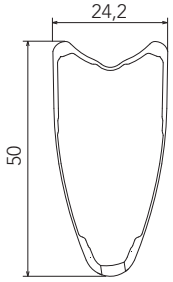RIM		
	FRONT RIM REAR RIM VALVE HOLE VALVE HOLE BUSHING VALVE EXTENSION DIAMETER BRAKE SHOES	WH-101BO50 (bright) / WH-101BO50DK (dark) WH-102BO50 (bright) / WH-102BO50DK (dark) 6,5 mm WH-BUU002 (5 pcs.) UT-HU050 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)


SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT50 WH-019BOT50 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

**WARNING!**

Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

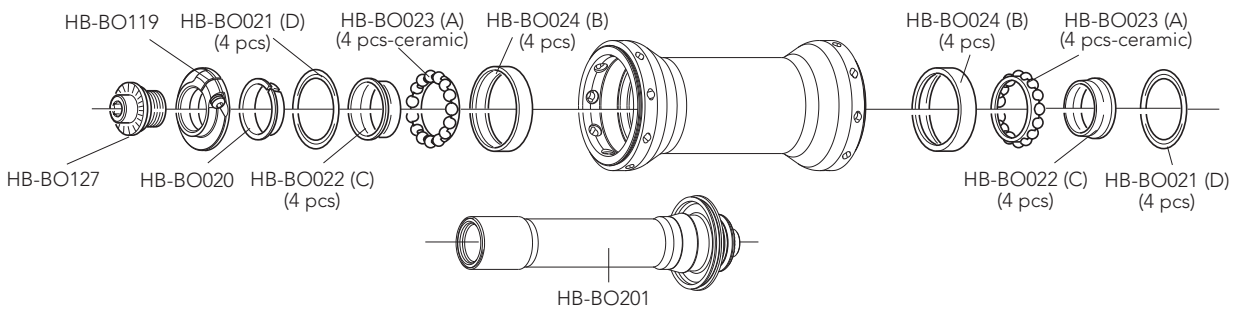

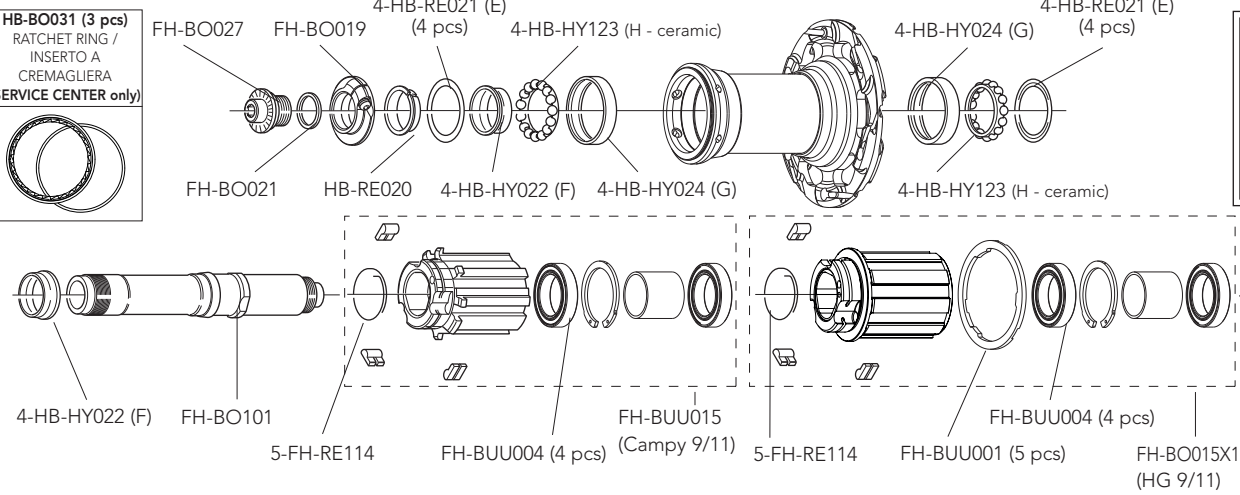

QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

WHEELS


WHEELS

BORA ULTRA 35

TUBULAR

BORA ULTRA 35

TUBULAR

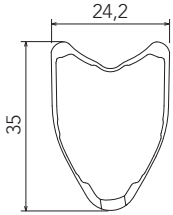RIM		
	FRONT RIM REAR RIM VALVE HOLE VALVE HOLE BUSHING DIAMETER BRAKE SHOES	WH-201BO35 (bright) - WH-201BO35DK (dark) WH-202BO35 (bright) - WH-202BO35DK (dark) 6,5 mm WH-BUU002 (5 pcs.) 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)


SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-019BOT35 WH-018BOT35 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

 **WARNING!**


Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.


HUBS

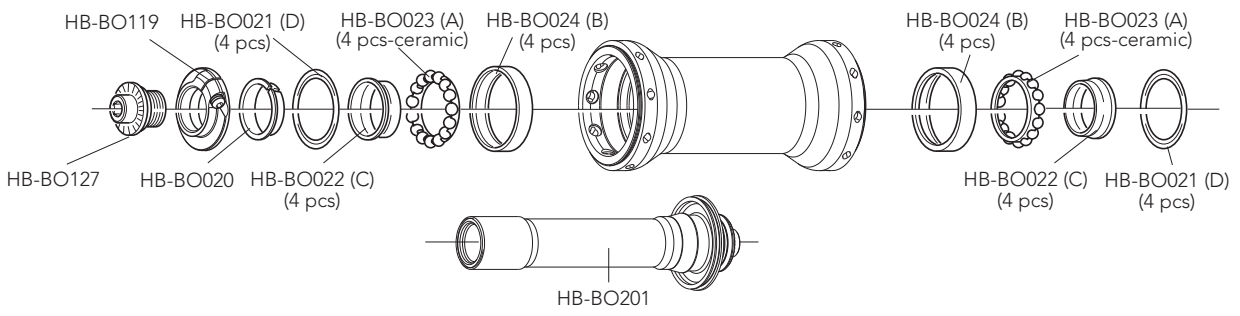

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



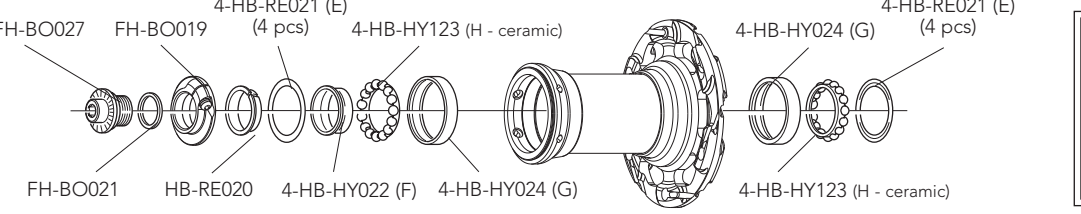

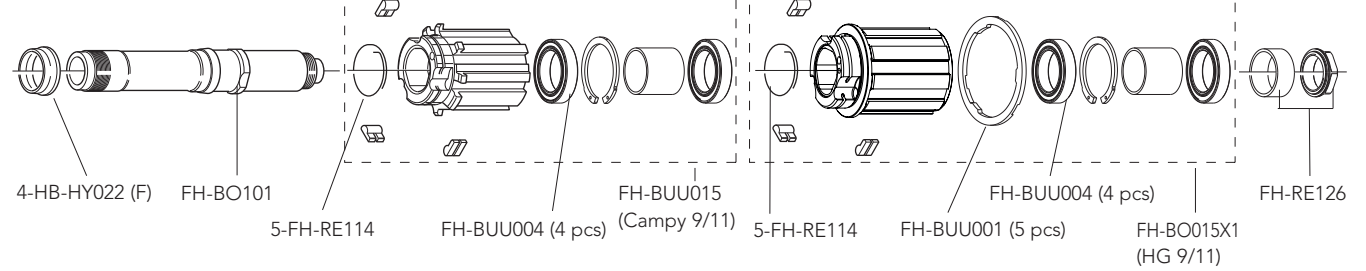

QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

68


69

BORA ULTRA 50

CLINCHER

BORA ULTRA 50

CLINCHER

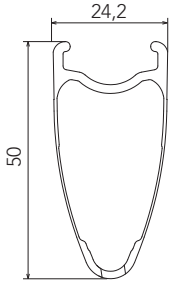RIM		
	FRONT RIM	WH-103BO50 (bright) / WH-103BO50DK (dark)
	REAR RIM	WH-104BO50 (bright) / WH-104BO50DK (dark)
	VALVE HOLE	6,5 mm
	VALVE HOLE BUSHING	WH-BUU002 (5 pcs.)
	VALVE EXTENSION	UT-HU050
	DIAMETER	700C (622 x 17C)
	BRAKE SHOES	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)


SPOKES		
FRONT / REAR LH SPOKE	WH-016BOT50	4 spokes + 4 nipples
REAR RH SPOKE	WH-019BOT50	4 spokes + 4 nipples
NIPPLES	WH-015BO80	black - 10 pieces
NIPPLE INSERT	UT-WH160	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH050	nipple-guide
SPOKE SPANNER	UT-WH090	spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body


**WARNING!**

Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HUBS

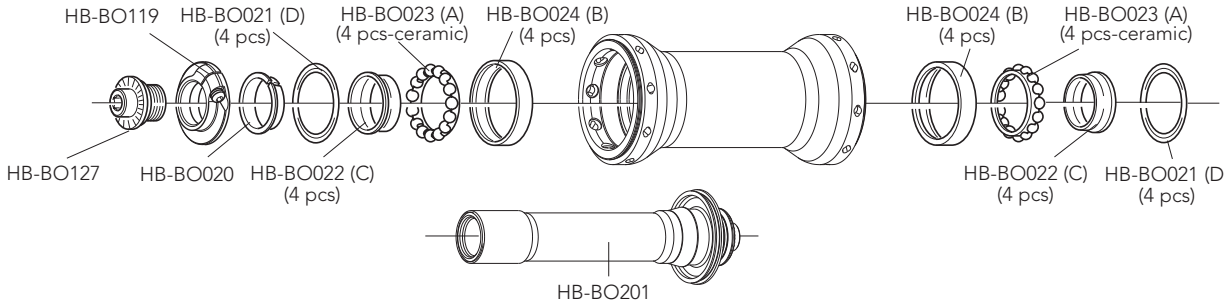

HB-BO100 CULT™ KIT front
2 x A, 2 x B,
2 x C, 2 x D

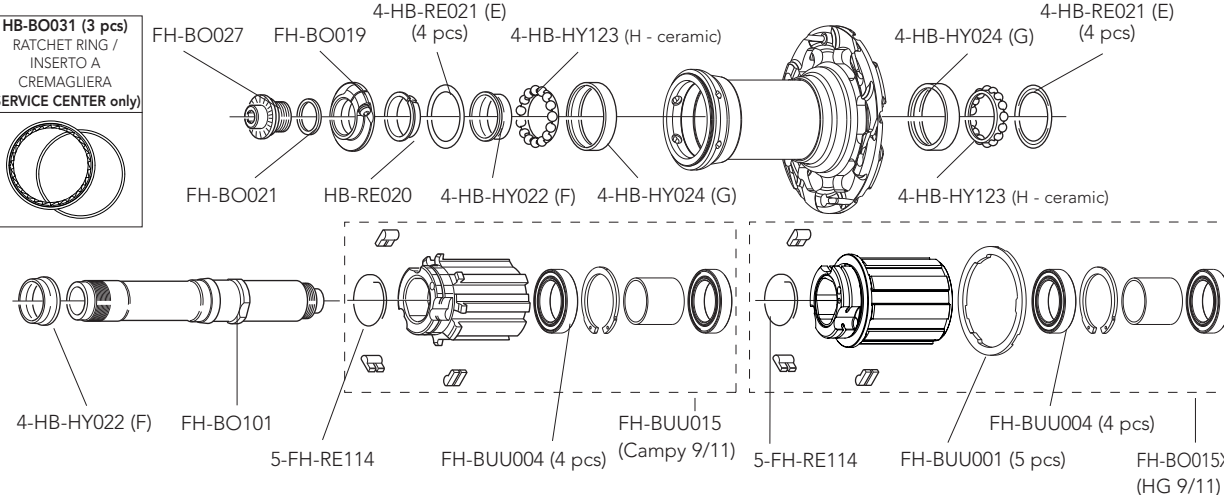

HB-HY100 CULT™ KIT
2 x A, 2 x B,
2 x C, 2 x D


QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

BORA ULTRA 35

CLINCHER

BORA ULTRA 35

CLINCHER

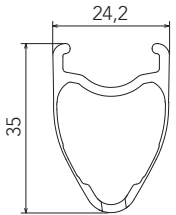
RIM		
	FRONT RIM REAR RIM VALVE HOLE VALVE HOLE BUSHING DIAMETER BRAKE SHOES	WH-103BO35 (bright) - WH-103BO35DK (dark) WH-104BO35 (bright) - WH-104BO35DK (dark) 6,5 mm WH-BUU002 (5 pcs.) 700C (622 x 17C) for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-019BOT35 WH-018BOT35 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

⚠ WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.


HUBS

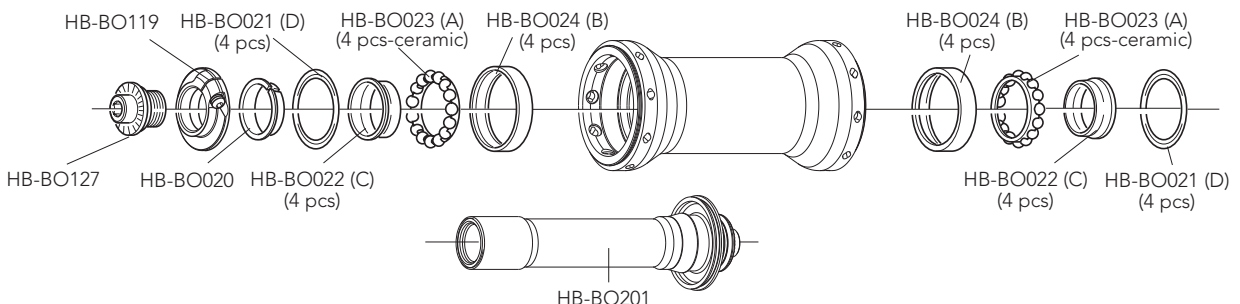

HB-BO100
CULT™ KIT
front
2 x A, 2 x B,
2 x C, 2 x D

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



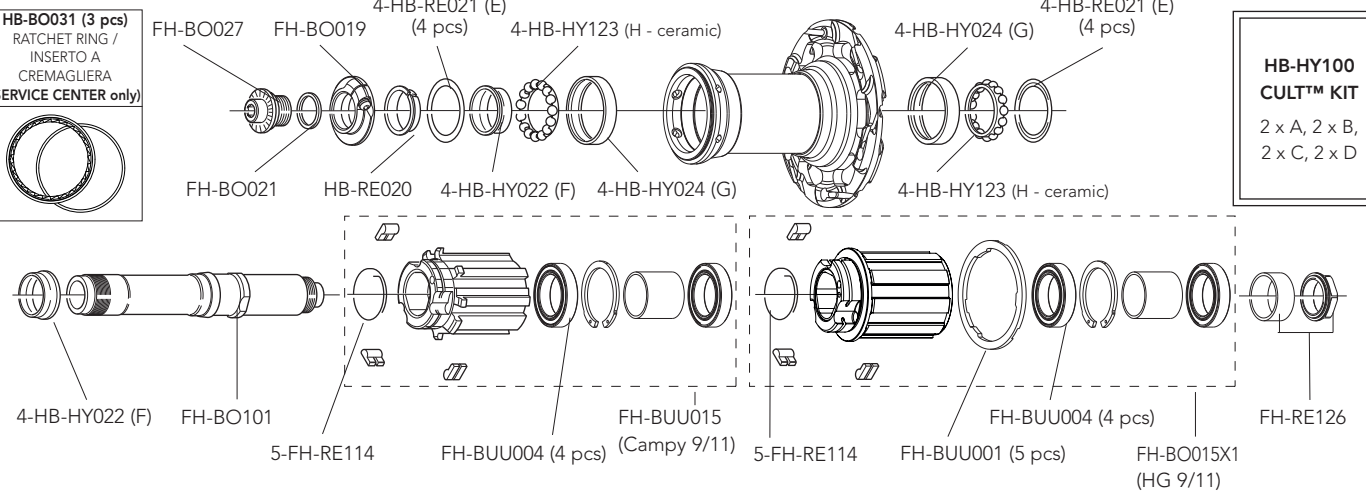

HB-HY100
CULT™ KIT
2 x A, 2 x B,
2 x C, 2 x D

QUICK-RELEASES

QR12-BUUBFR


front + rear

WHEELS

73

BORA ONE 50

TUBULAR

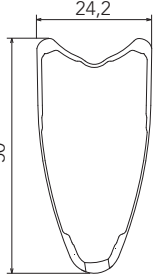RIM		
	VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER BRAKE SHOES	6,5 mm UT-HU050 WH-BUU002 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)
SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT50 WH-019BOT50 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches
ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body


**WARNING!**

Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

BORA ONE 50

TUBULAR


HUBS

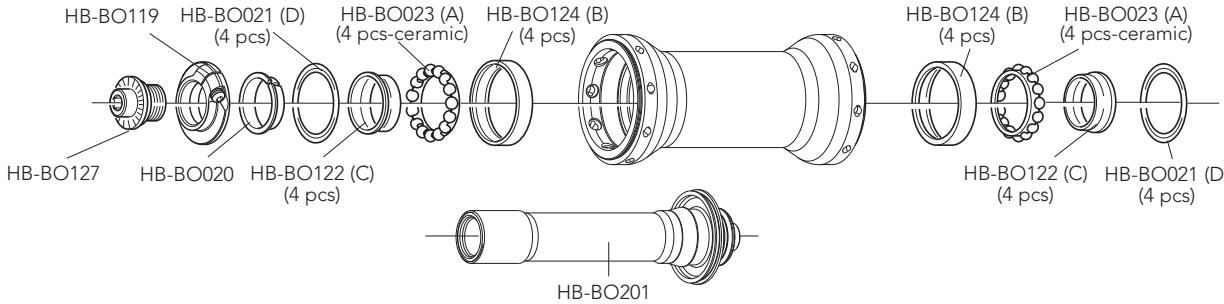

HB-SH200
USB™ KIT
front
2 x A, 2 x B,
2 x C, 2 x D

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



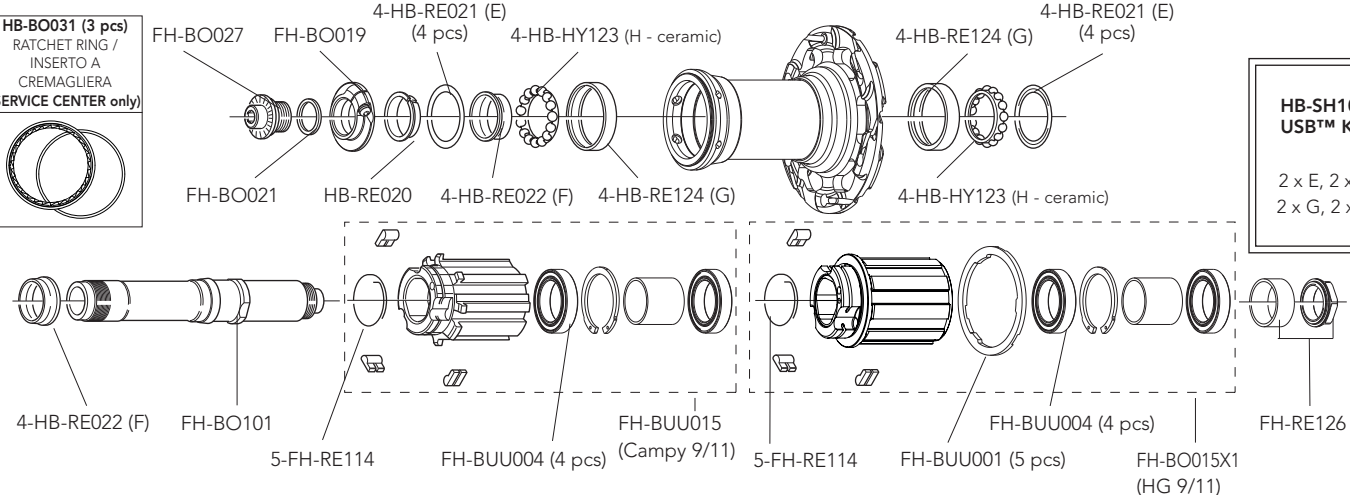

HB-SH100
USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H

QUICK-RELEASES

QR12-BUUBFR

front + rear

WHEELS

74


75

BORA ONE 35

TUBULAR

BORA ONE 35

TUBULAR

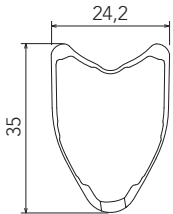
RIM		
	VALVE HOLE VALVE HOLE BUSHING DIAMETER BRAKE SHOES	6,5 mm WH-BUU002 634 mm for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-019BOT35 WH-018BOT35 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

! WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.


HUBS

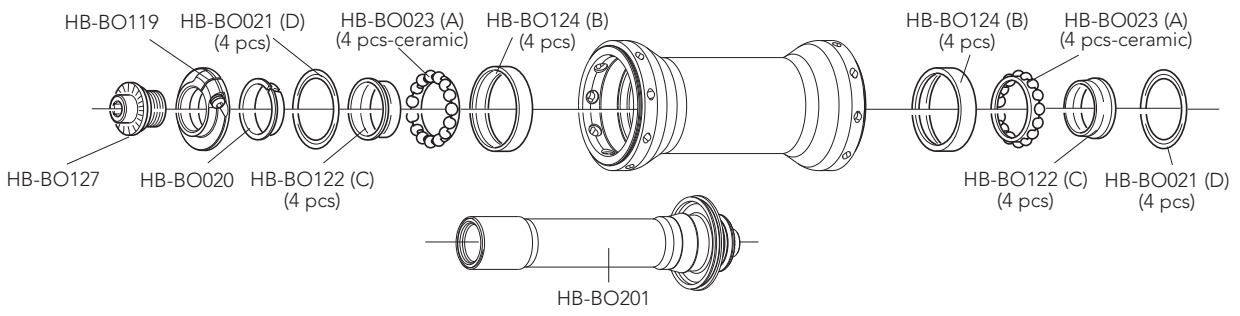


HB-SH200
USB™ KIT
front
2 x A, 2 x B,
2 x C, 2 x D

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



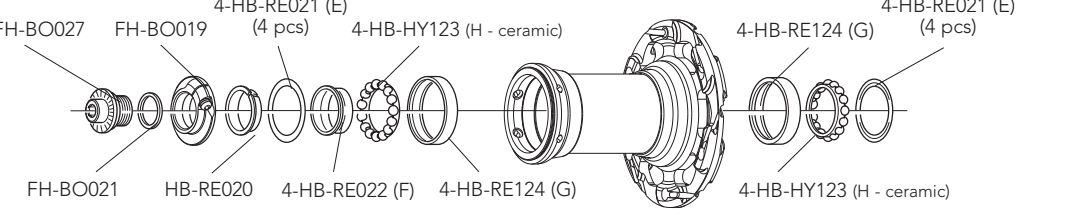

HB-SH100
USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H

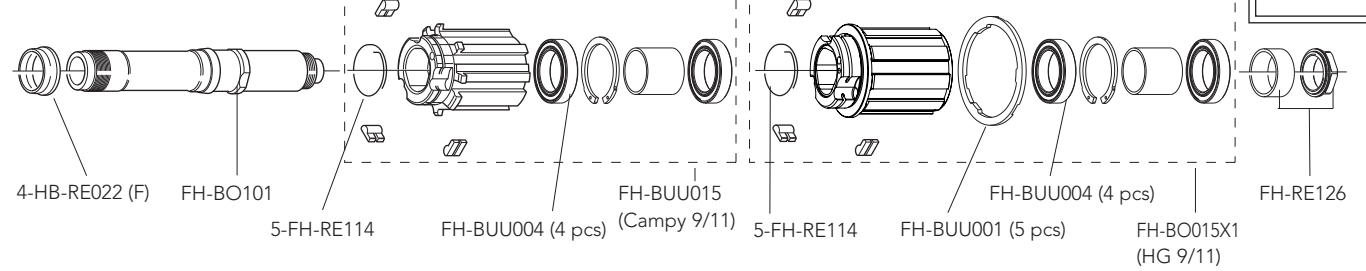

QUICK-RELEASES

QR12-BUUBFR

front + rear

76

77


BORA ONE 50

CLINCHER

BORA ONE 50

CLINCHER

WHEELS

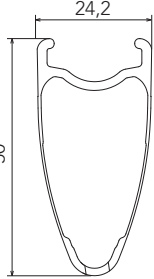
RIM		
	VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER BRAKE SHOES	6,5 mm UT-HU050 WH-BUU002 700C (622 x 17C) for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)
SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT50 WH-019BOT50 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches
ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

 **WARNING!**

Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

WHEELS


HUBS

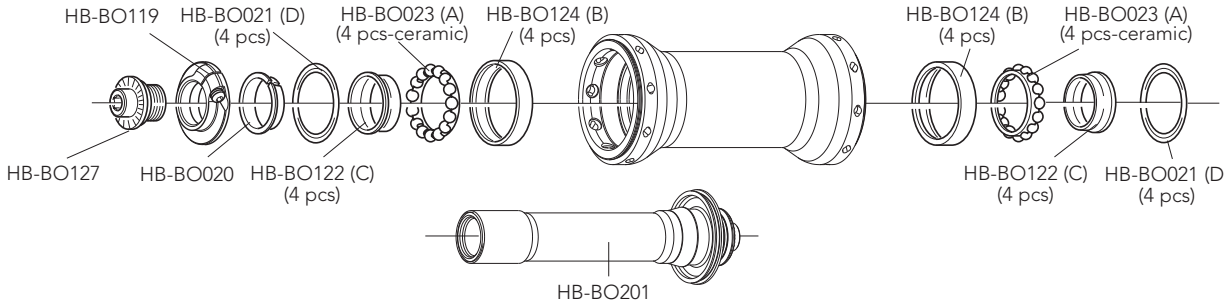


HB-SH200
USB™ KIT
front
2 x A, 2 x B,
2 x C, 2 x D

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



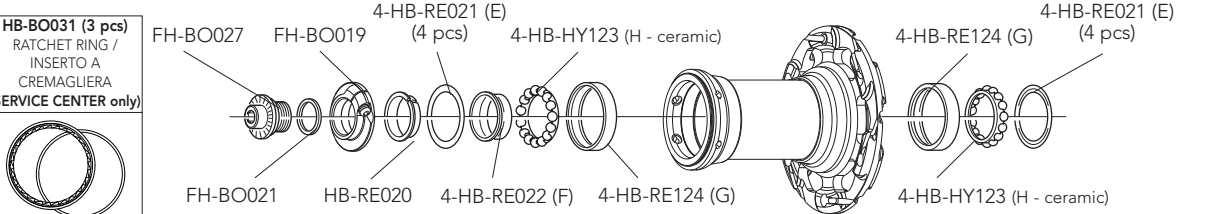

HB-SH100
USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H

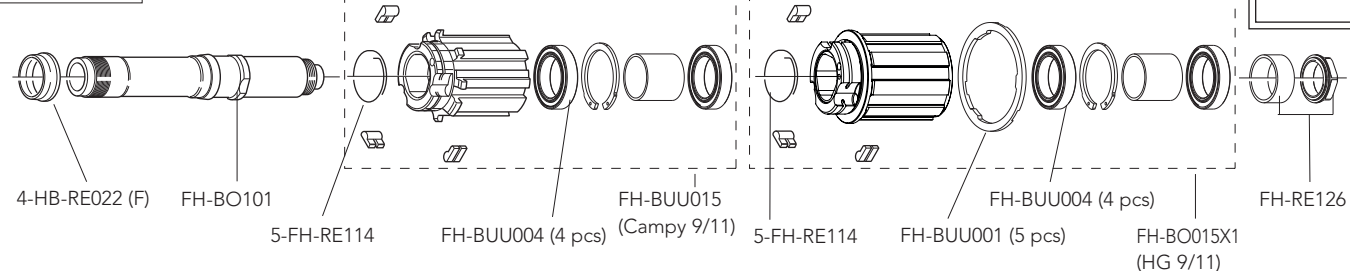

QUICK-RELEASES

QR12-BUUBFR


front + rear

BORA ONE 35

CLINCHER

BORA ONE 35

CLINCHER

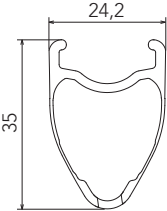RIM		
	VALVE HOLE VALVE HOLE BUSHING DIAMETER BRAKE SHOES	6,5 mm WH-BUU002 700C (622 x 17C) for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)

SPOKES		
FRONT / REAR LH SPOKE REAR RH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-019BOT35 WH-018BOT35 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples 4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

! WARNING!
Because of the high temperatures reached when breaking, we recommend you use only glue for tubular tires specifically for carbon fibre rims.
A causa delle alte temperature raggiunte in frenata, vi consigliamo di utilizzare solamente colla per tubolari che sia specifica per i soli cerchi in fibra di carbonio.

HB-BO119

HB-BO021 (D)
(4 pcs)

HB-BO023 (A)
(4 pcs-ceramic)

HB-BO124 (B)
(4 pcs)

HB-BO127

HB-BO020

HB-BO122 (C)
(4 pcs)

HB-BO124 (B)
(4 pcs)

HB-BO023 (A)
(4 pcs-ceramic)

HB-BO122 (C)
(4 pcs)

HB-BO021 (D)
(4 pcs)

HB-BO201

HB-SH200
USB™ KIT
front
2 x A, 2 x B,
2 x C, 2 x D

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)

FH-BO027

FH-BO019

4-HB-RE021 (E)
(4 pcs)

4-HB-HY123 (H - ceramic)

4-HB-RE124 (G)
(4 pcs)

4-HB-RE021 (E)
(4 pcs)

4-HB-HY123 (H - ceramic)

FH-BO021

HB-RE020

4-HB-RE022 (F)

4-HB-RE124 (G)

4-HB-RE022 (F)

FH-BO101

5-FH-RE114

FH-BUU004 (4 pcs)

FH-BUU015
(Campy 9/11)

5-FH-RE114

FH-BUU001 (5 pcs)

FH-BO015X1
(HG 9/11)

FH-RE126

HB-SH100
USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H

QUICK-RELEASES

QR12-BUUBFR


front + rear

BULLET ULTRA H50

CLINCHER


BULLET ULTRA H50


CULT BEARINGS

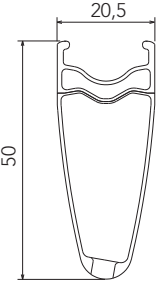
RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER	WH-003BUU (no labels) WH-004BUU (no labels) LAB-BUU12 (front+rear) - LAB-BUU12DK (front+rear DARK) 6,5 mm UT-WH130M (male extension) - UT-WH130F (female extension) WH-BUU002 (5 pcs.) 700C (622 x 15C)

SPOKES		
COMPLETE FRONT KIT COMPLETE REAR KIT MINI-KIT NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-03BUU KIT-04BUU KIT-500BUU WH-015BUU UT-WH160 UT-WH050 UT-WH090	18 front spokes + 18 nipples 14 rear right spokes + 7 rear left spokes + 21 nipples 2 front spokes + 2 rear right spokes + 2 rear left spokes + 6 nipples red - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets <i>(please note that every HG11 rear wheel/FW body package contains the spacer)</i>
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

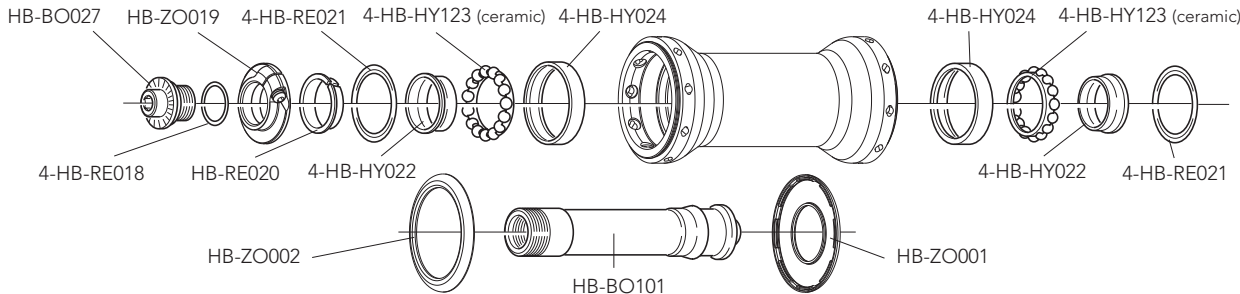HUBS		
		

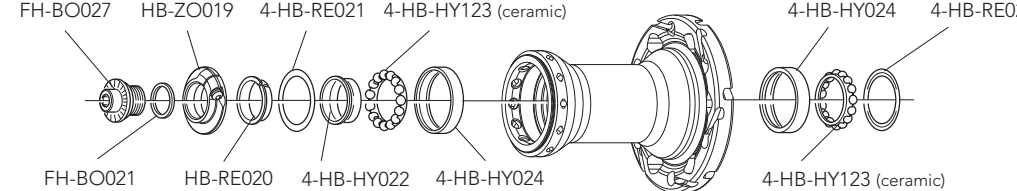HB-BO031 (3 pcs) RATCHET RING / INSERTO A CREMAGLIERA (SERVICE CENTER only) 		HB-HY100 CULT™ KIT 2 x HB-RE021 2 x HB-HY022 2 x HB-HY024 2 x HB-HY123
--	---	---

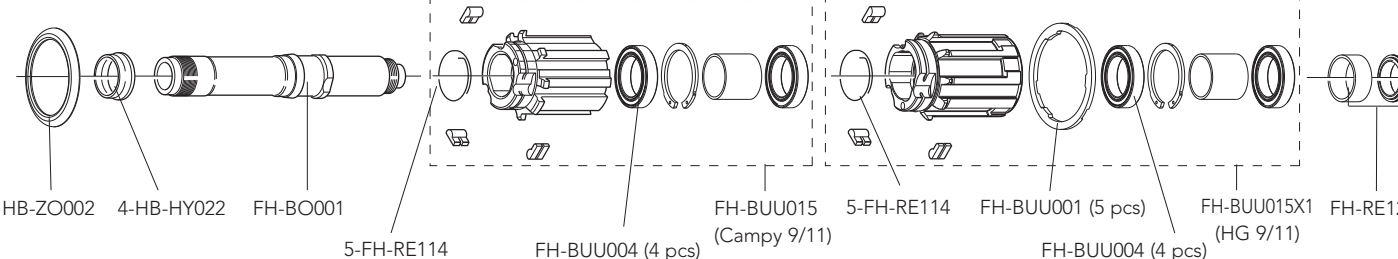		
---	--	--


QUICK-RELEASES	QR12-BUUBFR	front + rear
----------------	-------------	--------------

BULLET H50

CLINCHER

BULLET H50



STANDARD BEARINGS

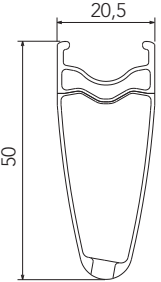
RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER	WH-003BUU (no labels) WH-004BUU (no labels) LAB-BU12 (front+rear) 6,5 mm UT-WH130M (male extension) - UT-WH130F (female extension) WH-BUU002 (5 pcs.) 700C (622 x 15C)

SPOKES		
COMPLETE FRONT KIT COMPLETE REAR KIT MINI-KIT NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-03BU KIT-04BU KIT-500BU WH-015BU UT-WH160 UT-WH050 UT-WH090	18 front spokes + 18 nipples 14 right rear spokes + 7 rear left spokes + 21 nipples 2 front spokes + 2 right rear spokes + 2 rear left spokes + 6 nipples 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets <i>(please note that every HG11 rear wheel/FW body package contains the spacer)</i>
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

HUBS

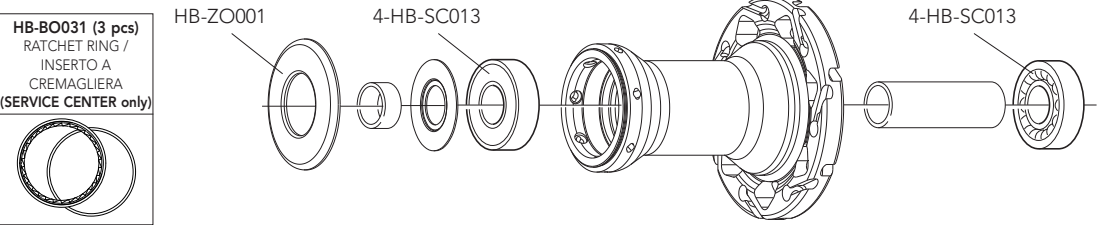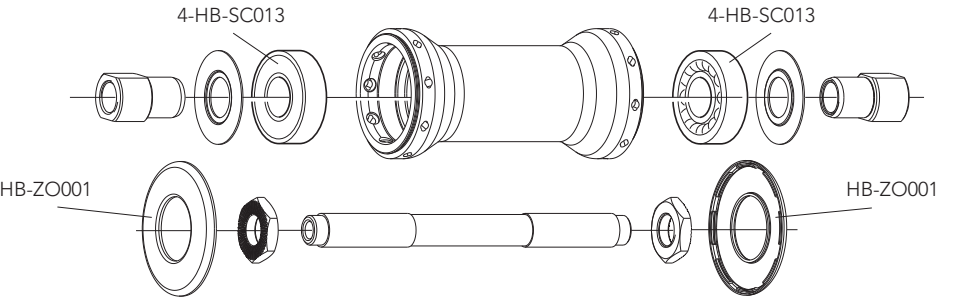

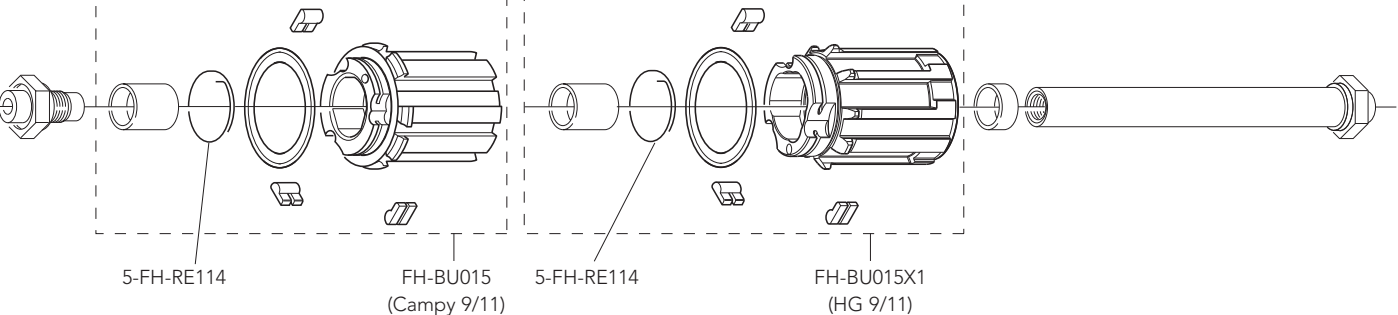

QUICK-RELEASES

QR12-ZOBFR


front + rear

SHAMAL MILLE

CLINCHER




SHAMAL MILLE

CLINCHER

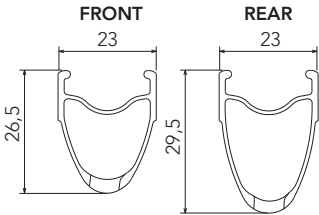RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER BRAKE SHOES	WH-103SHM (no labels) WH-104SHM (no labels) LAB-SHMC17 (front+rear) 6,5 mm 622 X 17C for rims with Plasma Electrolytic Oxydation treatment: BR-PEO5001 (for brakes with retention spring fixing) - BR-PEO500X1 (for brakes with screw fixing)

SPOKES		
FRONT KIT REAR KIT COMPLETE FRONT SPOKE COMPLETE REAR RIGHT SPOKE COMPLETE REAR LEFT SPOKE NIPPLES SPOKE RING NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-03SHM KIT-24SHB WH-105SHM WH-008SHM WH-007SHM WH-015SHM UT-WH010 UT-WH020 UT-WH080 UT-WH270	16 front/rear right spokes 14 front/rear right spokes + 7 rear left spokes spoke + nipple spoke + nipple spoke + nipple 10 pieces anti-rotation spokes magnet-attractor for nipple nipple-guide spoke wrench (SERVICE CENTER Only)

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

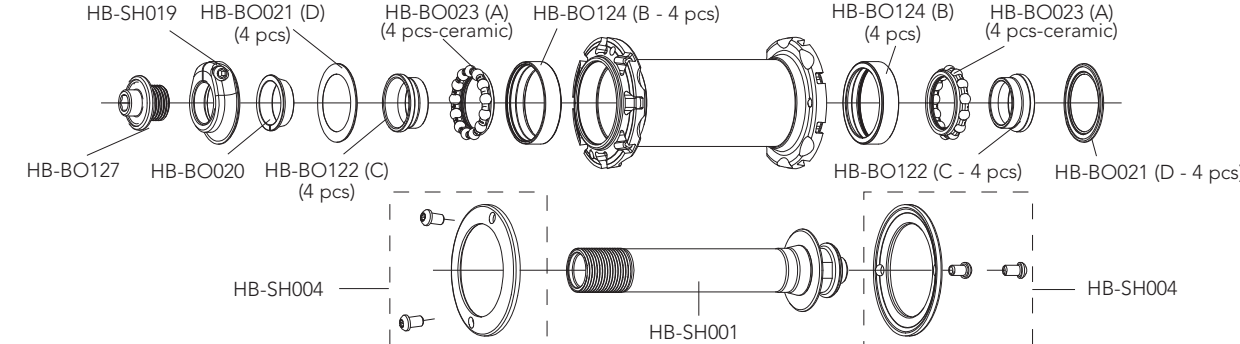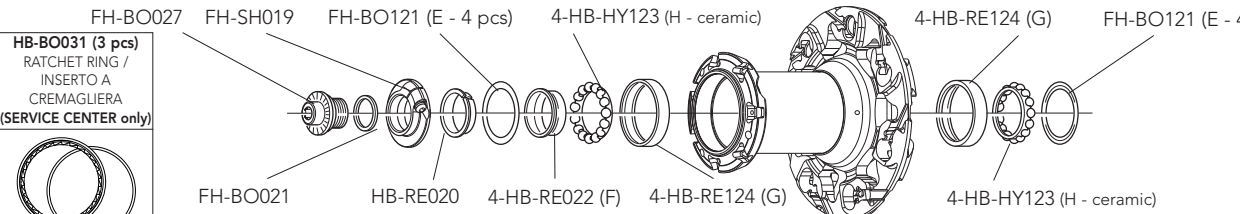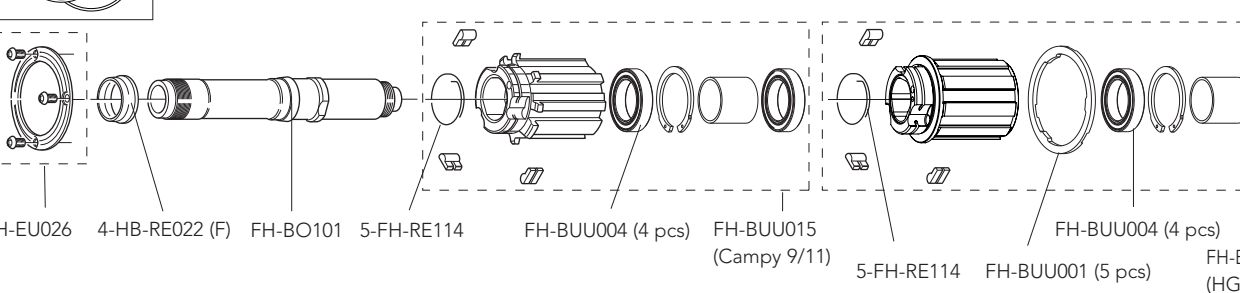
HUBS		
	HB-SH200 USB™ KIT front 2 x A, 2 x B, 2 x C, 2 x D	
	HB-SH100 USB™ KIT 2 x E, 2 x F, 2 x G, 2 x H	
		
QUICK-RELEASES	QR13-80FR	front + posteriore

SHAMAL ULTRA

C17 2-WAY FIT

SHAMAL ULTRA


C17 2-WAY FIT

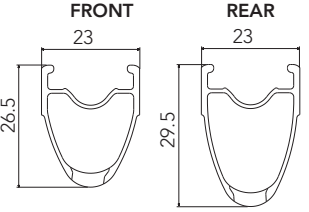RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE 2-WAY FIT™ VALVE VALVE HOLE BUSHING DIAMETER	WH-313SHB (with labels) WH-314SHB (with labels) LAB-SH2B17 (front+rear) 7,5 mm WH-SH101 5-WH-SH002 (for valve seat reduction - 5 pieces) 634 mm


SPOKES		
FRONT KIT REAR KIT COMPLETE FRONT SPOKE COMPLETE REAR LEFT SPOKE COMPLETE REAR RIGHT SPOKE NIPPLES SPOKE RING NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-23SHB KIT-34SHB WH-205SHB WH-207SHB WH-208SHB WH-115SH UT-WH010 UT-WH020 UT-WH080 UT-WH070	16 front/rear right spokes 14 front/rear right spokes + 7 rear left spokes spoke + nipple spoke + nipple spoke + nipple 10 pieces anti-rotation spokes magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body


HUBS

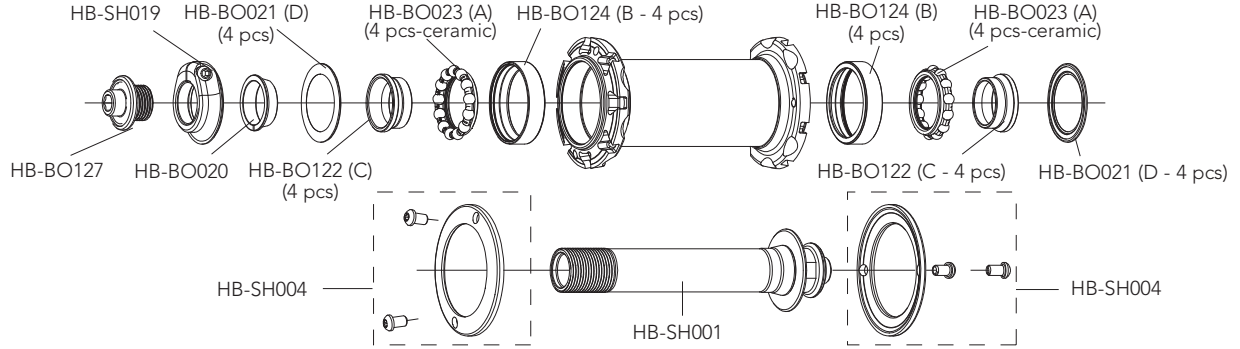

HB-SH200 USB™ KIT front
2 x A, 2 x B,
2 x C, 2 x D

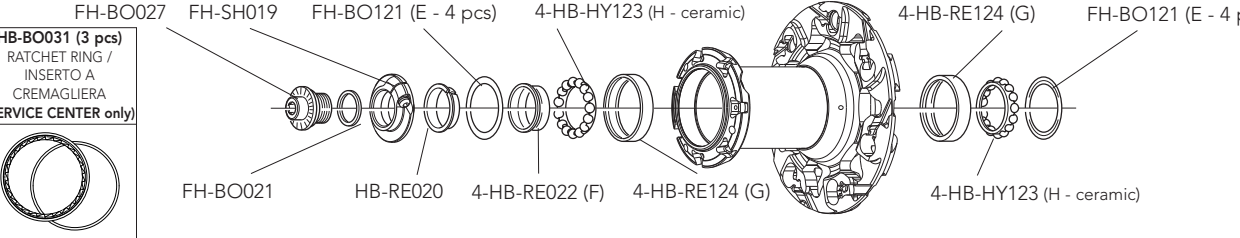

HB-SH100 USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H

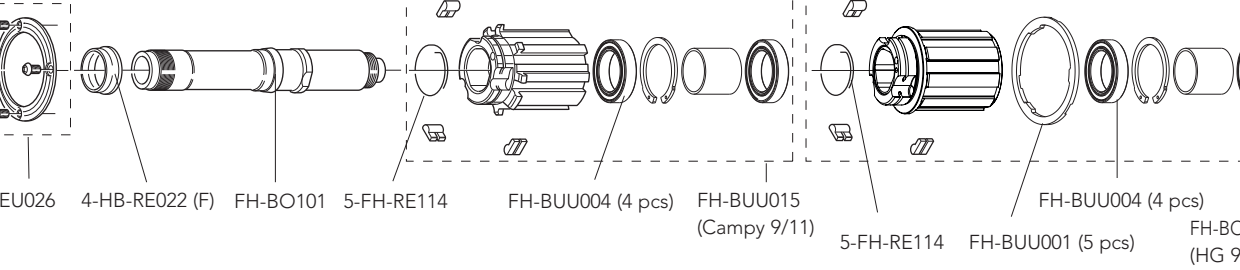


QUICK-RELEASES	QR13-80FR	front + posteriore
----------------	-----------	--------------------

SHAMAL ULTRA

C17 CLINCHER

SHAMAL ULTRA


C17 CLINCHER

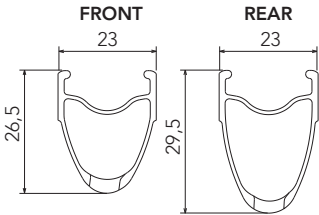RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER	WH-403SHB (with labels) WH-404SHB (with labels) LAB-SHCB17 6,5 mm 622 X 17C


SPOKES		
FRONT KIT REAR KIT COMPLETE FRONT COMPLETE REAR LEFT SPOKE COMPLETE REAR RIGHT SPOKE NIPPLES SPOKE RING NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-23SHB KIT-34SHB WH-205SHB WH-207SHB WH-208SHB WH-115SH UT-WH010 UT-WH020 UT-WH080 UT-WH070	16 front/rear right spokes 14 front/rear right spokes + 7 rear left spokes spoke + nipple spoke + nipple spoke + nipple 10 pieces anti-rotation spokes magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body


HUBS

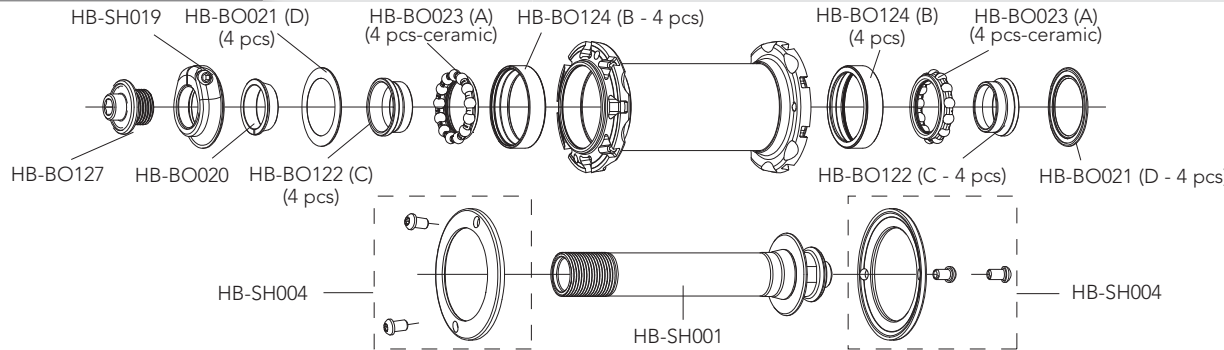

HB-SH200 USB™ KIT front
2 x A, 2 x B,
2 x C, 2 x D

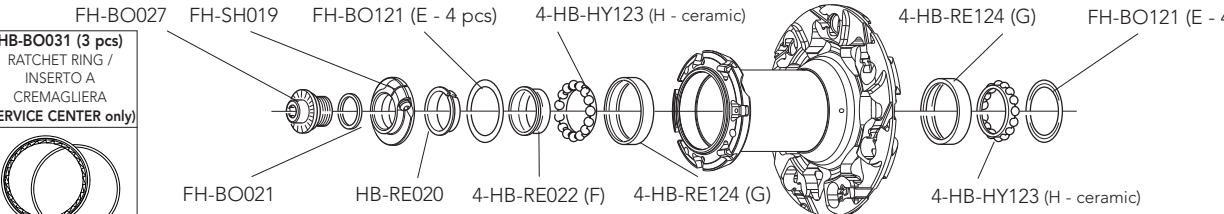

HB-SH100 USB™ KIT
2 x E, 2 x F,
2 x G, 2 x H

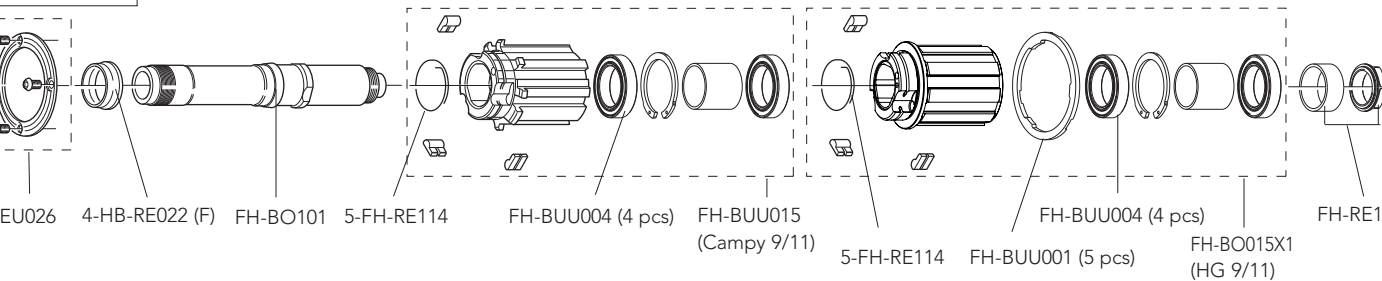


QUICK-RELEASES

QR13-80FR

front + posteriore




WHEELS


WHEELS

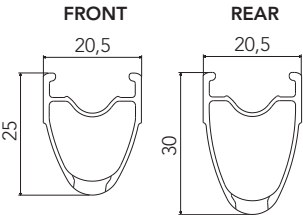RIM		
	FRONT RIM	WH-213SHB (no labels)
	REAR RIM	WH-214SHB (no labels)
	LABEL KIT	LAB-EU2B12 (for a pair of front+rear wheels)
	VALVE HOLE	6,5 mm
	2-WAY FIT™ VALVE	WH-SH001
	VALVE HOLE BUSHING	5-WH-SH002 (for valve seat reduction - 5 pieces)
	DIAMETER	634 mm

SPOKES		
FRONT KIT	KIT-13SHB	16 front/rear right spokes
REAR KIT	KIT-24SHB	14 front/rear right spokes + 7 rear left spokes
COMPLETE FRONT/REAR RIGHT SPOKE	WH-105SHB	spoke + nipple
COMPLETE REAR LEFT SPOKE	WH-107SHB	spoke + nipple
NIPPLES	10-WH-015SH	10 pieces
SPOKE RING	UT-WH010	anti-rotation spokes
NIPPLE INSERT	UT-WH020	magnet-attractor for nipple
NIPPLE MAGNET	UT-WH080	nipple-guide
SPOKE SPANNER	UT-WH070	spoke wrenches



ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

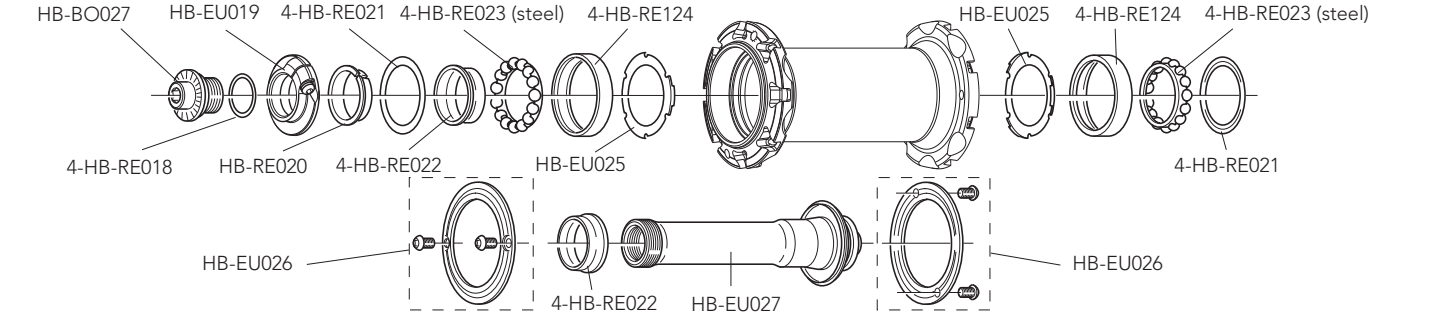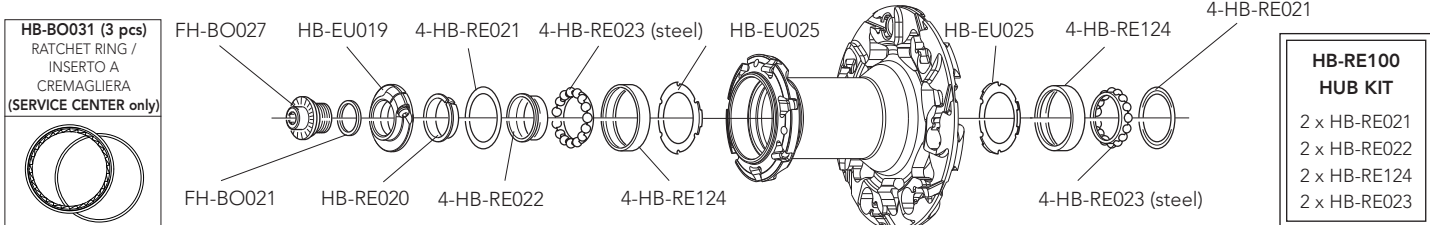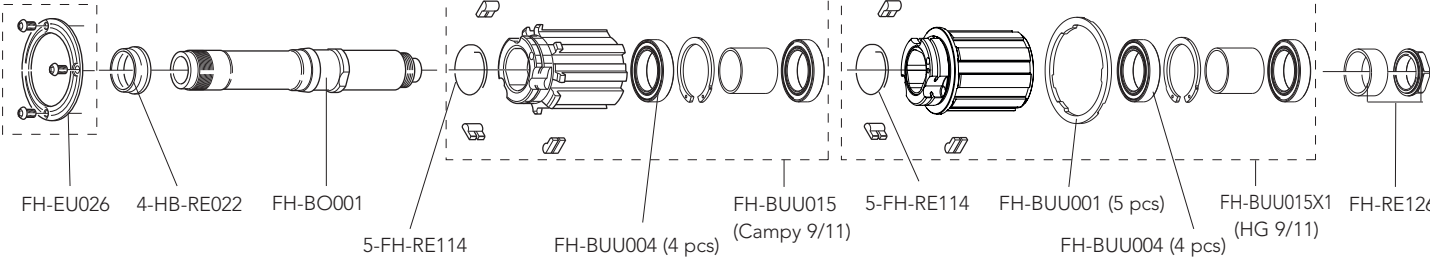
HUBS		
		
		
		
QUICK-RELEASES	QR11-20FRB	front + rear

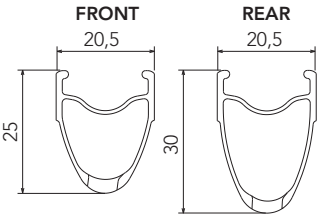RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER	WH-303SHB (no labels) WH-304SHB (no labels) LAB-EUCB12 (for a pair of front+rear wheels) 6,5 mm 622 X 15C

SPOKES		
FRONT KIT REAR KIT COMPLETE FRONT/REAR RIGHT SPOKE COMPLETE REAR LEFT SPOKE NIPPLES SPOKE RING NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	KIT-13SHB KIT-24SHB WH-105SHB WH-107SHB 10-WH-015SH UT-WH010 UT-WH020 UT-WH080 UT-WH070	16 front/rear right spokes 14 front/rear right spokes + 7 rear left spokes spoke + nipple spoke + nipple 10 pieces anti-rotation spokes magnet-attractor for nipple nipple-guide spoke wrenches

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

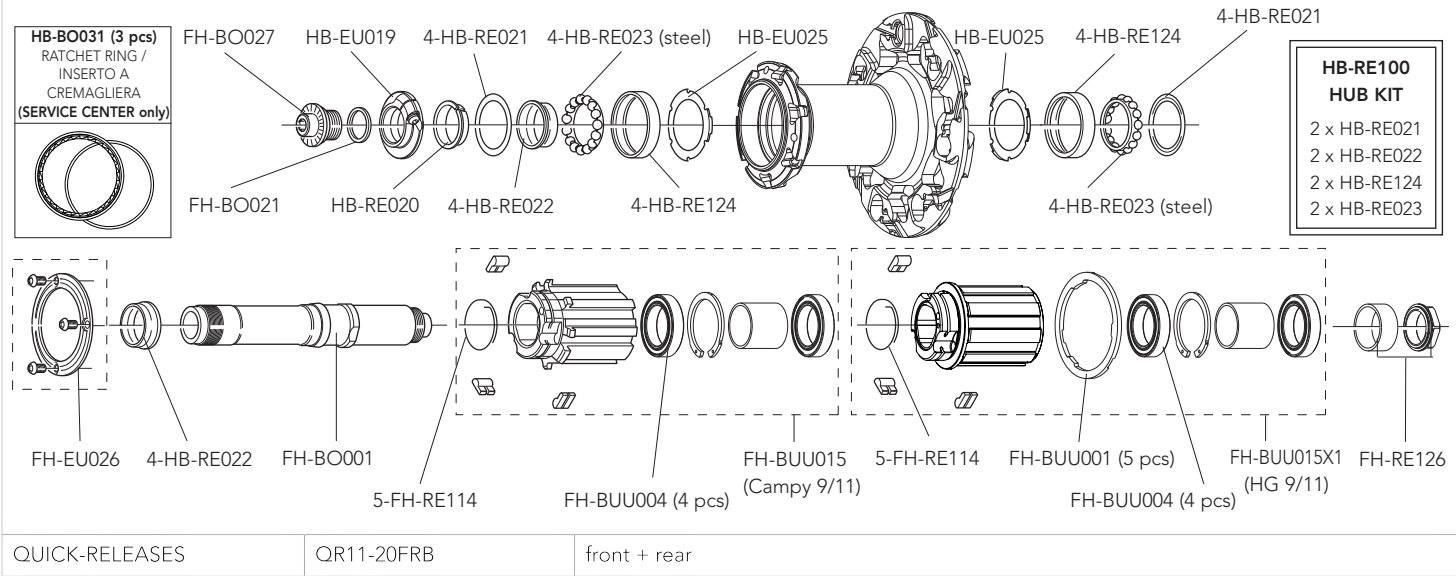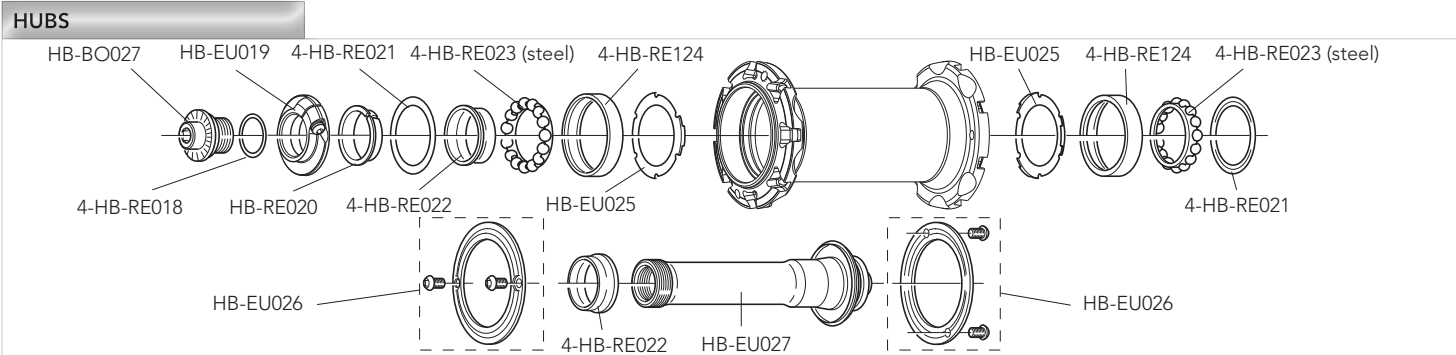

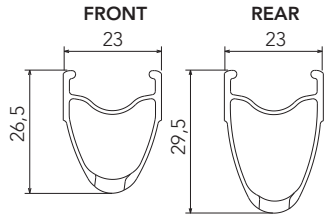RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER	WH-403ZOB (with labels) WH-504ZOB (with labels) LAB-ZOCB17 (for a pair of front+rear wheels) 6,5 mm 622 X 17C


SPOKES		
FRONT SPOKE REAR RH SPOKE REAR LH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET	WH-116ZOC WH-118ZOC WH-119ZOC WH-115ZO UT-WH035 UT-WH050	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples 50 pieces magnet-attractor for nipple nipple-guide

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/FW body package contains the spacer)
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BO015X1 FW body

HUBS		
QUICK-RELEASES	QR12-ZOBFR	front + rear

KHAMSIN ASYMMETRIC G3

CLINCHER

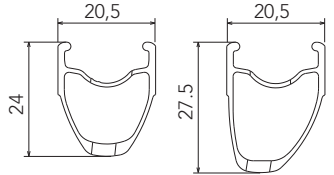
RIM		
	RIM-TAPE LABEL KIT VALVE HOLE DIAMETER	2-WH-RT12 (18 mm - 2 pieces) LAB-KHCB14G3 (BLACK - front+rear) 6,5 mm 700C (622 x 15C)

SPOKES		
FRONT SPOKE REAR RH SPOKE REAR LH SPOKE	WH-016KHC WH-018KHC WH-119KHC	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets <i>(please note that every HG11 rear wheel/FW body package contains the spacer)</i>
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BUU015X1 FW body

KHAMSIN ASYMMETRIC G3

CLINCHER

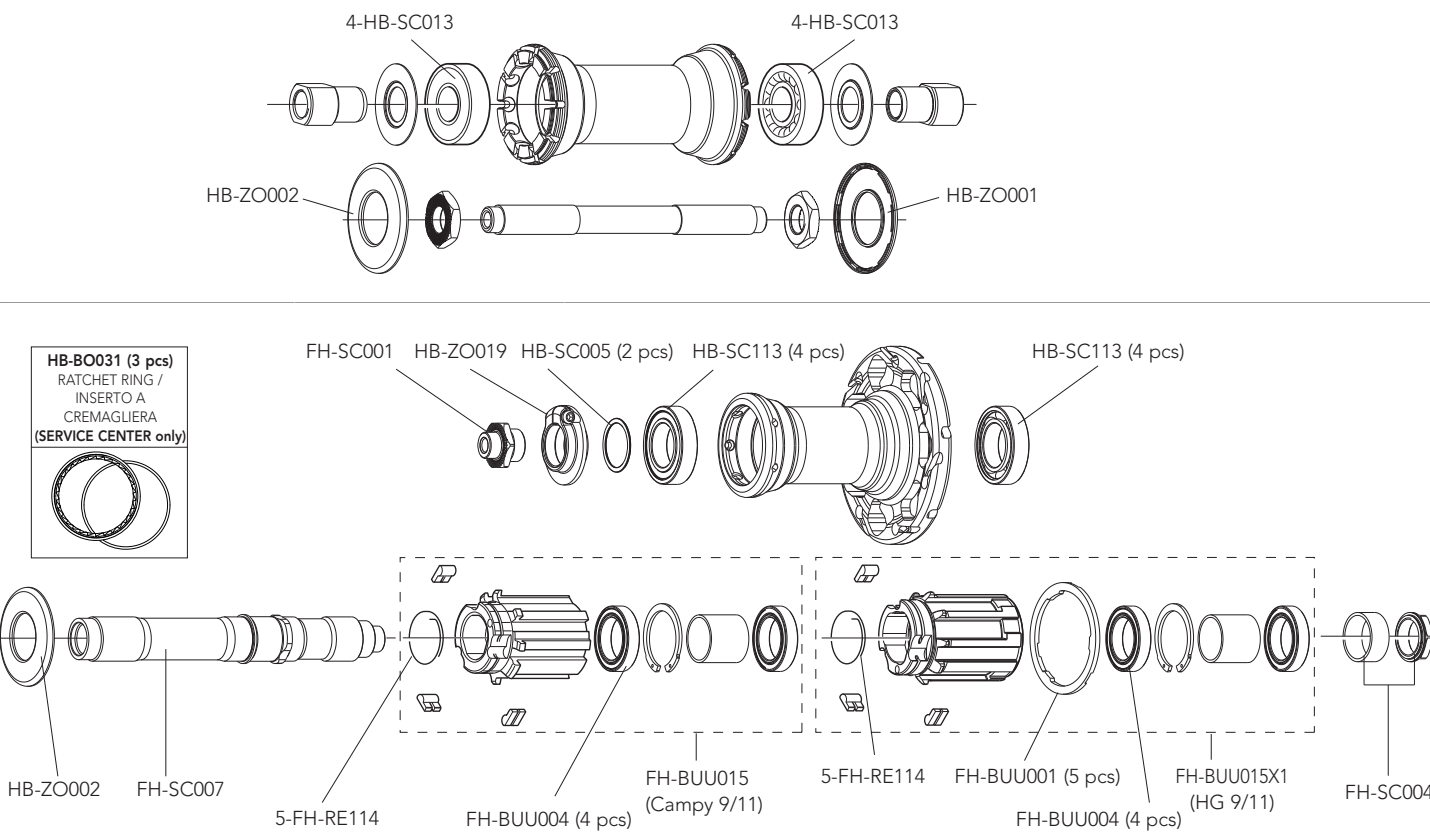HUBS		
		
QUICK-RELEASES	QR8-40BFR	front + rear

RIM

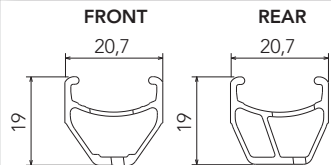

FRONT RIM
REAR RIM
RIM-TAPE
LABEL KIT
VALVE HOLE
DIAMETER

WH-403NE (with labels)
WH-404NE (with labels)
2-WH-RT12 (18 mm - 2 pieces)
LAB-NECC07 (for a pair of front+rear wheels)
6,5 mm
700C (622 x 15C)

SPOKES

COMPLETE FRONT KIT
COMPLETE REAR KIT
MINI-KIT
NUTS
NUT SUPPORTING PLATES

KIT-33NE
KIT-34NE
KIT-500NE
10-WH-010BO
10-WH-011EU

22 front spokes + 22 nuts + 22 nut supporting plates
 12 rear right spokes + 12 rear left spokes + 24 nuts + 24 nut supporting plates
 2 front spokes + 2 rear right spokes + 2 rear left spokes + 6 nuts + 6 nut supporting plates
 10 pieces
 10 pieces

ACCESSORIES

Spacer for HG11 FW body

FH-BUU001

5 pcs - to be used only with 9/10s sprockets
(please note that every HG11 rear wheel/FW body package contains the spacer)



Spring+3 pawls

FH-BO014 / FH-BO014X

for FH-BUU015 FW body / for FH-BUU015X1 FW body

NEUTRON ULTRA


HUBS

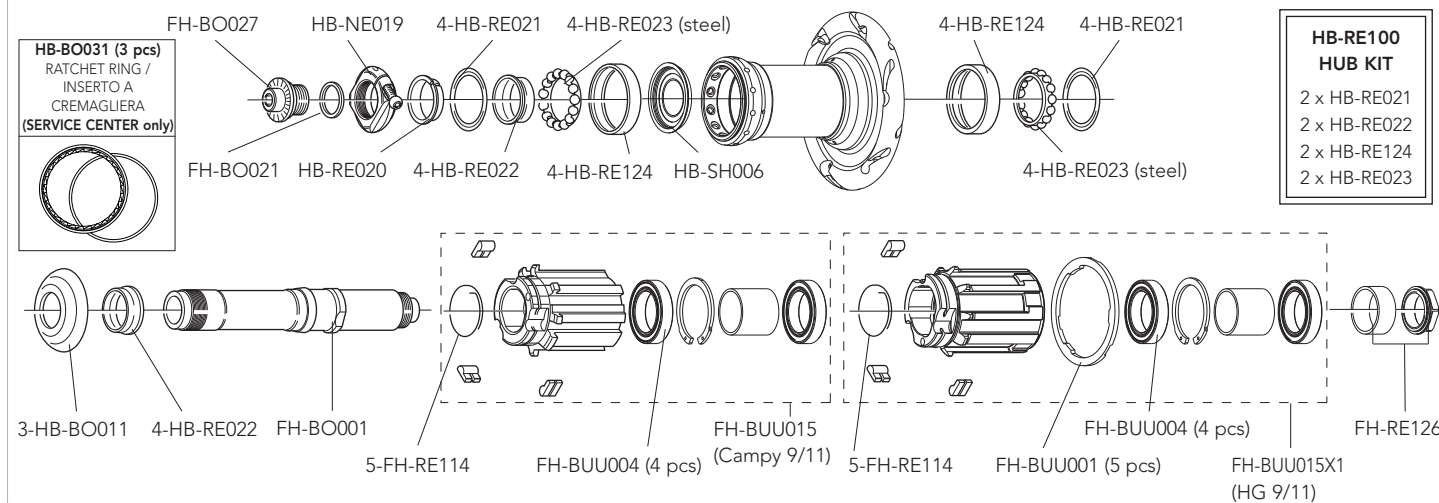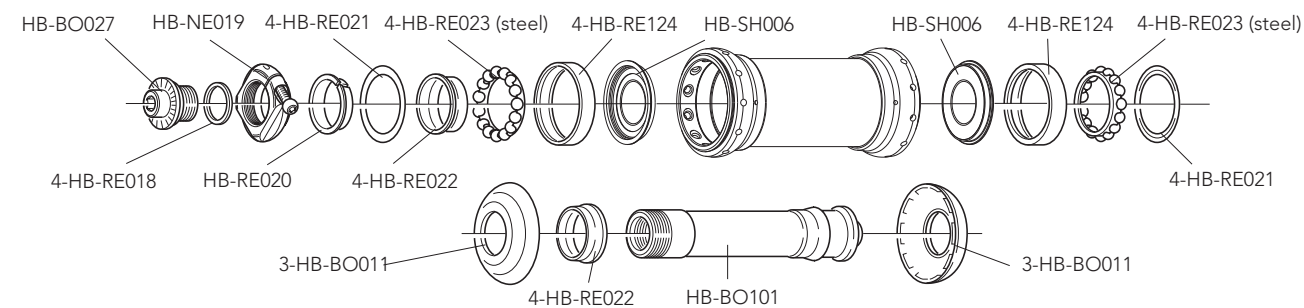



QUICK-RELEASES


QR11-20FRB


front + rear

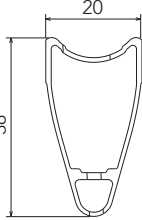RIM		
	FRONT RIM REAR RIM LABEL KIT VALVE HOLE DIAMETER	WH-001PI (with labels) WH-002PI (with labels) LAB-PIT07 (for a pair of front+rear wheels) 6,5 mm 634 mm

SPOKES		
COMPLETE FRONT KIT COMPLETE REAR KIT MINI-KIT NUTS NUT SUPPORTING PLATES	KIT-01PI KIT-02PI KIT-100PI 10-WH-010BO 10-WH-011EU	22 front spokes + 22 nuts + 22 nut supporting plates 24 rear spokes + 24 nuts + 24 nut supporting plates 3 front spokes + r3 ear spokes + 6 nuts + 6 nut supporting plates 10 pieces 10 pieces

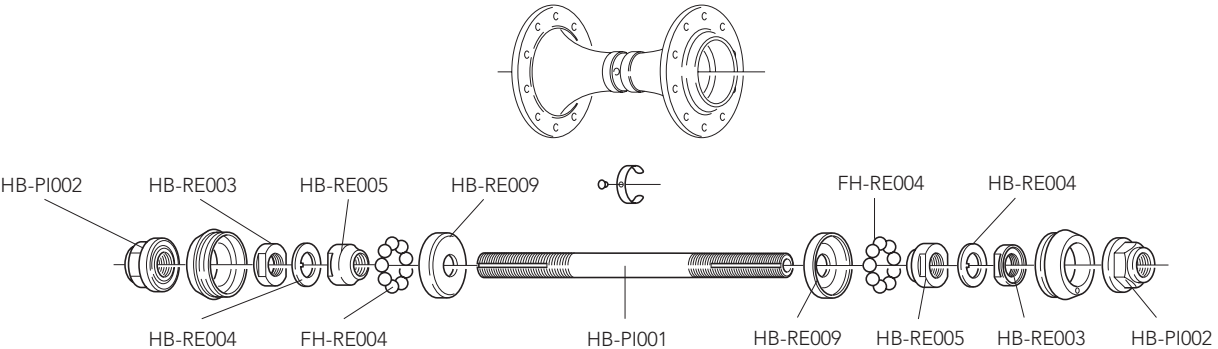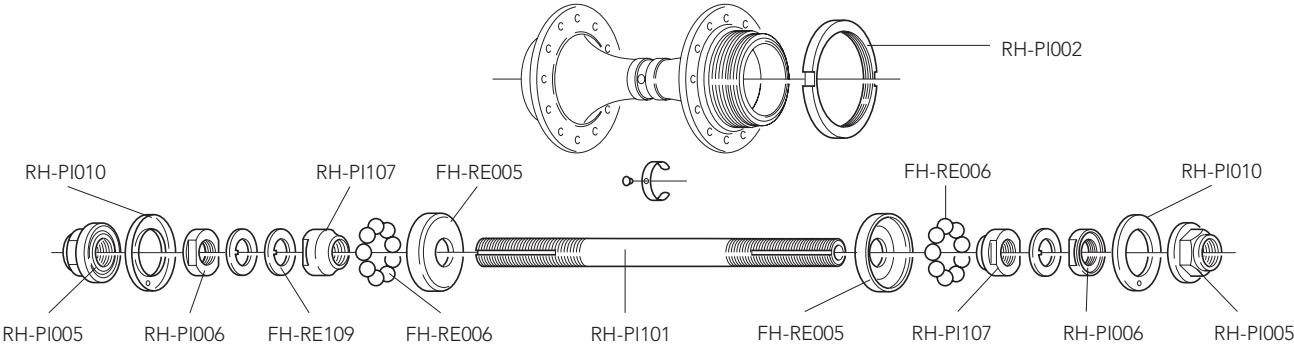
HUBS	
	
	

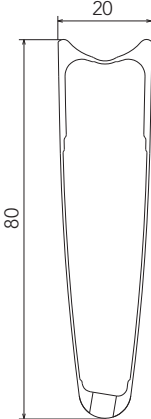RIM		
	FRONT RIM VALVE HOLE VALVE EXTENSION VALVE HOLE BUSHING DIAMETER	WH-101BO80 6,5 mm UT-WH160M (male extension) - UT-WH160F (female extension) WH-BUU002 (5 pcs.) 634 mm
SPOKES		
FRONT SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET SPOKE SPANNER	WH-016BOT80 WH-015BO80 UT-WH160 UT-WH050 UT-WH090	4 spokes + 4 nipples black - 10 pieces magnet-attractor for nipple nipple-guide spoke wrenches

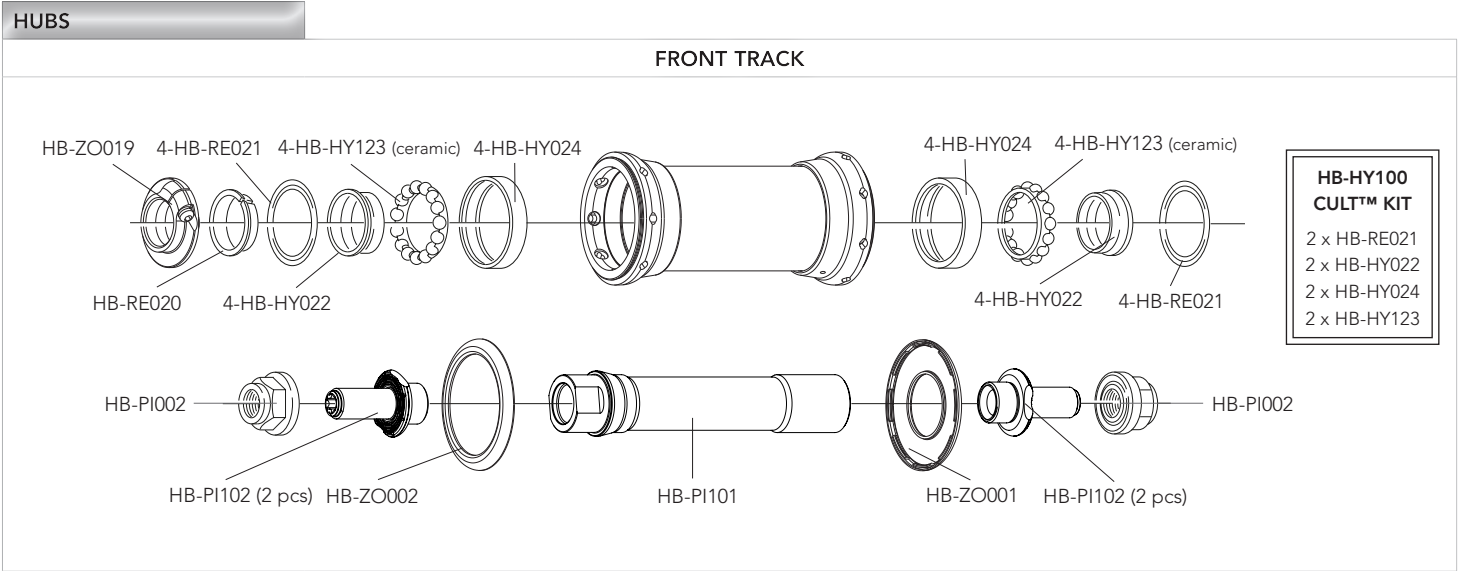


RIM		
VALVE HOLE STICKERS	WH-100BOTT (5 pcs)	
VALVE HOLE BUSHINGS	WH-BUU002	


**HB-BO100
CULT™ KIT
front**
2 x HB-BO023
2 x HB-BO024
2 x HB-BO022
2 x HB-BO021

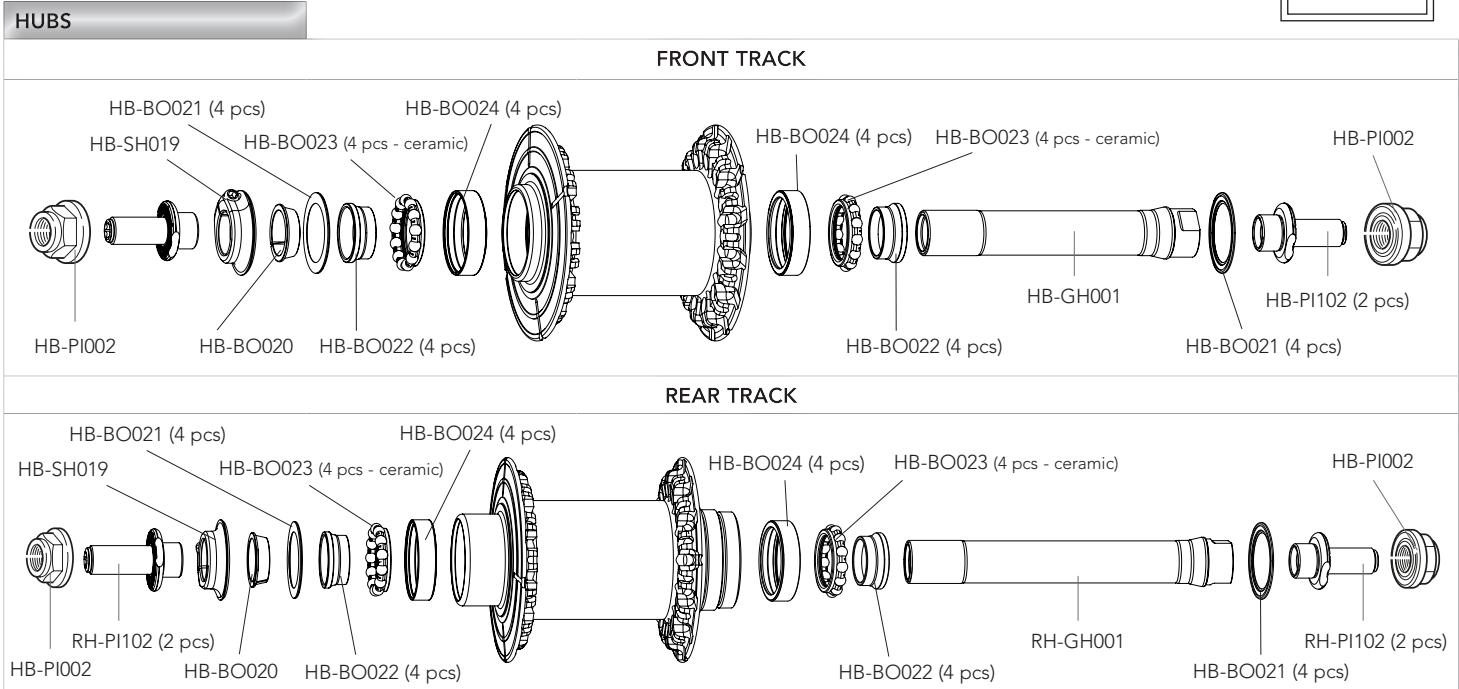

RIM		
VALVE HOLE STICKERS	WH-100BOTT (5 pcs)	
VALVE HOLE BUSHINGS	WH-BUU002	
VALVE EXTENSION	UT-WH130M	
BRAKE SHOES	for carbon rims - BR-BO500 (for brakes with retention spring or interference fixing) - BR-BO500X1 (for brakes with screw fixing)	

ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets <i>(please note that every HG11 rear wheel/FW body package contains the spacer)</i>
Spring+3 pawls	FH-BO014 / FH-BO014X	for FH-BUU015 FW body / for FH-BUU015X1 FW body

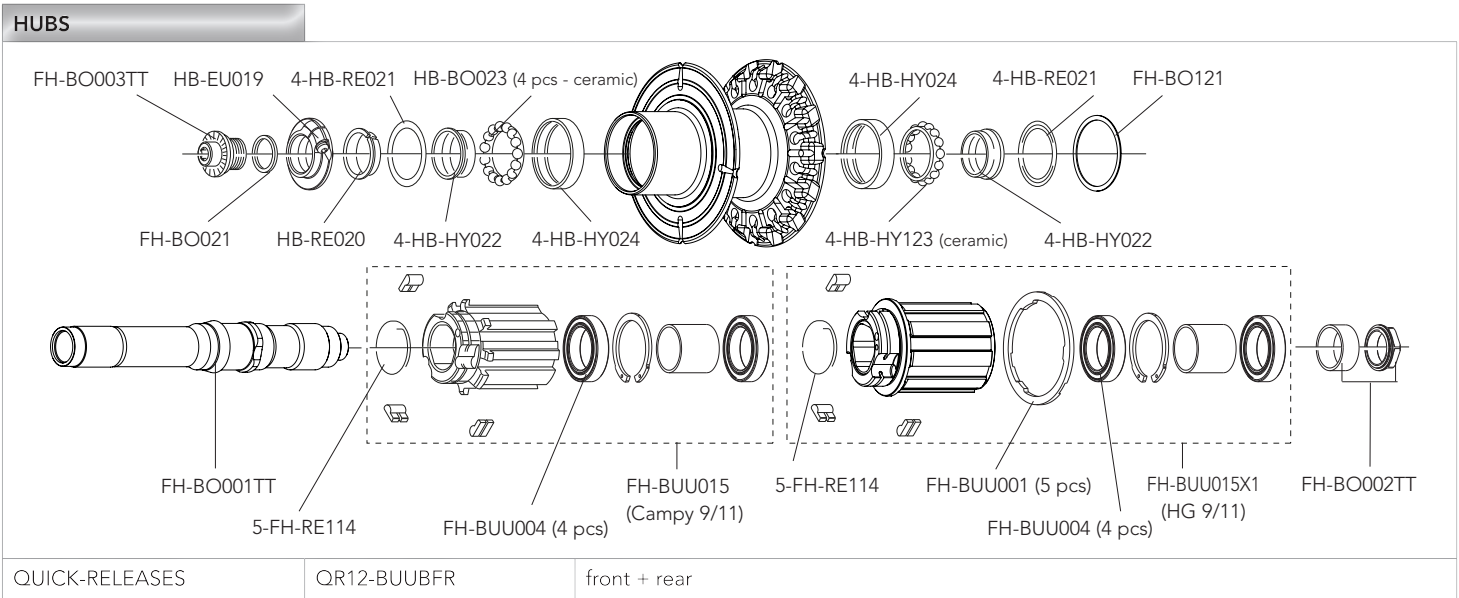


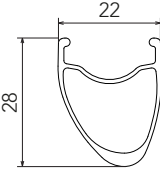RIM		
	FRONT/REAR RIM LABEL KIT VALVE HOLE DIAMETER	WH-003ZODB (with labels) LAB-ZOCDB17 (for a pair of front+rear wheels) 6,5 mm 622 X 17C

SPOKES		
FRONT RH / REAR RH SPOKE FRONT LH SPOKE REAR LH SPOKE NIPPLES NIPPLE INSERT NIPPLE MAGNET	WH-016ZODB WH-017ZODB WH-019ZODB 50-WH-015ZO UT-WH035 UT-WH050	4 spokes + 4 nipples 4 spokes + 4 nipples 4 spokes + 4 nipples 50 pieces magnet-attractor for nipple nipple-guide


ACCESSORIES		
Spacer for HG11 FW body	FH-BUU001	5 pcs - to be used only with 9/10s sprockets (please note that every HG11 rear wheel/HG11 FW body package contains the spacer)
Spring+3 pawls	FH-BO014 FH-BO014X	for FH-BUU015 FW body for FH-BO015X1 FW body
QUICK-RELEASES	QR17-ZODBFK QR17-ZODBRK	front quick-release +kit QR rear quick-release + kit QR

HUBS

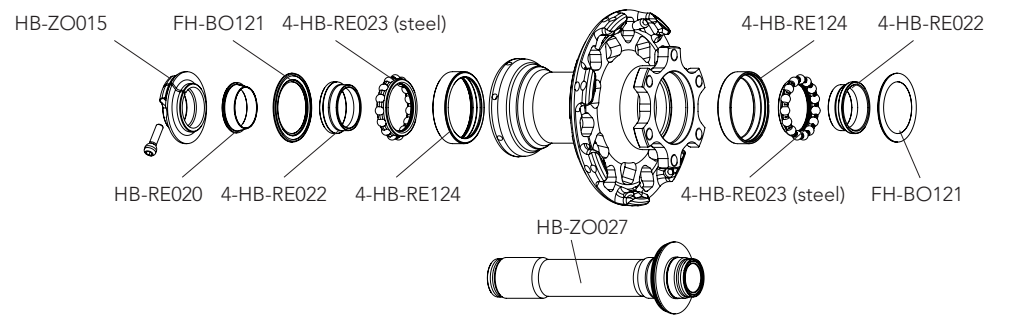

HB-BO031 (3 pcs)
RATCHET RING /
INSERTO A
CREMAGLIERA
(SERVICE CENTER only)



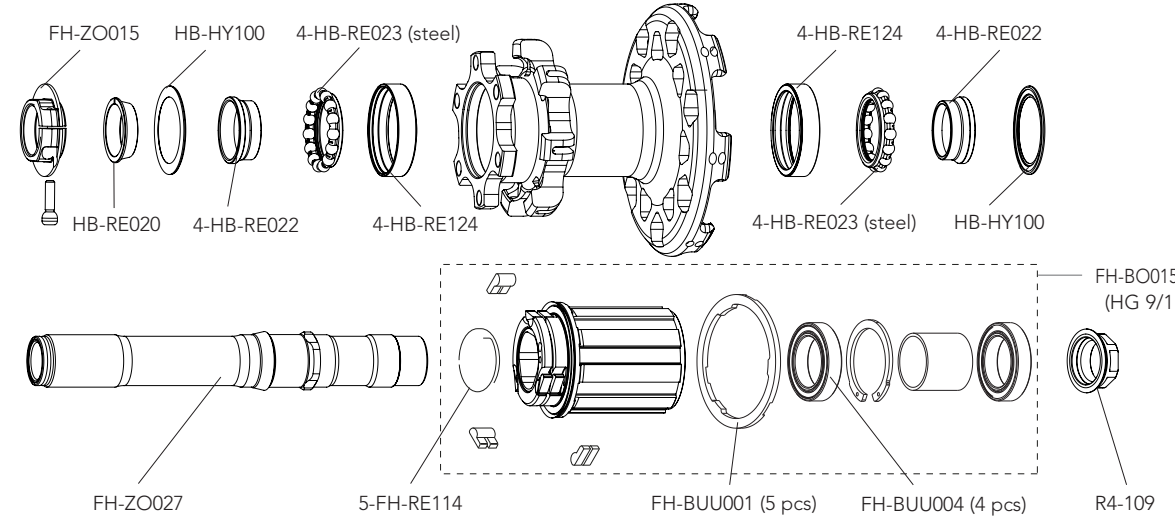


118

119


ZONDA DB - adapters for front & rear axles

FRONT

QR Ø9 mm – 100 mm (KITFCFAQR + KITFCRA12135)

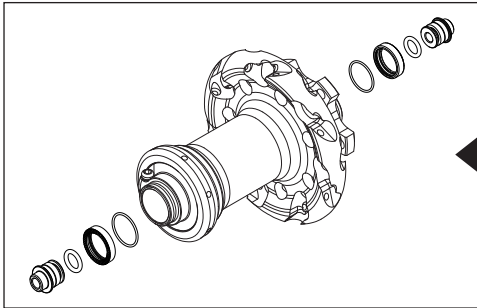


Ø12mm THRU-AXLE - 100mm (KITFCRA12135)

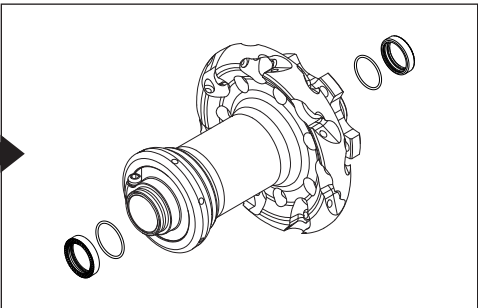


REAR

Ø12mm THRU-AXLE- 135 mm

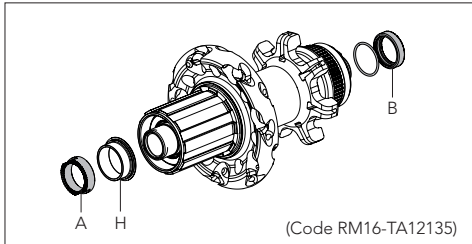


Ø12mm THRU-AXLE - 142 mm

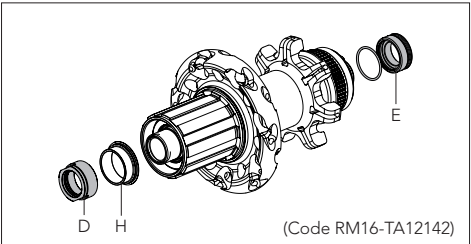

A	5,6 mm
B	4,25 mm
D	9,1 mm
E	7,75 mm
G	15,5 mm
H*	7,4 mm
H*: code R4-109 (NOT INCLUDED)	

QR Ø 10 mm - 135 mm

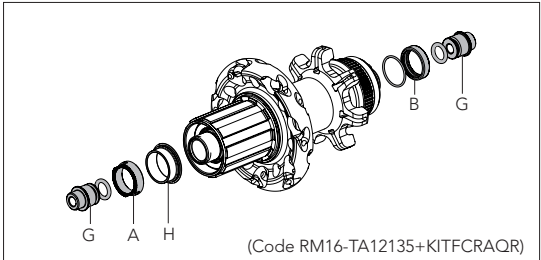

A + B =	code RM16-TA12135
D + E =	code RM16-TA12142
G + G =	code KITFCRAQR

QUICK-RELEASES

LOW-PROFILE WHEELS	
NEUTRON™ ULTRA™	QR12-BUUBFR
MEDIUM-PROFILE WHEELS	
KHAMSIN™ ASYMMETRIC™	QR8-40BFR
SCIROCCO™	QR12-ZOBFR
ZONDA™	QR12-ZOBFR
ZONDA™ DB	QR17-ZODBFK (front + kit HH=>QR) - QR17-ZOBRK (rear + kit HH=>QR)
EURUS™	QR13-80FR
SHAMAL™ ULTRA™	QR13-80FR
SHAMAL™ MILLE	QR13-80FR
ALU/CARBON HIGH-PROFILE WHEELS	
BULLET™	QR12-ZOBFR
BULLET™ ULTRA™	QR12-BUUBFR
CARBON HIGH-PROFILE WHEELS	
BORA™ ONE	QR12-BUUBFR
BORA™ ONE 35	QR12-BUUBFR
BORA™ ULTRA™ 35	QR12-BUUBFR
BORA™ ULTRA™ 50	QR12-BUUBFR
BORA™ ULTRA™ 80	QR12-BUUBFR
BORA™ ULTRA™ TT	QR12-BUUBFR

QR12-BUUBFR



QR8-40BFR



QR12-ZOBFR

QR17-ZODBFK (front + kit HH=>QR)
QR17-ZOBRK (rear + kit HH=>QR)




QR13-80FR



VALVE EXTENSIONS


Your BULLET/BULLET ULTRA/BORA ULTRA wheels are supplied with valve extensions that correspond to depth of the rim as follows:

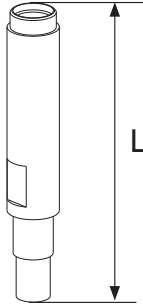PROFILE RIM	MALE VALVE ADAPTER (SUPPLIED)		
BULLET/BULLET ULTRA H50	UT-WH130M	L = 35 mm	
BULLET/BULLET ULTRA H80	UT-WH140M	L = 65 mm	
BULLET/BULLET ULTRA H105	UT-WH150M	L = 90 mm	
BORA ULTRA H50	UT-HU150	L = 40 mm	
BORA ULTRA H80	UT-WH160M	L = 74 mm	

PROFILE RIM	FEMALE VALVE ADAPTER (OPTION)		
BULLET/BULLET ULTRA H50	UT-WH130F	L = 37 mm	
BULLET/BULLET ULTRA H80	UT-WH140F	L = 67 mm	
BULLET/BULLET ULTRA H105	UT-WH150F	L = 92 mm	
BORA ULTRA H80	UT-WH160F	L = 80 mm	

USE AIR CHAMBERS (INNER TUBES) WITH A LONG VALVE (AT LEAST 35 mm).

FRAME PREPARATION / FRONT DERAILLEUR

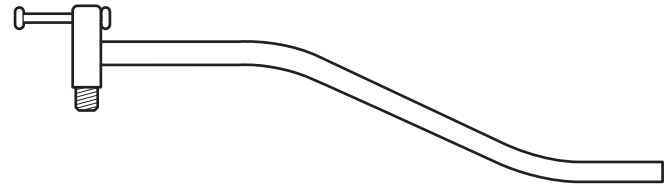


UT-VS030
Riscontro allineamento occhiello attacco cambio
Rear derailleur hanger alignment tool
Calibre de contrôle attache de dérailleur arrière
Richtwerkzeug zur Kontrolle von Ausfallende mit Schaltauge



UT-FD020
Dima per corretto posizionamento deragliatore (2 pz - per Z50 e Z52)
Front derailleur alignment tool (2 pcs - for Z50 and Z52)
Calibre de contrôle montage du dérailleur avant (2 pcs - pour Z50 et Z52)
Richtwerkzeug für Umwerfer-Montage (2 St. - für Z50 und Z52)

BOTTOM BRACKET / CRANKSET


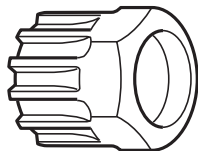


UT-BB080 (1 pz.) - 10-UT-BB080 (10 pz.):

Chiave per montaggio movimenti centrali CART e ghiera di chiusura pacchi pignoni
Cartridge bottom bracket and sprocket cassette- lock ring remover
Clé pour montage jeux de pédalier CART et roues-libres à cassette
Schlüssel zur Montage von Patronen-Tretlager und Schließring für Freilaufzahnkranz


UT-BB100

Utensile per movimenti a cartuccia Daytona/Centaur™, Veloce™ e Mirage™
Tool for Daytona/Centaur™, Veloce™ and Mirage™ cartridge bottom bracket
Clé pour jeux de pédalier à cartouche Daytona/Centaur™, Veloce™ et Mirage™
Montageschlüssel für Daytona/Centaur™, Veloce™ und Mirage™ Patronen-Tretlager

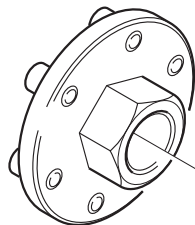

UT-FC090


Inserto per estrattore pedivella sinistra POWER TORQUE™
Insert for left POWER TORQUE™ crank extractor
Insert pour extracteur manivelle gauche POWER TORQUE™
Einsatz für linken POWER TORQUE™ Kurbelabzieher

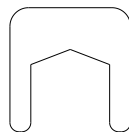

UT-FC095


Protezione per estrazione pedivella sx POWER TORQUE™ (5 pz)
shield f. left POWER TORQUE™ crank extractor insert (5 pcs)
écran insert extracteur manivelle gauche POWER TORQUE™ (5 pcs)
Schutz für Einsatz für LH POWER TORQUE™ Kurbelabzieher (5 St)

CRANKSET

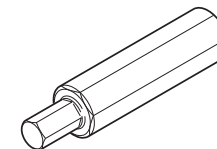

UT-BB110

Utensile per vite fissaggio guarnitura ULTRA-TORQUE™
Tool for ULTRA-TORQUE™ crankset fixing screw
Outil pour vis de fixation pédalier ULTRA-TORQUE™
Werkzeug für ULTRA-TORQUE™ Kettenradgarnitur Befestigungsschraube


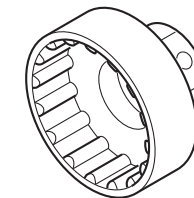


UT-BB130


Chiave per calotte esterne guarnitura
Tool for crankset overboard cups
Outil pour cuvettes pédalier
Werkzeug für Kettenradgarnitur Lagerschalen

UT-BB240


Utensile per piantaggio calotte integrate OS-Fit™
Tool for OS-Fit™ crankset overboard cups
Outil pour cuvettes pédalier OS-Fit™
Werkzeug für OS-Fit™ Kettenradgarnitur Lagerschalen

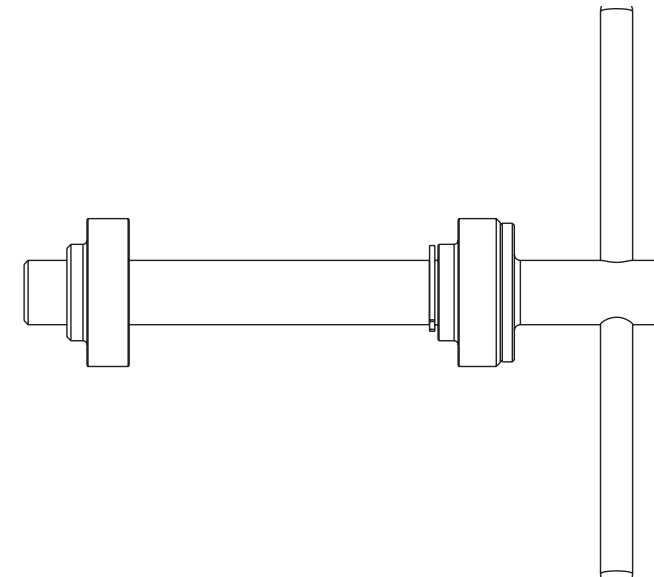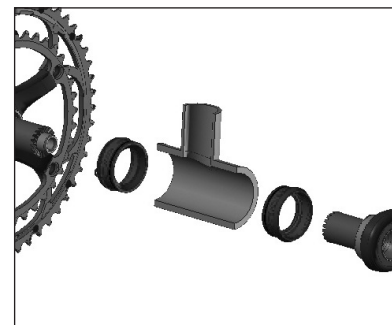



DISC BRAKES

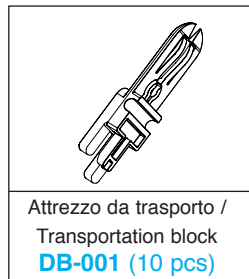


RIM BRAKES

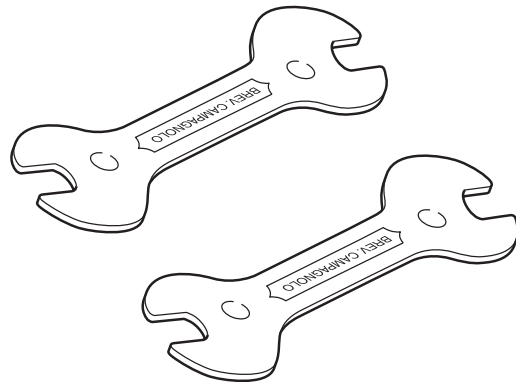


UT-HU050
Tiraraggi
Spoke wrench
Clé à rayons
Speichenschlüssel

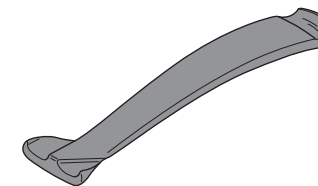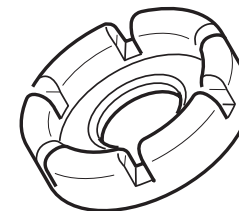

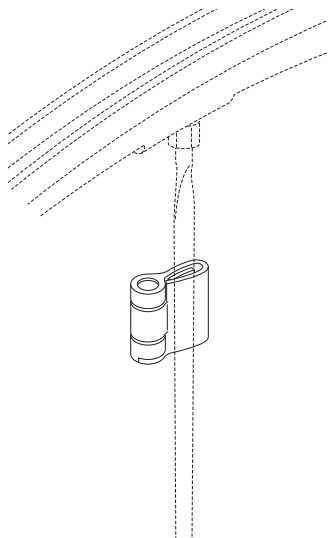

UT-WH080
Magnete velocità per raggi EURUS™ / SHAMAL™ ULTRA™
SPD magnet for EURUS™ / SHAMAL™ ULTRA™ spokes
Aimant vitesse pour rayons EURUS™ / SHAMAL™ ULTRA™

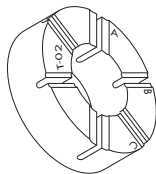

UT-WH010
Anello anti-rotazione raggi
Spoke antirotation ring
Bague antirotation des rayons




UT-WH020
Inserto nipplo attira-magnete per EURUS™/SHAMAL™ ULTRA™
Magnet-attracting nipple insert for EURUS™/SHAMAL™ ULTRA™
Insert d'écrou pour attirer l'aimant EURUS™/SHAMAL™ ULTRA™

UT-WH035
Inserto nipplo attira-magnete per ZONDA™ 2012
Magnet-attracting nipple insert for ZONDA™ 2012
Insert d'écrou pour attirer l'aimant ZONDA™ 2012

UT-WH160
Inserto nipplo attira-magnete per BULLET/BULLET ULTRA
Magnet-attracting nipple insert for BULLET/BULLET ULTRA
Insert d'écrou pour attirer l'aimant BULLET/BULLET ULTRA

UT-WH090
Chiave tiraraggi BULLET/BULLET ULTRA/BORA ULTRA 80
Spoke wrench BULLET/BULLET ULTRA/BORA ULTRA 80
Clé à rayons BULLET/BULLET ULTRA/BORA ULTRA 80

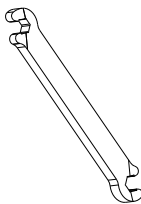


UT-WH070
Chiave tiraraggi
Spoke wrench
Clé à rayons

UT-WH270
Chiave tiraraggi per SHAMAL MILLE MY2017 (Service Center Only)
Spoke wrench for SHAMAL MILLE MY2017 (Service Center Only)
Clé à rayons pour SHAMAL MILLE MY2017 (Service Center Only)




UT-WH050
Magnete guida-nipplo
Nipple guide magnet
Aimant de guidage écrou




5-WH-SH002
Bussola riduzione sede valvola 2WF (5 pz)
Valve hole bushing for 2WF (5 pcs)
Bague pour valve 2WF (5 pcs)

WH-BUU002
Bussola riduzione sede valvola BULLET/BULLET ULTRA/BORA ULTRA 80 (5 pz)
Valve hole bushing for BULLET/BULLET ULTRA/BORA ULTRA 80 (5 pcs)
Bague pour valve BULLET/BULLET ULTRA/BORA ULTRA 80 (5 pcs)

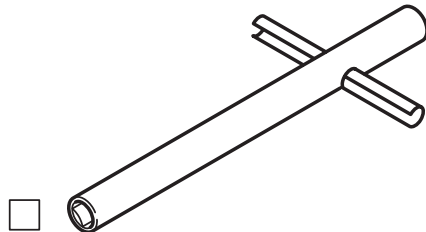

UT-HU060
Chiave per raggi ruote Bora™ (fino a gamma '02)
Bora™ wheel truing tool (till '02 range)
Clé à rayons pour Bor™a (jusqu'à la gamme '02)
Vierkant-Nippelspanner für Bora™ (bis '02 Produktlinie)

SPROCKETS

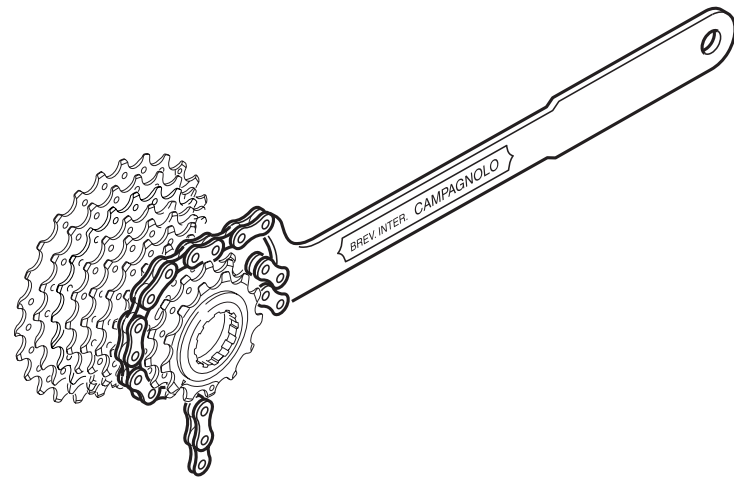


UT-CS060

Chiave con catena 10s per smontaggio pignoni 11s, 10s, 9s e 8s
Spanner with 10s chain for 11, 10, 9 and 8s sprockets
Fouet à chaîne 10s pour pignons 11s, 10s, 9s et 8s
Zahnkranzabnehmer mit Rennkette 10s für 11-, 10-, 9- und 8s Ritzeln

CHAIN

UT-CN300

Utensile per *Ultra-Link™* (solo catene 11s)
Tool for *Ultra-Link™* (11s chains only)
Outil pour *Ultra-Link™* (seulement chaînes 11s)
Werkzeug für *Ultra-Link™* (nur 11s Kette)

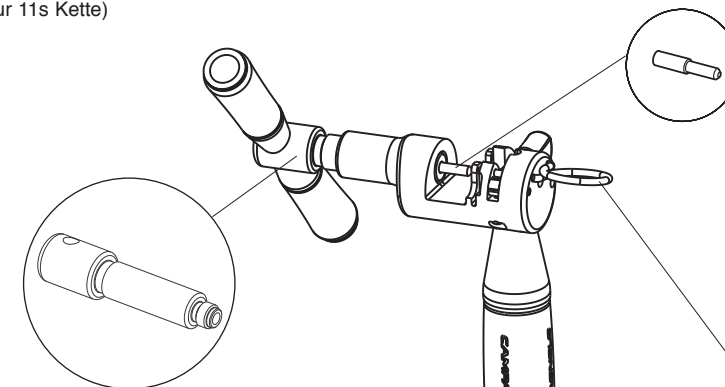

UT-CN303


Perno centrale per UT-CN300 e UT-CN200
Central axle for UT-CN300 and UT-CN200
Axe central pour UT-CN300 et UT-CN200
Achse für UT-CN300 und UT-CN200

UT-CN301

Spintore per UT-CN300 e UT-CN200
Pusher for UT-CN300 and UT-CN200
Poinçon pour UT-CN300 et UT-CN200
Schieber für UT-CN300 und UT-CN200

UT-CN302

Dispositivo di blocco per UT-CN300
Clamping device for UT-CN300
Dispositif de blocage pour UT-CN300
Sperrvorrichtung für UT-CN300

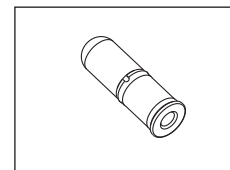


5-CN-RE500

Ultra-Link™ per catene 11s (5 pz)
Ultra-Link™ for 11s chains only (5 pcs)
Ultra-Link™ pour chaînes 11s (5 pcs)
Ultra-Link™ für 11s Kette (5 St.)

CAMPY™ UT-CN200


Utensile per **HD-Link™** (catene C10™ e C10™ Ultra Narrow™)
 Tool for **HD-Link™** (C10™ and C10™ Ultra Narrow™ chains)
 Outil pour **HD-Link™** (chaînes C10™ et C10™ Ultra Narrow™)
 Werkzeug für **HD-Link™** (C10™ und C10™ Ultra Narrow™ Kette)

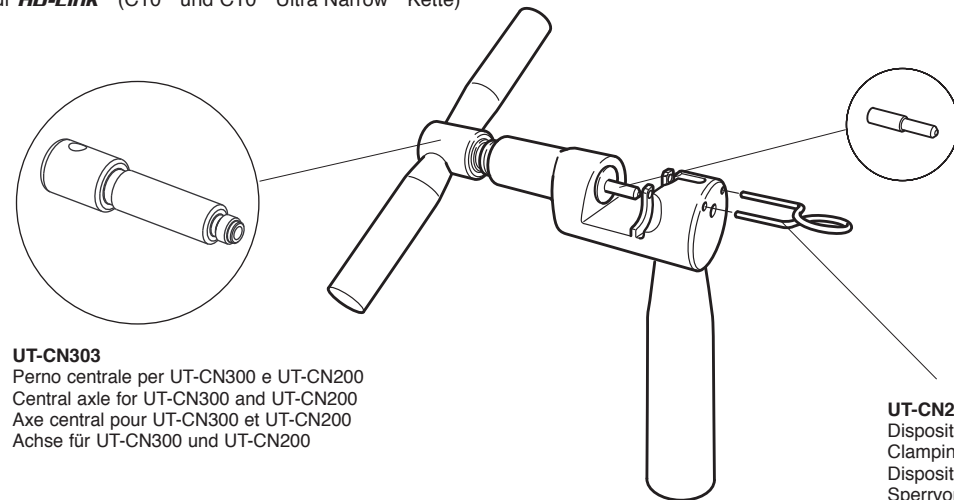

UT-CN303
 Perno centrale per UT-CN300 e UT-CN200
 Central axle for UT-CN300 and UT-CN200
 Axe central pour UT-CN300 et UT-CN200
 Achse für UT-CN300 und UT-CN200


UT-CN301
 Spintore per UT-CN300 e UT-CN200
 Pusher for UT-CN300 and UT-CN200
 Poinçon pour UT-CN300 et UT-CN200
 Schieber für UT-CN300 und UT-CN200

UT-CN202
 Dispositivo di blocco per UT-CN200
 Clamping device for UT-CN200
 Dispositif de blocage pour UT-CN200
 Sperrvorrichtung für UT-CN200

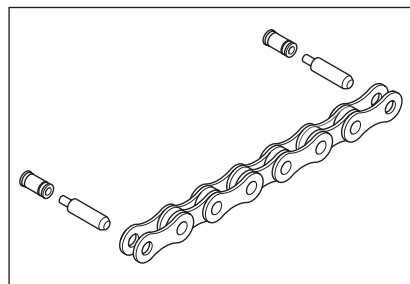


CN-RE400

HD-Link™ Ultra Narrow™ (5,9 mm) per catene C10™ Ultra Narrow™
HD-Link™ Ultra Narrow™ (5,9 mm) for C10™ Ultra Narrow™ chains
HD-Link™ Ultra Narrow™ (5,9 mm) pour chaînes C10™ Ultra Narrow™ chains
HD-Link™ Ultra Narrow™ (5,9 mm) für C10™ Ultra Narrow™ Kette

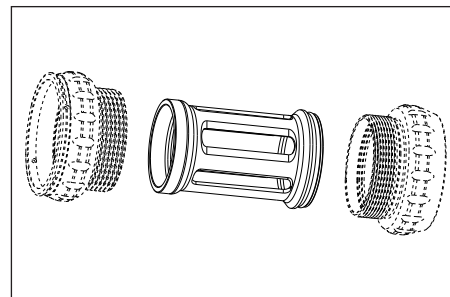


EPS-001
 Cilindro guida-cavi
 BB cable guide

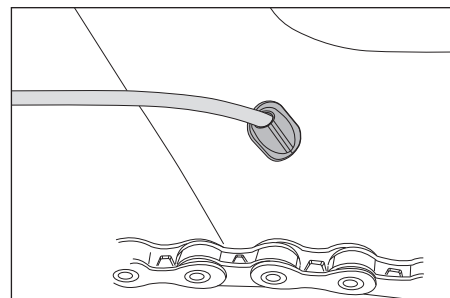


CG-CS001EPS
 Gommino passacavi (20 pz.)
 Grommet for cables (20 pcs.)

CG-CS002EPS
 Gommino passacavi per Power Unit (10 pz.)
 Grommet for Power Unit cables (20 pcs.)

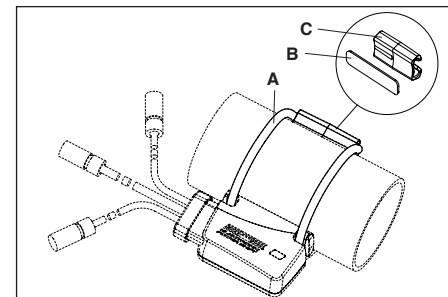


EPS-002
 Accessori montaggio sistema di interfaccia (A+B+C)
 Kit for interface assembly (A+B+C)

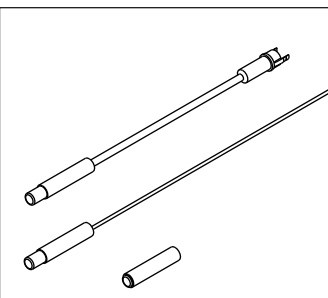


UT-CG010EPS
 Kit magneti passacavi SR-RE
 Cable run magnet kit SR-RE

UT-CG010ATEPS
 Kit magneti passacavi AT
 Cable run magnet kit AT

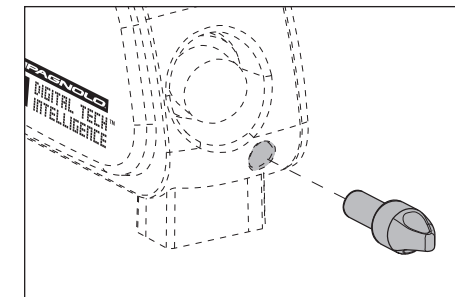


EPS-003
 Magnete spegnimento sistema di potenza (5 pz.)
 Switch-off magnet (5 pcs.)

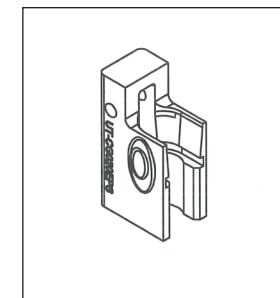

UT-CG020EPS
 Attrezzo apri-connettori SR-RE
 Connector disconnection tool SR-RE




UT-CG120ATEPS
 Attrezzo apri-connettori AT
 Connector disconnection tool AT

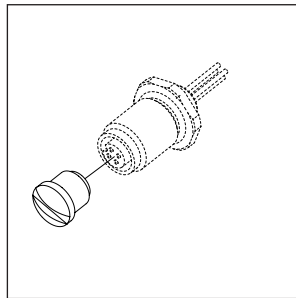


EPS-004
Tappo connettore carica batterie
PU EPS V2 (5 pz)

PU EPS V2 connector cup (inter-
nal mount) (5 pcs)

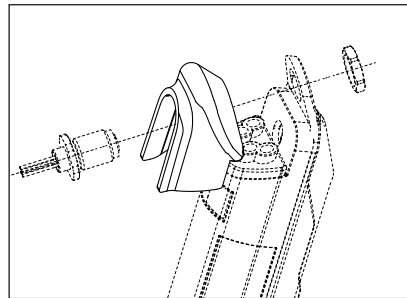


EPS-005
Cappuccio per installazione est. PU EPS V2
(5pz)


PU EPS V2 external mount connctor cap
(5pcs)

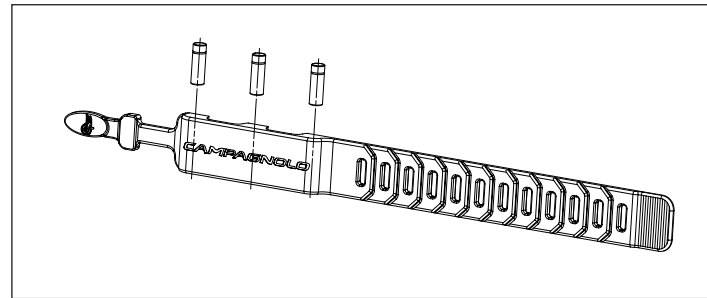


EPS-006
Fascia spegnimento magnetica
Magnetic power block strap

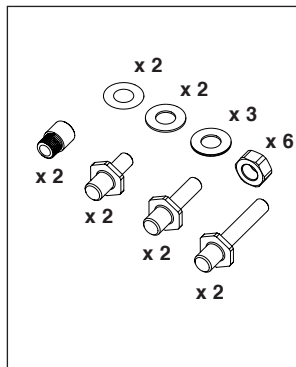


EPS-107
Kit viti Power Unit EPS V2
EPS V2 Power Unit screws kit

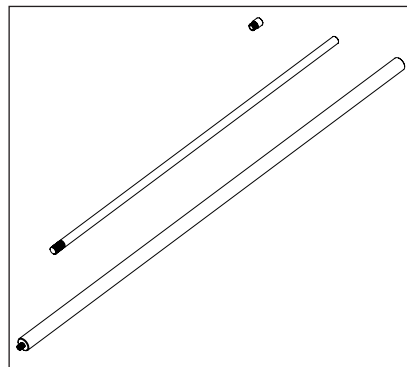

UT-PU010
Kit installazione interna PU EPS V2
EPS V2 PU internal installation tool

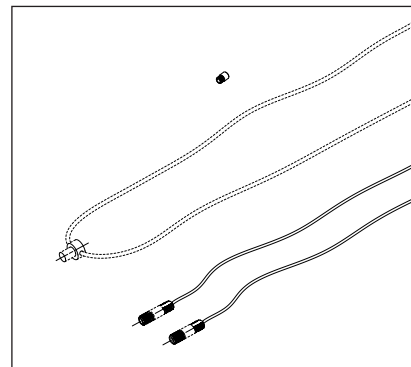

UT-PU030
Kit installazione tubo obliquo
PU EPS V2
EPS V2 PU down-tube
installation tool

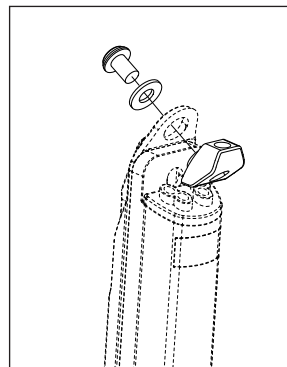

UT-PU020
Adattatore per installazione
rovesciata PU EPS V2
EPS V2 PU internal upside-
down installation adapter

